

## Errata

**Title & Document Type:** N1645A Service Advisor SONET/SDH Line Interface Test Module User's Manual

**Manual Part Number:** N1645-90000

**Revision Date:** May 2000

### About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

### HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

### Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

[www.agilent.com](http://www.agilent.com)


Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.



**Agilent Technologies**

**Agilent Technologies N1645A  
Service Advisor SONET/SDH  
Line Interface Test Module**

**User's Manual**

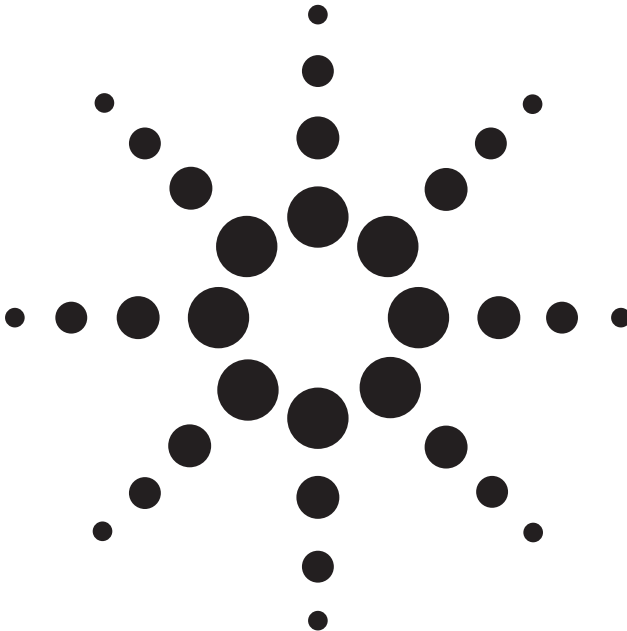

**Agilent Technologies**

Copyright © 2000  
Agilent Technologies, Inc.

All rights reserved.  
Reproduction, adaptation, or  
translation without prior  
written permission is  
prohibited, except as allowed  
under the copyright laws.

Publication part number:  
N1645-90000

Version 2.0  
May, 2000

Printed in USA.

## Warranty

The information contained in  
this document is subject to  
change without notice.

**Agilent Technologies  
makes no warranty of any  
kind with regard to this  
material, including, but  
not limited to, the implied  
warranties of  
merchantability and  
fitness for a particular  
purpose.**

Agilent Technologies shall  
not be liable for errors  
contained herein or for  
incidental or consequential  
damage in connection with  
the furnishing, performance,  
or use of this material.

## Warning!

Changes or modifications to  
this unit not expressly  
approved by the party  
responsible for compliance  
could void the user's authority  
to operate the equipment.

## Trademark Credits

Windows® and MS-DOS®  
are U.S. registered  
trademarks of Microsoft  
Corporation.  
All other trademarks are the  
property of their respective  
owners.

## ISO Certification

Agilent Technologies' Service  
Test Division (STD) is an  
International Standards  
Organization (ISO) 9001  
registered company,  
recognizing that the quality  
system operated by STD  
meets the requirements  
established in accordance  
with ISO 9001. STD  
manufactures test equipment  
in strict compliance with this  
quality system.

STD received ISO 9001  
certification (no. 6969) from  
National Quality Assurance  
(NQA) on August 30, 1995.



Certificate No. 6969

---

*Agilent Technologies  
Service Test Division  
2 Robbins Road  
Westford, Massachusetts 01886 USA*

## Safety Notices

Observe the following safety precautions whenever you operate the SONET/SDH Test module (N1645A). Failure to comply with these and other specific warnings and cautions in this manual is a violation of Agilent Technologies' safety standards of design, manufacturing, and intended use of the test module.

Agilent Technologies assumes no liability for the operator's failure to comply with these precautions.

## Product Damage

**Danger!** Do not use this product if it shows visible damage, fails to perform, has been stored in unfavorable conditions, or has been subject to severe transportation stresses. Make the product inoperative and secure it against any unintended operation. Contact your Agilent Technologies representative for assistance.

## Explosion Hazard

**Danger!** Do not operate the instrument in the presence of flammable gases or fumes.

## Electric Shock Hazard

**Danger!** To avoid the possibility of severe injury or death, observe the following precautions when using a tester with a SONET/SDH Test module installed.

Do not remove the tester's system covers, and do not perform electrical tests if there are signs of shipping damage to the outer enclosure.

When connecting test cables to a line, do not touch the cable's metal contact points, or allow the cable leads to touch each other.

Use only the supplied power cords and connect only to a properly grounded wall outlet. Do not use extension cords that do not have a protective ground conductor.

## Symbols

The following are general definitions of safety symbols used on equipment and in manuals.

Dangerous voltage.



Protective ground.



Frame or chassis ground.



Alternating current.



Direct current.



Alternating or direct current.



Caution! Read the manual.



# Declaration of Conformity

according to ISO/IEC Guide 22 and EN 45014

**Manufacturer's Name:** Agilent Technologies, Inc.

**Manufacturer's Address:** Service Test Division – Massachusetts  
2 Robbins Road  
Westford, MA 01886-4113

## Declares that the product

**Product Name:** SONET/SDH Line Interface Test Module

**Model Numbers:** N1645A

**Product Options:** This declaration covers all options of the above product.

## Conforms to the following Product Specifications:

EMC:	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A)	
	EN 50082-1:1992	
	IEC 801-2:1984	8 kV AD
	IEC 801-3:1984	3 V/m
	IEC 801-4:1988	0.5 kV signal lines
		1 kV AC power lines

## Supplementary Information:

The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.

The product was tested in a full configuration.

Denis E. Viel  
Quality Manager

September 14, 1999  
Westford, MA, USA

**European Contact:** Your local Agilent Technologies Sales and Service Office or Agilent Technologies GmbH, Department ZQ/Standards Europe, Herrenberger Strass 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143).

---

## About This Book

### Using the SONET/SDH Line Interface Test Module

Chapter 1 introduces the SONET/SDH Line Interface Test module (N1660A), provides the installation procedure, and a brief description of the test screens and the options available from the toolbar.

### Configuring a SONET/SDH Test

Chapter 2 contains step-by-step instructions for configuring and running a SONET or SDH test.

### Viewing Test Results

Chapter 3 describes the results screens that provide information about errors and alarms that may have occurred during a test.

### SONET/SDH SCPI Commands

Chapter 4 contains reference information for using SCPI commands to operate the SONET/SDH Line Interface Test module remotely.

### Specifications

Chapter 5 lists technical specifications of the SONET/SDH Line Interface Test module, along with information about how to order accessories.

---

# About This Version

## Applicability

This version of the *Service Advisor SONET/SDH Line Interface Module User's Manual* applies to the N1610A Service Advisor Test Tablet and N1645A SONET/SDH Line Interface module running operating software version **1.3** (or later); and references the N1640 ATM Cell Processor module running operating software version **1.3** (or later).

Be sure to refer to any user's manual supplements or release notes that came with the unit, or call 1-800-452-4844.

---

### SONET/SDH Line Interface Module User's Manual printing history

---

Version	Release date	Notes
1.0	November, 1999	This is the first printing of this manual.
2.0	May, 2000	Minor GUI changes.

---

## Check the Software Version

You can check the software version number by pressing the **Help** button, or by checking the **Tablet Control** tab of the Service Advisor Manager (see the *Service Advisor Portable Test Tablet User's Manual*).

# Contents

About This Book v

About This Version vi

## **1 Using the SONET/SDH Line Interface Module 1-1**

The SONET/SDH Line Interface Module (N1645A) at a Glance 1-2

Connecting a Service Advisor to a SONET Circuit 1-4

SONET/SDH Cable Options 1-7

The Main SONET/SDH Setup Screens 1-10

Using the SONET/SDH Toolbar 1-15

Performing an Auto Setup 1-17

Performing a Trouble Scan 1-18

Saving a SONET Report 1-20

Printing Results 1-22

## **2 Configuring a SONET/SDH Test 2-1**

SONET and SDH Tests 2-2

Configuring General SONET/SDH Settings 2-3

Configuring SONET/SDH Overhead Bytes 2-5

Running a SONET/SDH Test 2-16

## **3 Viewing Test Results 3-1**

Viewing Results 3-2

Results Summary Screen 3-6

Alarm Results 3-9

Error Summary 3-10

Pointer Adjustment Results 3-15

APS Measurements 3-16

Section [RS] Overhead Byte Results 3-19

Line [MS] Overhead Results 3-21

Path Overhead Results 3-22

Viewing BERT Results 3-24

## **4 SONET/SDH SCPI Commands 4-1**

SCPI Command Syntax 4-2

Programming a SONET/SDH Test 4-6

SCPI Return Codes 4-8

### **Basic Test Commands 4-9**

:SElect:TEST <test sequence> 4-10

:INITiate 4-10

:ABORT 4-10

### **General Configuration Commands 4-11**

:SOURce:LASer <ON | OFF> 4-12

:SOURce:FRAME:TYPe <SONet | SDH> 4-12

:SOURce:FRAME:SCRamble <ON | OFF> 4-12

:SOURce:TRANsmit:TIMing <INTernal | RECovered> 4-13

:SOURce:TRANsmit:MAP <TERMinal | PTHRu> 4-13

:SOURce:SPE:TYPe <ATM | BERT> 4-14

:SOURce:SPE:DATa <data type> 4-14

:SOURce:SPE:PATtern <data pattern> 4-15

:SOURce:SPE:PINVert <ON|OFF> 4-15

### **Action Injection Commands 4-16**

:SOURce:ACTion:TYPe <action type> 4-17

:SOURce:ACTion:STATe <OFF | ON> 4-17

### **Error Injection Commands 4-18**

:SOURce:ERRor:TYPe <error type> 4-19

:SOURce:ERRor:RATE <error rate> 4-21

### **Alarm Commands 4-22**

:SOURce:ALARm:LOS <ON | OFF> 4-23

:SOURce:ALARm:LOF <ON | OFF> 4-23

:SOURce:ALARm:OOF <ON | OFF> 4-23

:SOURce:ALARm:AISL <ON | OFF> 4-23

:SOURce:ALARm:RDIL <ON | OFF> 4-23

:SOURce:ALARm:AISP <ON | OFF> 4-24

:SOURce:ALARm:RDIP <ON | OFF> 4-24

:SOURce:ALARm:LOPP <ON | OFF> 4-24

## Pointer Control Commands 4-25

:SOURCE:POINter:ADJust:TYPe <pointer adjustment> 4-26

:SOURCE:POINter:NDFLag <NDF value> 4-26

:SOURCE:POINter:VALue <pointer data value> 4-27

## Section[RS], Line[MS], and Path Overhead Commands 4-28

:SOURCE:SECTIon:TXMessage <transmit trace message> 4-30

:SOURCE:SECTIon:RXMessage <receive trace message> 4-30

:SOURCE:SECTIon:TXBYte <value> 4-30

:SOURCE:SECTIon:BENable <ON | OFF> 4-31

:SOURCE:SECTIon:SENable <ON | OFF> 4-31

:SOURCE:SECTIon:D1 <value> 4-32

:SOURCE:SECTIon:D2 <value> 4-32

:SOURCE:SECTIon:D3 <value> 4-32

:SOURCE:SECTIon:Z0-2 <value> 4-32

:SOURCE:SECTIon:Z0-3 <value> 4-33

:SOURCE:SECTIon:E1 <value> 4-33

:SOURCE:SECTIon:F1 <value> 4-33

:SOURCE:LINE:S1 <sync status> 4-33

:SOURCE:LINE:K1 | K2 <APS/alarm information> 4-34

:SOURCE:LINE:D4|D5|D6|D7|D8|D9|D10|D11|D12 <DCC> 4-34

:SOURCE:LINE:Z1-2 <value> 4-34

:SOURCE:LINE:Z1-3 <value> 4-34

:SOURCE:LINE:Z2-1 <value> 4-35

:SOURCE:LINE:Z2-2 <value> 4-35

:SOURCE:LINE:M1 <value> 4-35

:SOURCE:LINE:E2 <value> 4-35

:SOURCE:PATH:TXMessage <transmit trace message> 4-36

:SOURCE:PATH:RXMessage <receive trace message> 4-36

:SOURCE:PATH:TXBYte <value> 4-36

:SOURCE:PATH:BENable <ON | OFF> 4-37

:SOURCE:PATH:SENable <ON | OFF> 4-37

:SOURCE:PATH:C2 <payload label> 4-38

:SOURCE:PATH:G1 <status> 4-39

:SOURCE:PATH:F2 <user channel> 4-39

:SOURCE:PATH:H4 <phase indicator> 4-39

:SOURCE:PATH:Z3 | :Z4 | :Z5 <future growth> 4-39

## **Entering User-defined BERT Patterns 4-40**

:SOURce:PATtern:SON:BERT1|BERT2|BERT3  
|BERT4|BERT5 <pattern> 4-41

## **Using Query Commands to Retrieve Results 4-42**

General Query Commands 4-43

:FETCh:TEST:STATe ? 4-43

:FETCh:PLAYer:FREQuency ? 4-43

SONET/SDH Alarm Query Commands 4-44

SONET/SDH Error Query Commands 4-49

Pointer Adjustment Query Commands 4-56

Querying Overhead Results 4-57

User-defined Payload Pattern Query Commands 4-64

Querying the TroubleScan Status 4-64

## **5 Specifications 5-1**

SONET/SDH Line Interface Module Specifications 5-2

Ordering Information 5-9

## **Warranty & Services**

## **Glossary**

## **Index**


The SONET/SDH Line Interface Module (N1645A) at a Glance	1-2
Connecting a Service Advisor to a SONET Circuit	1-4
SONET/SDH Cable Options	1-7
The Main SONET/SDH Setup Screens	1-10
Main SONET Setup Screen	1-10
Main SDH Setup Screen	1-11
Major Screen Components	1-12
GUI Navigation Basics	1-13
Using the Taskbar	1-14
Using the SONET/SDH Toolbar	1-15
Performing an Auto Setup	1-17
Performing a Trouble Scan	1-18
Saving a SONET Report	1-20
Printing Results	1-22

---

## Using the SONET/SDH Line Interface Module

# The SONET/SDH Line Interface Module (N1645A) at a Glance

The SONET/SDH module plugs into the Service Advisor Tablet (N1610A), or the Service Advisor Undercradle (N1700A). The module provides the capabilities to test SONET in broadband networks. The following illustration shows a SONET/SDH module with ST connectors.

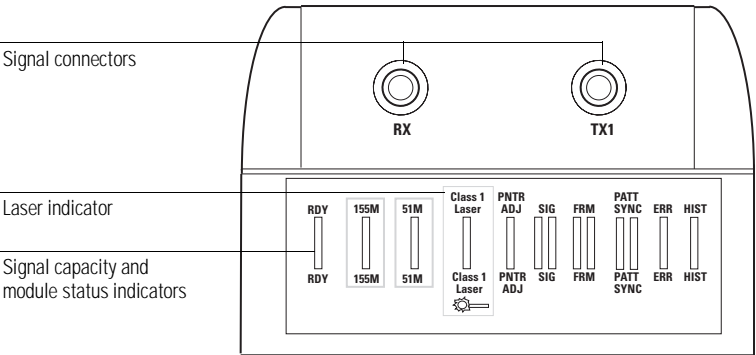

**The SONET/SDH Line Interface Module (N1645A) at a Glance**

**Module Status Indicators**

The status LEDs on the front of the module provide a visual indicator of when the module is ready for testing, and the different conditions that occur, such as signal detection and loss of signal, during a test.

The table below describes the status indicators on the SONET/SDH plug-in module.

Plug-in Module Status Indicators	
Indicator	Description
RDY	Green indicates the SONET/SDH module is ready for testing.
155M	Green indicates the line rate is 155 Mbps.
51M	Green indicates the line rate is 51 Mbps.
Class 1 Laser	Green indicates the optical transmitter is ON.
PNTR ADJ	Green indicates the pointer value has changed.
SIG	Green indicates the tester has detected a signal. Red indicates there is a loss of signal (LOS).
FRM	Green indicates the tester has detected framing. Red indicates there is a loss of framing (LOF).
PATT SYNC	Green indicates the tester has detected a SONET clear channel BERT. Red indicates there is a loss of pattern (LOP). Note: When you are using the ATM module with SONET as the transport mechanism, this indicator is off.
ERR	Red indicates the tester has detected an alarm or error condition.
HIST	Red indicates an error or alarm condition occurred in the previous test.

---

## Connecting a Service Advisor to a SONET Circuit

To perform SONET/SDH testing, an ATM Cell Processor Test Module (N1640A) and a SONET/SDH Line Interface Test module (N1645A) must be installed in the Service Advisor Tablet (N1610A) or Undercradle (N1700A).

1. Insert a SONET Line Interface Test module and an ATM Cell Processor Test Module into a Service Advisor platform. See the appropriate manual for instructions:
  - *Service Advisor Portable Test Tablet User's Manual* (N1610-90000)
  - *Service Advisor Undercradle User's Manual* (N1700-90000)
2. Install the appropriate optical cables between the SONET/SDH module's TX and RX connections and the circuit you plan to test (see *SONET/SDH Cable Options*, page 1–7).



---

**Caution:** *Read the manual. Use the correct cables to connect the SONET/SDH Line Interface module to the circuit. Using the incorrect cables to complete this procedure could cause damage to the tester or to the operator.*


---

3. Power ON your Service Advisor Tablet or your Internet Advisor (with the Undercradle connected).

## Connecting a Service Advisor to a SONET Circuit

## Starting the SONET/SDH Application on a Service Advisor Tablet (N1610A)

1. When you turn on the Service Advisor Tablet (N1610A), you see the Service Advisor Manager screen. To run the SONET/SDH software, you must enable the SONET/SDH module.

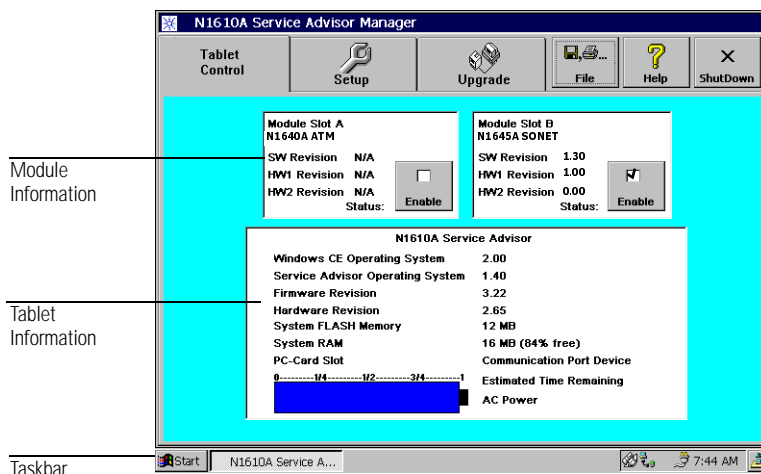


2. Tap the **Tablet Control** tab and then the **Enable** button for the N1645A SONET module. This activates the module and starts the SONET/SDH software. You'll see the main SONET Setup screen appear (see page 1-10).

When you see the SONET Setup screen on your test set, you can begin running SONET, SDH, or ATM tests on the circuits. See *Using the SONET/SDH Toolbar*, page 1-15.


## Connecting a Service Advisor to a SONET Circuit

### Starting the SONET/SDH Application on an Internet Advisor (J2300C/D)

1. When you turn on the Internet Advisor/Undercradle, you see the HP Internet Advisor screen. Start the SACompanion program by selecting the SACompanion option from the Windows® Start menu.  
Or, select the SACompanion shortcut, if you created one.
2. Select the **Launch Remote** button on the SACompanion toolbar.

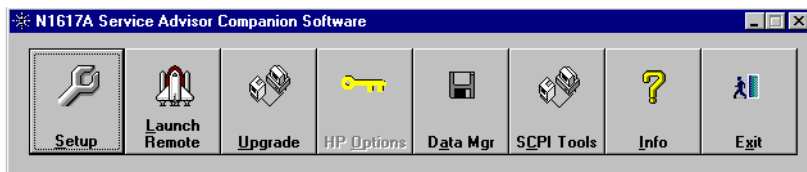

3. Select the **N1645A** module button on the Remote Launch screen. You'll see the main SONET Setup screen appear (see page 1–10).

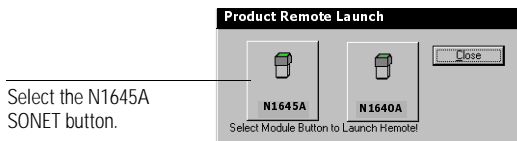

When you see the SONET Setup screen on your test set, you can begin running SONET, SDH, or ATM tests on the circuits. See *Using the SONET/SDH Toolbar*, page 1–15.

**SONET/SDH Cable Options**

---

# SONET/SDH Cable Options

There are different models of the SONET/SDH Line Interface Test module available to accommodate standard lasers, and transceivers and connectors. Use the following table to determine how to connect the tester to a SONET/SDH circuit.

---

## SONET/SDH Test Module Options

---

Option	Connectors
--------	------------

---

100	1310 nm single mode intermediate reach (IR) laser with FC/PC connectors
-----	---

---



101	1310 nm single mode intermediate reach (IR) laser with SC connectors
-----	--

---



102	1310 nm single mode intermediate reach (IR) laser with ST connectors
-----	--

---



103	1310 nm single mode intermediate reach (IR) laser with D4 connectors
-----	--

---



111	1310 nm multi-mode intermediate reach (IR) transceiver with ST connectors
-----	---

---



112	1310 nm multi-mode intermediate reach (IR) transceiver with SC connectors
-----	---

---



## SONET/SDH Cable Options




### Interchangeable Optics Option

Agilent Technologies has designed a new N1645A backpack feature that lets you attach various optical connectors to the TX and RX module connections. The interchangeable optical connectors let you perform SONET and SDH testing without having to purchase individual SONET/SDH modules to accommodate the different types of cables used to connect to the various circuits.



**SONET/SDH Cable Options**

The following table lists the three optional adapters you can attach to the module connectors when you purchase the SONET/SDH module with Option 300.

SONET/SDH Optical Adapters		
Option	Connectors	
301	2xFC/PC optical adapters	
302	2xST optical adapters	
304	2xSC optical adapters	


## The Main SONET/SDH Setup Screens

## The Main SONET/SDH Setup Screens

When you select the SONET (SDH) module in the Service Advisor Manager program, the following SONET Setup screen appears.

### Main SONET Setup Screen

The major components of the SONET Setup screen are shown here.

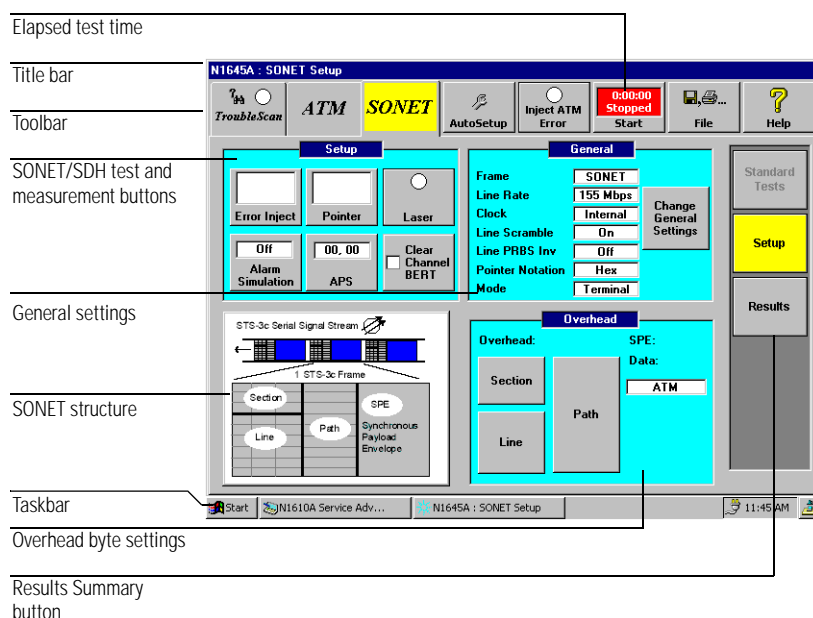


**Note:** To transmit an optical signal, be sure the indicator on the **Laser** button in the Setup section is green. If it is not green, tap the Laser button to turn on this feature.

For a description of the screen components, see *Major Screen Components*, page 1-12.

## The Main SONET/SDH Setup Screens


### Main SDH Setup Screen

To access the SDH main screen, tap the **Change General Settings** button. When the Change General Settings screen appears, tap the **Frame Format** button until SDH appears in the display. Then tap **OK** to go to the SDH main screen.

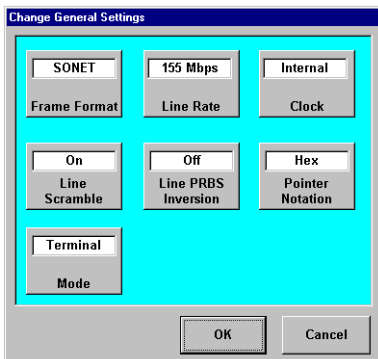

## The Main SONET/SDH Setup Screens

The major components of the SDH Setup screen are shown here.

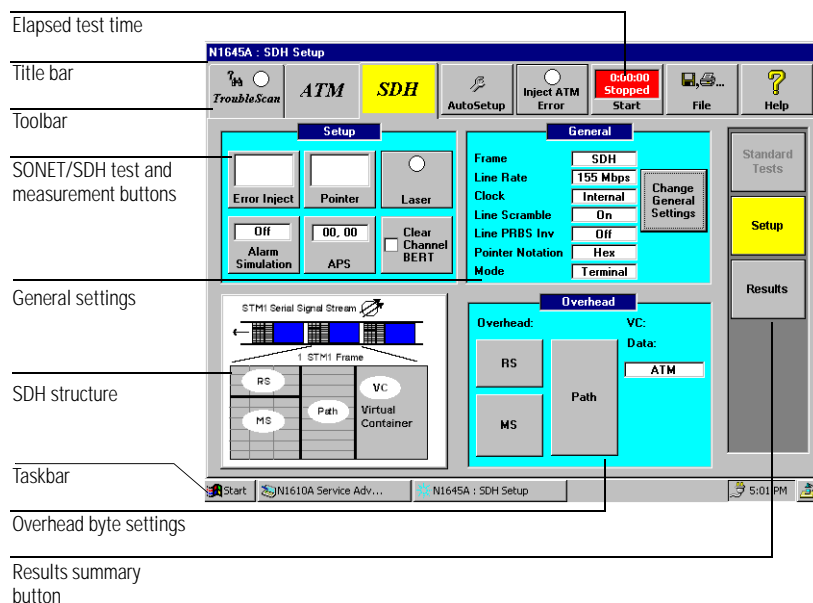

**Note:** To transmit an optical signal, be sure to tap the **Laser** button in the Setup section of this screen.

For a description of the screen components, see *Major Screen Components*, page 1-12.

## Major Screen Components

**Elapsed Test Time:** This field shows the length of time the current test has been running (hours:minutes:seconds). Tapping the **Start** button to start a new test or restart a stopped test, resets elapsed test time to 0.

**Title Bar:** Displays the title of the current screen.

**Toolbar:** Contains options and controls for executing various tasks and functions.

## The Main SONET/SDH Setup Screens

**Setup section:** Contains the buttons used to access a particular SONET/SDH test or measurement function. Tapping a button opens that test or measurement screen.

**General settings:** Displays the SONET/SDH general settings, and contains the **Change General Settings** button, which lets you change these settings.

**SONET/SDH structure:** Displays the general structure of a SONET/SDH signal.

**Taskbar:** Provides access to the Windows CE® Start menu, and any software running on the Service Advisor (for example, the GUI for the installed plug-in module and the Service Advisor Manager). See *Using the Taskbar*, page 1–14.

**Overhead byte settings:** Contains the Section, Line, and Path buttons, which provide access to the configuration settings for SONET overhead.

**Results summary button:** Displays a summary of the current test results, and provides access to additional test results.

## GUI Navigation Basics

Following is a list of basic steps for navigating the GUI.


- Select options and buttons by simply tapping them on the screen. If you're using a Service Advisor Tablet (N1610A) use your finger or use the stylus (stored in the back of the Tablet module bay) to make a selection. If you're using an Internet Advisor and an Undercradle use the mouse buttons to select an option.
- Select **OK** to perform a particular task. **Cancel** closes the current screen without doing anything.
- When you select an option that requires a numeric value, the GUI displays a keypad popup containing a list of digits and/or options. Select the appropriate buttons to specify a value.

Select **OK** to write the value to the field (the popup box closes automatically). Use the **Clear** button to enter a new value; or, **Cancel** to close the popup box without specifying a value.

- Select the **Exit** button under the **File** toolbar option to quit out of the GUI.

## The Main SONET/SDH Setup Screens

### Using the Taskbar

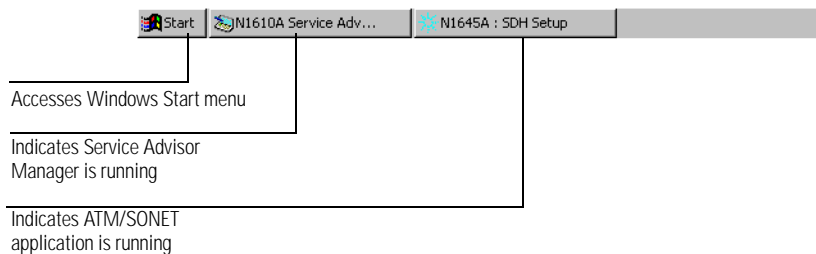


Following is a description of the buttons found on the Taskbar.

- **Start** button lets you start an application stored on your PC.
- **N1610A Service Advisor** button lets you toggle between the application GUI and the Service Advisor screen.
- **N1645A** button opens and minimizes the active SONET/SDH screen. After minimizing the active screen, tap this button again to activate the SONET/SDH application.

## Using the SONET/SDH Toolbar

The SONET toolbar contains several tabs and buttons, each of which represents a particular function. When you click a tab (such as **SONET**), it turns yellow to indicate which test or function is active. Note that the toolbar functions are available on any SONET/SDH screen.



**Troublescan:** Select this option to examine the SONET/SDH line, and display information about any errors and alarms detected. See *Performing a Trouble Scan*, page 1–18 for more information.

**ATM:** Select this option to configure and run ATM tests on the circuit. See the *Service Advisor ATM Cell Processor Test Module User's Manual* (N1640-90000) for more information.


**Note:** *If the Clear Channel BERT option is ON (see Setup section), you cannot perform any ATM tests.*

**SONET/SDH:** Select this option to configure and run SONET or SDH tests on the circuit.

**Auto Setup:** Select this option if you want the tester to configure its transmitter to the receiver's line configuration. See *Performing an Auto Setup*, page 1–17 for more information.

**Inject Error/Adjust Pointer:** Select this option to inject configured SONET/SDH/ATM errors into the connected circuit, or activate pointer adjustments. This button becomes active after you select an error with the **Error Inject** button or a pointer adjustment with the **Pointer** button in the Setup section.

When you select a pointer adjustment or New Data Flag (NDF) using the **Pointer** button in the Setup section, this toolbar button become an **Adjust Pointer** button (see *Making a Pointer Adjustment*, page 2–19).




## Using the SONET/SDH Toolbar

**Start/Stop:** Select this option to start the selected test (this button turns into a Stop button). Tap **Stop** to freeze error counters, alarm indicators, and history counters, and halt a test.

Tapping the **Start** button starts a new test and resets the elapsed test time to zero.



**File:** Provides access to SONET control and file-management functions.



**Save** lets you save test results or an ASCII report text file in the ATM test module or the Flash Memory Card (see *Saving a SONET Report*, page 1–20).

**Print** lets you send the displayed screen or the report file associated with the current screen to the printer connected to the Service Advisor's parallel port (see *Printing Results*, page 1–22). Also lets you enter an operator ID, customer name, circuit ID, and comments, which print on reports.

Reset stops any active tests and resets the SONET (SDH) test module to the previously saved settings.

**Exit** saves your configuration settings, closes the SONET/SDH GUI, and returns control to the Service Advisor Manager (see the *Service Advisor Portable Tablet User's Manual* for information on the Manager).

**Note:** If you power off the Service Advisor without exiting the SONET/SDH application using the Exit option under the File toolbar menu, your configuration settings are not saved; the settings return to the last saved settings.

**Help:** Displays the version of software and firmware running on the module.

---

## Performing an Auto Setup


The Auto Setup function scans the receive signal to determine its characteristics, and then automatically configures the Service Advisor for that type of configuration. This function is useful for configuring the Service Advisor when you're unsure of the network configuration.

From this point forward, the term *Service Advisor* refers to the Service Advisor Tablet (N1610A) and the Internet Advisor (J2300C/D) with an Undercradle (N1700A) connected to it.

**Note:** After running Auto Setup, you can run a Trouble Scan to determine whether there are any problems on the line (see *Performing a Trouble Scan*, page 1–18).

Follow these steps to perform an Auto Setup.

1. Make sure the Service Advisor is powered ON and connected to a SONET/SDH circuit (see *Connecting a Service Advisor to a SONET Circuit*, page 1–4).
2. Tap the **AutoSetup** toolbar option. The Service Advisor scans the receive signal and displays signal characteristics in the Auto Setup screen.

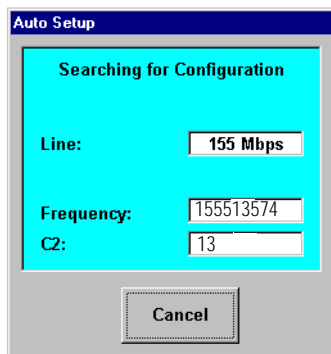

3. Observe the screen for information about the receive signal.


## Performing a Trouble Scan

# Performing a Trouble Scan

The Trouble Scan function examines the SONET line and displays information about any errors and alarms detected.

Follow these steps to run a trouble scan.

1. Tap the **TroubleScan** toolbar button. The Service Advisor scans the line for errors, and displays the results in the Trouble Scan screen.

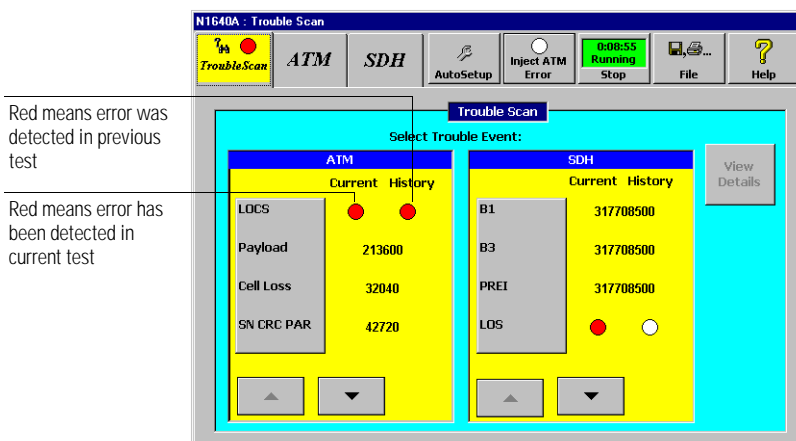

2. Observe the Trouble Scan screen and the LEDs on the installed modules to determine whether there are problems on the line. Use the ▲ or ▼ buttons to move through the list.

**Note:** Red "History" indicators mean that there was a previous occurrence of an error or alarm.

3. To display detailed information about a particular error or alarm, use the ▲ or ▼ buttons to scroll through the list, and tap an alarm or error in the list. Then tap the **View Results** button to see a detailed alarm or error results screen (see *Viewing Test Results*, page 3–1).

For information about the ATM alarms and errors, see the *Service Advisor ATM Cell Processor Test Module User's Manual* (N1640-90000).

**Performing a Trouble Scan****SONET/SDH Alarms**

The following table provides a brief descriptions of the errors and alarms listed on the Trouble Scan screen. The names in square brackets (for example, [MS-AIS]) are the names you see when you have selected the SDH frame format. For more detailed information, see *Alarms Summary*, page 3–7.

SONET/SDH Alarm Descriptions	
Alarm Name	Description
B1 (SDH)	Shows the content of the B1 byte.
B3 (SDH)	Shows the content of the B3 byte.
REI-L [MSREI]	Shows the line remote error indication.
REI-P [PREI]	Shows the path remote error indication for the G1 byte.
LOS	Loss of signal.
OOF	Out-of-frame.
AIS-L [MS-AIS]	Alarm indication signal-line.
RDI-L [MS-RDI]	Remote defect indication-line.
AIS-P [AU-AIS]	Alarm indication signal-path.
RDI-P [AU-RDI]	Remote defect indication-path.
LOP-P	Path loss of pointer (formerly LOPNTR).


## Saving a SONET Report

## Saving a SONET Report

You can save SONET/SDH report as a file, either while a test is in progress or after it has been stopped. You can choose to save the report in the SONET/SDH Line Interface module or the Flash Memory Card.

Follow these steps to save a report.

1. Tap the **File** toolbar button and select the **Save** option.

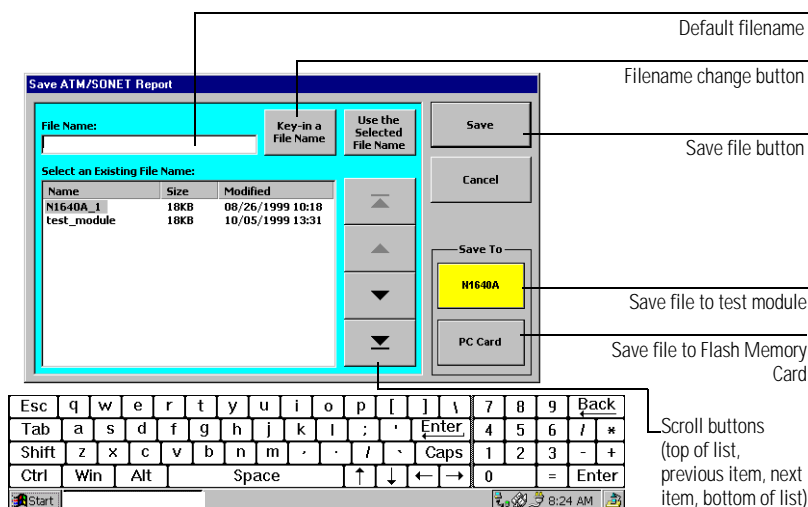

When the Save ATM/SONET Report screen appears, you'll see the default name the test module will automatically assign to the test information currently being generated. (All report files are saved in ASCII text format.)

2. To use an existing filename (to overwrite a file), use the scroll buttons to move through the list.

When the desired name is highlighted, tap the **Use the Selected File Name** button. You'll see the name appear in the File Name field.

3. To change the default name, tap the **Key-in a File Name** button, and enter a new name using the popup keypad.

## Saving a SONET Report

4. Tap the **N1640A** button to indicate that you want to save the file in the ATM module, or tap the **PC Card** button to indicate that you want to save the file in the Flash Memory Card.

**Note:** *If the PC Card button is grayed-out, there is no flash memory card installed on your tester.*

5. Tap the **Save** button to save the file, or tap the **Cancel** button to avoid saving a file and return to the previous screen.
6. When the following screen appears, tap the button for each field and enter the appropriate information. This information appears on the report file.

- The *Operator ID* and *Customer Name* are saved on the Service Advisor. This allows the information to be available to use with other test modules.
  - The *Circuit ID* and *Comments* are saved on the test module because they are module-specific.
7. Tap **OK** to save the test header information and the report.

## Printing Results


---

# Printing Results

You can print the currently displayed screen, or a report that contains the information from the current screen when you have an HP 500/600 Series DeskJet™ printer connected to your Service Advisor.

To connect a printer to the Service Advisor, follow these steps:


1. On top of the Service Advisor, open the panel that protects the serial and parallel ports.

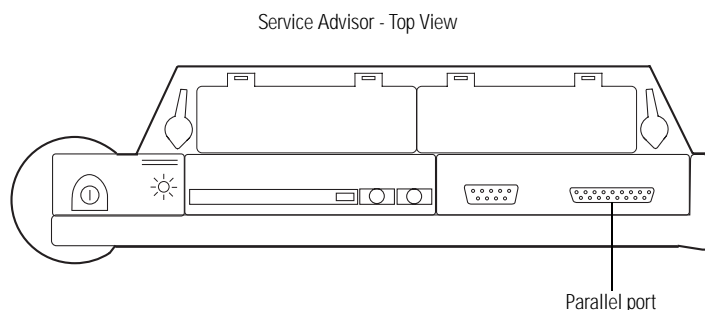

2. Install a DB-25 cable between the parallel port on the Service Advisor and your printer.

## Print Screen Option

1. Display the desired screen.
2. Tap the **File** toolbar button and select the **Print** option.
3. When the Select Print Method popup appears, tap the **Print Screen** button.

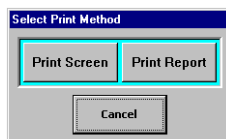

4. The screen, as it appears on your tester, is sent to the connected printer.

## Printing Results

### Print ASCII Report Option


Depending on the configured Setup settings (see *Running a SONET/SDH Test*, page 2-16) you can print a report that contains ATM and SONET information, or just SONET information.

If you have selected the Clear Channel BERT option (see *Using the Clear-Channel BERT Button*, page 2-28), the SONET/SDH information appears in the printed report; otherwise you receive the full report with both the ATM and SONET/SDH information.

See the sample SONET/SDH report starting on page 1-30. This information prints every time you select the Print Report option. The ATM information (starting on page 1-25) prints when the Clear Channel BERT option is *not* selected.

To print a report, complete these steps.

1. Display the desired screen.
2. Tap the **File** toolbar button and select the **Print** option.
3. When the Select Print Method popup appears, tap the **Print Report** button.

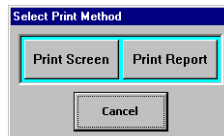

## Printing Results

- When the following screen appears, tap the button for each field and enter the appropriate information. This information appears on the report file.

- The *Operator ID* and *Customer Name* are saved on the Service Advisor. This allows the information to be available to use with other test modules.
  - The *Circuit ID* and *Comments* are saved on the ATM Test module because they are module-specific.
- Tap **OK** to save the information and send the report to the printer.

Printing Results

Sample ATM Report Information

---N1640A/N1645A SUMMARY REPORT    ATM/SONET Full Report    Module Slot:A  
Date:09-08-1999 Time:12:15:14    Elapsed Test Time: 00:02:03  
Test Status: Stopped    File Name: N1640A\_FULLL2.txt

---TEST INFORMATION-----  
Customer Name: XYZ COMPANY                      Circuit ID: C1256GH875  
Operator ID: John  
Comments: ATM CIRCUIT QUALIFICATION

---ATM RESULTS -----  
-----  
-----  
---VP / VC Scan -----

Scan Channel Count -----4

Channel	Bandwidth	Channel	Bandwidth
01 / 0001	74.9	04 / 0001	18.6 Mbps
02 / 0001	18.7	05 / 0001	18.7 Mbps

--- ALARMS -----

Alarm	Status	Sec	Sec Ago
LOCS -----	History	2	48
SCNR -----	Current	1	0
LOP -----	Current	5	0
F4 AIS -----	Off	0	0
F4 RDI -----	Off	0	0
F5 AIS -----	Off	0	0
F5 RDI -----	Off	0	0

--- ERROR RESULTS -----

ERROR COUNTS	Error Count	Errored Secs (ES)	Severely ES (SES)	Error Free Secs (EFS)	Sec Ago
HCS (Corrected) -----	9	N/A	N/A	N/A	N/A
HCS (Uncorrected) -----	0	N/A	N/A	N/A	N/A
HCS (Total) -----	9	5	0	125	90
AAL-1 Cell Loss -----	26356677	86	84	49	16
AAL-1 CRC/Parity -----	148	39	2	96	17
AAL-1 Mis-insert -----	4537957	84	84	51	16

ERROR RATES	Rate Current	Rate Average	ES%	EFS%
HCS (Corrected) -----	N/A	N/A	N/A	N/A
HCS (Uncorrected) -----	N/A	N/A	N/A	N/A
HCS (Total) -----	0.00e+000	1.75e-007	3.68	96.32
AAL-1 Cell Loss -----	0.00e+000	9.04e-000	63.70	36.30
AAL-1 CRC/Parity -----	0.00e+000	5.08e-005	N/A	71.11
AAL-1 Mis-insert -----	0.00e+000	1.56e+000	62.22	37.78

**Printing Results****Sample ATM Report Information (*continued*)**

---BERT-----

Pattern Sync ----- OFF

LOP (Pattern Loss) Seconds ----- 5

LOP (Pattern Loss) Seconds Ago - 0

	Error Count	Errored Secs (ES)	Severely ES (SES)	Error Free Secs (EFS)	Sec Ago
Error Counts -----	24607	33	33	102	16

	Rate Current	Rate Average	ES%	EFS%
Error Rates -----	0.00e+000	7.88e-005	24.44	75.56

--- TOTAL CELL STREAM -----

Cell Count ----- 5.67e+007

Bandwidth	Current	Average	Maximum	Minimum
Percent -----	100	99	99	98
Frequency -----	149018474	148323803	148906819	147144960
Cells Per Second --	351458	349816	351194	353193

--- SELECTED CELL STREAM -----

Cell VPI/VCI ----- 01 / 0001

Cell Count ----- 1.70e+308

Bandwidth	Current	Average	Maximum	Minimum
Percent -----	0	19	69	19
Frequency -----	0	28326291	103591340	28326291
Cells Per Second --	0	66910	243829	66910

--- CELL INTERARRIVAL TIME -----

	Current	Maximum	Minimum	Typical
Interarrival Time-----	N/A	N/A	2.21e+002	N/A

--- CELL TRANSFER DELAY -----

	Current	Maximum	Minimum	Typical
Transfer Delay -----	N/A	N/A	2.21e+002	N/A

--- 1 PT CDV -----

Expected 1 pt CDV -- 100

Current Avg	Early (Peak)	Late (Peak)	Typical
	N/A	N/A	N/A

---CELL CAPTURE RESULTS-----

---RX SETUP-----

Mode -----	All Cells
Range -----	VPI = All, VCI = All

**Printing Results****Sample ATM Report Information (*continued*)**

```

---CAPTURE CELLS -----
Range Match ----- On
Cell Count ----- 500

--- RX RESULTS -----
Cell Number ----- 1
Cell Header ----- 00 10 00 10 XX
                   VPI ---- 01    VCI ---- 0001  GFC ---- 0
                   PT ---- 0      CLP ---- 0

Cell Payload ----- Hexadecimal      ASCII
                   9D 86 B2 E8 51 8E 1A DB
                   A1 26 39 2B 69 04 89 E4
                   CB A5 46 20 6B 3E 85 78
                   E0 ED BD 92 72 92 D0 91
                   1C 99 B4 A4 44 02 67 F2
                   AF D0 1F 1F BD BE 72 04

---ATM SETUP -----
-----
-----
---GENERAL -----
Interface ----- UNI
Delineation ----- HCS
Header Correction ----- On
Cell Scramble ----- On
Cell PRBS Invert ----- Off
VP/VC Notation ----- Hex
Bandwidth ----- Mbps

--- SETUP -----
Error Type ----- HCS Bit
Error Inject Rate ----- Single
Error Inject ----- Off

Cell Timestamp ----- Off
Expect 1-pt CDV PCR ----- 100 %

Forefround OAM Alarms
Type ----- End to End
F4 AIS ----- Off
F4 RDI ----- Off
F5 AIS ----- Off
F5 RDI ----- Off

Background OAM Alarms
Type ----- End to End
F4 AIS ----- Off
F4 RDI ----- Off
F5 AIS ----- Off
F5 RDI ----- Off

```

**Printing Results****Sample ATM Report Information (*continued*)**

```

AAL1 Misinsert ----- Off
Periodic ----- Off
Single ----- On
Period ----- 0.1
All 1's ----- On
All 0's ----- Off
32-bit Pattern ----- Off
Pattern ----- 12345678

```

```

ATM Cell BERT
Pattern ----- 2^15 - 1
Current User Pattern ----- 12345678
User Pattern 1 ----- 0
User Pattern 2 ----- 0
User Pattern 3 ----- 0
User Pattern 4 ----- 0
User Pattern 5 ----- 0

```

```

--- RECEIVE CHANNEL -----

```

```

AAL ----- AAL1
VPI / VCI ----- 01 / 0001
Cell Payload ----- BERT

```

```

--- TRANSMIT CHANNEL -----

```

```

Froeground
AAL ----- AAL1
GFC ----- 0
VPI / VCI ----- 01 / 0001
PT ----- 0
CLP ----- 0
Cell Payload ----- ATM Cell BERT
Service Type ----- CBR
Conformance (Leaky Bucket) Off
Cell Interleaving ----- Contin.
Period ----- 0.1 Secs

```

```

Background 1
AAL ----- AAL5
GFC ----- 0
VPI / VCI ----- 02 / 0001
PT ----- 0
CLP ----- 0
Cell Payload ----- All Zeros
Pattern ----- 12345678
Service Type ----- CBR

```

```

Background 2
AAL ----- AAL5
GFC ----- 0
VPI / VCI ----- 03 / 0001
PT ----- 0
CLP ----- 0
Cell Payload ----- All Zeros
Pattern ----- 12345678
Service Type ----- CBR

```

**Printing Results****Sample ATM Report Information (*continued*)**

## Background 3

```

AAL ----- AAL5
GFC ----- 0
VPI / VCI ----- 04 / 0001
PT ----- 0
CLP ----- 0
Cell Payload ----- All Zeros
Pattern ----- 12345678
Service Type ----- CBR

```

## Background 4

```

AAL ----- AAL5
GFC ----- 0
VPI / VCI ----- 05 / 0001
PT ----- 0
CLP ----- 0
Cell Payload ----- All Zeros
Pattern ----- 12345678
Service Type ----- CBR

```

## Idle

```

GFC ----- 0
PT ----- 0
CLP ----- 0
Pattern ----- 0

```

## --- BANDWIDTH CONTROL -----

Channel	State	Bandwidth	PCR	SCR	MBS
Foreground -----	On	104.9 Mbps	104.9 Mbps	15.0 Mbps	100 Cells
Idle -----		0.0 Mbps			
Background 1 -----	On	15.0 Mbps			
Background 2 -----	On	15.0 Mbps			
Background 3 -----	On	15.0 Mbps			
Background 4 -----	Off	0.0 Mbps			

If you are running the ATM application, or the Clear Channel BERT option is *not* selected, the following SONET/SDH report information prints when you select the Print Report option.

```

---N1640A/N1645A SUMMARY REPORT  ATM/SONET Full Report      Module Slot:A
Date:09-08-1999 Time:12:15:14      Elapsed Test Time: 00:00:03
Test Status: Stopped                File Name: N1640A_FULL2.txt

```

---TEST INFORMATION-----

Customer Name: XYZ COMPANY	Circuit ID: XYZ-001
Operator ID: John	
Comments: ATM CIRCUIT QUALIFICATION	

```

--SONET SETUP-----
-----
--GENERAL-----
-----

```

```

Frame ----- SONET
Line Rate ----- 155 Mbps
Clock ----- Internal
Line Scramble ----- On
Line PRBS Invert ----- Off
Pointer Notation ----- Hex
Mode ----- Terminal

```

-----SETUP-----

Laser ----- On

Error Type	N/A
Error Injection Rate	N/A

H Pointer Adjustment ----- Off  
H Pointer Value ----- 20A

LOS Alarm	-----	Off
OOE Alarm	-----	Off
LOF Alarm	-----	Off
AIS-L [MS-AIS] Alarm	-----	Off
RDI-L [MS-RDI] Alarm	-----	Off
AIS-P [AU-AIS] Alarm	-----	Off
RDI-P [AU-RDI] Alarm	-----	Off
LOP-P Alarm	-----	Off

K1 Byte .....	0
Message .....	No Request
Request .....	0
K2 Byte .....	0
Bridge .....	0
Architecture .....	1+1 Future (000)

```

Payload Type -----BERT
Pattern ----- 2^15 - 1
Current User Pattern ----- 1234567
User Pattern 1 ----- 0
User Pattern 2 ----- 0
User Pattern 3 ----- 0
User Pattern 4 ----- 0
User Pattern 5 ----- 0

```

**Printing Results****Sample SONET/SDH Report (*continued*)**

---SECTION [RS] OVERHEAD -----

## STS1-1 [STM0-1]

A1 ----- F6  
 A2 ----- 28  
 J0 ----- 01  
 E1 ----- 00  
 F1 ----- 00  
 D1 ----- 00  
 D2 ----- 00  
 D3 ----- 00

## STS1-2 [STM0-2]

A1 ----- F6  
 A2 ----- 28  
 Z0 ----- 02

## STS1-3 [STM0-3]

A1 ----- F6  
 A2 ----- 28  
 Z0 ----- 03

TRANSMIT TRACE BUFFER (J0) -	Hexadecimal	ASCII
	30 30 30 30 30 30 30 30	00000000
	30 30 30 30 30 30 30 30	00000000

EXPECTED TRACE BUFFER (J0) -	Hexadecimal	ASCII
	30 30 30 30 30 30 30 30	00000000
	30 30 30 30 30 30 30 30	00000000

Buffer Enable ----- Off

Buffer Sync Enable ----- Off

--- LINE [MS] OVERHEAD -----

## STS1-1 [STM0-1]

K1 ----- 00  
 K2 ----- 00  
 D4 ----- 01  
 D5 ----- 01  
 D6 ----- 01  
 D7 ----- 00  
 D8 ----- 00  
 D9 ----- 00  
 D10 ----- 00  
 D11 ----- 00  
 D12 ----- 00  
 S1 ----- 00  
 Z2 ----- 01  
 E2 ----- 00

## STS1-2 [STM0-2]

Z1 ----- 00  
 Z2 ----- 00

## STS1-3 [STM0-3]

Z1 ----- 00  
 M1 ----- 00

Printing Results

Sample SONET/SDH Report (*continued*)

---PATH OVERHEAD -----

J1 ----- 00  
C2 ----- 13  
G1 ----- 00  
F2 ----- 00  
H4 ----- 00  
Z3 ----- 00  
Z4 ----- 00  
Z5 ----- 00

TRANSMIT TRACE BUFFER (J1) -   Hexadecimal                    ASCII  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000

EXPECTED TRACE BUFFER (J1) -   Hexadecimal                    ASCII  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000  
                                  30 30 30 30 30 30 30   00000000

Buffer Enable ----- Off  
Buffer Sync Enable ----- Off

--- SONET RESULTS -----

---SIGNAL SUMMARY-----

Line (Mbps) ----- 155  
Frequency (Hz) ----- 155539000

--- ALARMS -----

Alarm	Status	Sec	Sec Ago
LOS (Signal Loss) -----	History	1	48
OOF -----	History	1	48
LOF (Frame Loss) -----	History	1	48
AIS-L [MS-AIS] -----	History	1	48
RDI-L [MS-RDI] -----	Off	0	0
AIS-P [AU-AIS] -----	History	1	48
RDI-P [AU-RDI] -----	History	1	48
LOP-P (Pattern Loss) -----	Off	0	0

**Printing Results****Sample SONET/SDH Report (*continued*)**

## ---ERROR RESULTS-----

ERROR COUNTS	Error Count	Errored Secs (ES)	Severely ES (SES)	Error Free Secs (EFS)	Sec Ago
B1 (Section) -----	9802	2	1	133	48
B2 (Line) -----	42	2	1	133	48
B3 (Path) -----	8	1	1	134	49
REI-L [MSREI] (Line) -----	23	1	0	134	49
REI-P [PREI] (Path) -----	2	1	1	134	48

ERROR RATES	Rate Current	Rate Average	ES%	EFS%
B1 (Section/RS) -----	0.00e+000	3.90e-007	1.48	98.52
B2 (Line/MS) -----	0.00e+000	1.67e-009	1.48	98.52
B3 (Path) -----	0.00e+000	3.18e-010	0.74	99.26
REI-L [MSREI] (Line) -----	0.00e+000	9.14e-010	0.74	99.26
REI-P [PREI] (Path) -----	0.00e+000	7.95e-011	0.74	99.26

## ---BERT-----

Pattern Sync ----- OFF  
 LOP (Pattern Loss) Seconds ----- 5  
 LOP (Pattern Loss) Seconds Ago - 5

	Error Count	Errored Secs (ES)	Severely ES (SES)	Error Free Secs (EFS)	Sec Ago
Error Counts -----	0	0	0	0	0

	Rate Current	Rate Average	ES%	EFS%
Error Rates -----	0.00e+000	0.00e+000	0.00	0.00

## --- POINTER-----

Pointer Value ----- 20A  
 Last PJ Direction ----- 0  
 Positive Event Count ----- 0  
 Negative Event Count ----- 0  
 Positive Event Sec ----- 0  
 Negative Event Sec ----- 0  
 New Data Flag Count ----- 0

## --- APS BYTE VALUES-----

K1 ----- 00  
 K2 ----- 00

## --- APS MESSAGE DECODE-----

Message ----- No Request  
 Request ----- Null  
 Bridge ----- 00  
 Architecture ----- 1+1 Future (000)

Printing Results

Sample SONET/SDH Report (continued)

---SECTION [RS] OVERHEAD -----			
STS1-1 [STM0-1]	STS1-2 [STM0-2]	STS1-3 [STM0-3]	
A1 --- F6	Z0 --- 02	Z0 --- 03	
A2 --- 28			
J0 --- 01			
E1 --- 00			
F1 --- 00			
D1 --- 00			
D2 --- 00			
D3 --- 00			
TRACE BUFFER (J0) ALARMS			
Mismatched -----	Off	Alm Sec	Sec Ago
		00	
Unstable -----	Off	0	0
TRACE BUFFER (J0) -----			
	Hexadecimal	ASCII	
	01 01 01 01 01 01 01 01		
	01 01 01 01 01 01 01 01		
---LINE [MS] OVERHEAD -----			
BYTE VALUES			
STS1-1 [STM0-1]	STS1-2 [STM0-2]	STS1-3 [STM0-3]	
H1 --- 62	Z1 --- 00	Z1 --- 00	
H2 --- 0A	Z2 --- 00	M1 --- 00	
K1 --- 00			
K2 --- 00			
D4 --- 00			
D5 --- 00			
D6 --- 00			
D7 --- 00			
D8 --- 00			
D9 --- 00			
D10 -- 00			
D11 -- 00			
D12 -- 00			
S1 --- 00			
M0 --- 00			
E2 --- 00			
--- PATH OVERHEAD -----			
BYTE VALUES			
J1 --- 00			
C2 --- 13			
G1 --- 00			
F2 --- 00			
H4 --- 00			
Z3 --- 00			
Z4 --- 00			
Z5 --- 00			
TRACE BUFFER (J1) ALARMS			
Mismatched -----	Off	Alm Sec	Sec Ago
		0	0
Unstable -----	Off	0	0
TRACE BUFFER (J1) -----			
	Hexadecimal	ASCII	
	00 00 00 00 00 00 00 00		
	00 00 00 00 00 00 00 00		
--- END REPORT -- N1640A/N1645A SW REV:1.30PG -- HW REV:1 -- SN: -----			

Configuring General SONET/SDH Settings	2-3
Configuring SONET/SDH Overhead Bytes	2-5
Section/RS Overhead	2-6
Line/MS Overhead	2-10
Path Overhead	2-12
Running a SONET/SDH Test	2-16
Using the SONET/SDH Error-injection Feature	2-17
Making a Pointer Adjustment	2-19
Using the Laser Button	2-16
Using the SONET/SDH Alarm Simulation Feature	2-21
Configuring Automatic Protection Switching	2-23
Using the Clear-Channel BERT Button	2-28

---

## Configuring a SONET/SDH Test

---

# SONET and SDH Tests

You install the ATM Cell Processor Test module (N1640A) and the SONET/SDH Line Interface module (N1645A) in a Service Advisor platform to test SONET circuits. The supported test transmission formats and rates are as follows:

---

**Supported Transmission Formats and Rates**

---


Transmission Standard	Frame Format	Transmission Rate	Payload Mapping
SONET	OC1	51.84 Mbps	OC1:STS-1
	OC-3c	155.52 Mbps	OC-3c:STS-3c
SDH	STM-0	51.84 Mbps	STM-0: VC-3, C3
	STM-1	155.52 Mbps	STM-1: VC-4, C4

---

---

## Configuring General SONET/SDH Settings


The General section of the SONET Setup screen lets you configure the settings for the outgoing SONET or SDH frames.

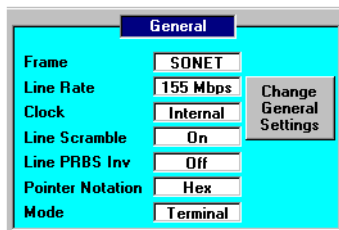

The screenshot shows a window titled "General" with a cyan background. It contains several settings: "Frame" set to "SONET", "Line Rate" set to "155 Mbps", "Clock" set to "Internal", "Line Scramble" set to "On", "Line PRBS Inv" set to "Off", "Pointer Notation" set to "Hex", and "Mode" set to "Terminal". A button labeled "Change General Settings" is located to the right of the "Line Rate" and "Clock" settings.

**Note:** To transmit an optical signal, make sure the Laser indicator is green. If not, tap the Laser button in the Setup section.

1. Tap the **Change General Settings** button on the Setup screen to display the Change General Settings screen.

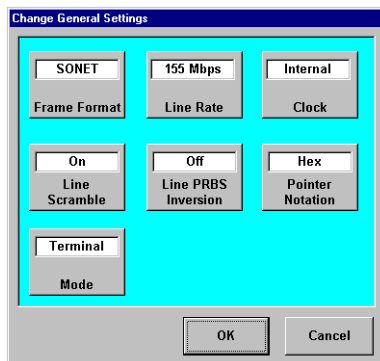

The screenshot shows a window titled "Change General Settings" with a cyan background. It contains several settings: "SONET" for "Frame Format", "155 Mbps" for "Line Rate", "Internal" for "Clock", "On" for "Line Scramble", "Off" for "Line PRBS Inversion", "Hex" for "Pointer Notation", and "Terminal" for "Mode". At the bottom, there are "OK" and "Cancel" buttons.

2. Tap each button until the desired setting appears in the button's display area. The following table describes each button.

SONET Setup General Settings		
Button Name	Settings	Description
Frame Format	SONET SDH	Sets the framing format for the circuit you have the tester connected to. This format is used for transmitting and receiving data over the connected circuit.
Line Rate	155 Mbps 51 Mbps	Sets the line rate of the transmitted frames.
Clock	Internal Recovered	Sets the type of clocking you want to use. Internal indicates that the timing is based on the SONET/SDH module's internal oscillator. Recovered indicates timing is based on loop timing.
Line Scramble	ON off	Indicates whether SONET/SDH line scrambling is turned ON or off.
Line PRBS Inversion	ON off	Indicates whether the pseudorandom bit sequence (PRBS) insertion feature is ON or off.
Pointer Notation	Hexadecimal Decimal	Indicates the notation system used in the payload pointer; either hexadecimal (hex) or decimal.
Mode	Terminal Pass Thru	Indicates the Service Advisor's operating mode.

3. Tap **OK** to activate your selections and return to the Setup screen. Tap **Cancel** to exit the screen without changing anything.

---


## Configuring SONET/SDH Overhead Bytes

The Overhead section of the Setup screen lets you configure the overhead bytes in the outgoing SONET or SDH frames (indicated by the Frame Format in the General section of the screen).

- When the Frame Format is set to SONET, you use the **Section**, **Line**, and **Path** buttons on the Setup screen to configure SONET overhead bytes.
- When the Frame Format is set to SDH, you use the **RS** (regenerator section), **MS** (multiplex section), and **Path** buttons on the Setup screen to configure SDH overhead bytes.


Configuring the SONET and SDH overhead bytes is similar. Use the following instructions for both frame formats. When the screens or instructions vary, remember to follow the instructions for the frame format set in the General section of the Setup screen.

SONET Overhead Buttons

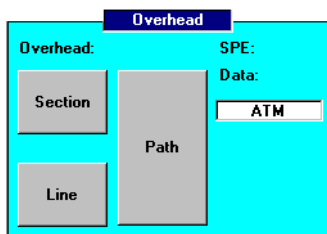

The SONET Overhead Buttons screen features a blue header bar with the word "Overhead" in white. Below the header, the screen is divided into two main sections. On the left, under the label "Overhead:", there are three buttons: "Section", "Line", and "Path". The "Path" button is significantly larger than the others. On the right, under the label "SPE:", there is a "Data:" label followed by a button labeled "ATM".

SDH Overhead Buttons

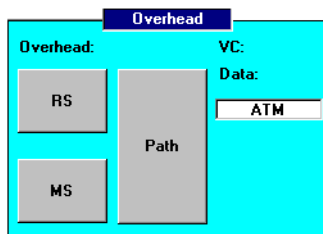

The SDH Overhead Buttons screen features a blue header bar with the word "Overhead" in white. Below the header, the screen is divided into two main sections. On the left, under the label "Overhead:", there are three buttons: "RS", "MS", and "Path". The "Path" button is significantly larger than the others. On the right, under the label "VC:", there is a "Data:" label followed by a button labeled "ATM".

## Section/RS Overhead

The **Section** button lets you configure SONET Section Overhead (SOH) bytes. The **RS** button lets you configure SDH Regenerator Section Overhead (RSOH) bytes.

1. Tap the **Section** or **RS** button in the Setup screen to display the Overhead Setup screen. Fixed overhead values are displayed, but are not buttons.

SONET 155 Mbps

**Section Overhead Setup**

STS1-1			STS1-2			STS1-3		
F6	28	01						
A1	A2	J0						
N/A	00	00						
B1	E1	F1						
00	00	00						
D1	D2	D3						

☐ Edit Trace Buffers (J0)  
☐ Buffer Enable  
☐ Buffer Sync Enable

OK Cancel

SONET 51 Mbps

**Section Overhead Setup**

STS1-1					
F6	28	01			
A1	A2	J0			
N/A	00	00			
B1	E1	F1			
00	00	00			
D1	D2	D3			

☐ Edit Trace Buffers (J0)  
☐ Buffer Enable  
☐ Buffer Sync Enable

OK Cancel

SDH 155 Mbps

**RS Overhead Setup**

STM0-1			STM0-2			STM0-3		
F6	28	01						
A1	A2	J0						
N/A	00	00						
B1	E1	F1						
00	00	00						
D1	D2	D3						

☐ Edit Trace Buffers (J0)  
☐ Buffer Enable  
☐ Buffer Sync Enable

OK Cancel

SDH 51 Mbps


**RS Overhead Setup**

STM0-1					
F6	28	01			
A1	A2	J0			
N/A	00	00			
B1	E1	F1			
00	00	00			
D1	D2	D3			

☐ Edit Trace Buffers (J0)  
☐ Buffer Enable  
☐ Buffer Sync Enable

OK Cancel


2. Tap a byte button (for example, **J0**) and use the displayed popup keypad to enter a value.

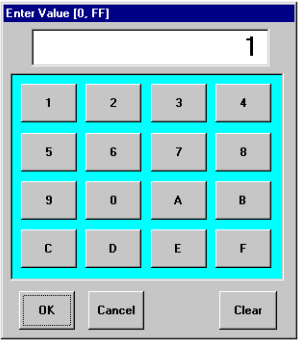


Following are descriptions of the SOH/RSOH bytes. The STS1/STM0 tabs enable you to set or view SOH/RSOH bytes for STS1/STM0 signals.

Section/RS Overhead Bytes Description	
Byte	Function
A1, A2	Displays frame alignment bytes
J0	Section trace byte
B1	Not applicable
E1	Local orderwire channel
F1	Section user channel
D1, D2, D3	Section data communications channel (DCC)
Z0	Reserved for future use

3. Tap the **Edit Trace Buffers** button to edit the J0 trace buffer.

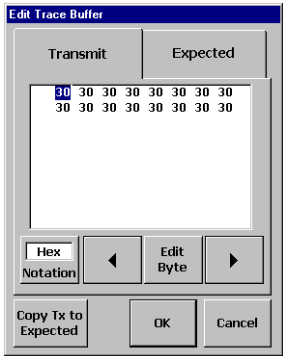


4. Tap the **Notation** button to select *Hex* or *ASCII*. If you selected Hex notation, continue to the next step. If you selected ASCII notation, continue to step 6.
5. To edit *Hex* Transmit or Expected bytes, use the ◀ and ▶ buttons to move to the byte you want to change. Then tap the **Edit Byte** button. Enter the desired value using the popup keypad.

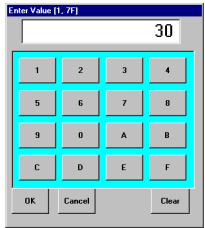

Continue to step 7.

## Configuring SONET/SDH Overhead Bytes

6. To edit *ASCII* Transmit or Expected bytes, highlight the value you want to change and type in the new value using the displayed keypad.

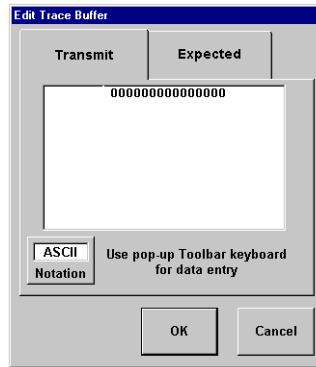

7. Tap the **Copy Tx to Expected** button to automatically set the Expected J0 trace buffer to be the same as the Transmit buffer.
8. Tap **OK** to set the value and return to the Edit Trace Buffer screen, or tap **Cancel** to return to the previous screen without saving the entered setting.
9. Tap the **Buffer Enable** button on the Overhead Setup screen to enable the J0 trace buffer.
10. Tap the **Buffer Sync Enable** button on the Overhead Setup screen to enable the J0 trace buffer to transmit a fixed Most Significant Bit (MSB) of the first byte in the section trace buffer.
11. Tap **OK** to save the settings and return to the SONET/SDH Setup screen. Tap **Cancel** to exit the screen (if you have made changes on the STS1 or STM0 tab screens, these changes are saved).

See *Section/RS Tab*, page 3–11 for information about viewing the SOH errors.

Line/MS Overhead

The **Line** button lets you configure SONET Line Overhead (LOH) bytes. The **MS** button lets you configure SDH Multiplex Section Overhead (MSOH) bytes (when the frame format is SDH).

To configure LOH/MSOH bytes, complete the following steps.

- 1. Tap the **Line** or **MS** button in the Setup screen to display the Overhead Setup screen.

SONET 155 Mbps

Line Overhead Setup

STS1-1	STS1-2	STS1-3
N/A H1	N/A H2	N/A H3
N/A B2	00 K1	00 K2
00 D4	00 D5	00 D6
00 D7	00 D8	00 D9
00 D10	00 D11	00 D12
00 S1	00 Z2	00 E2

OK

Cancel

SONET 51 Mbps

Line Overhead Setup

STS1-1
N/A H1
N/A B2
00 D4
00 D7
00 D10
00 S1

H2
N/A H2
00 K1
00 D5
00 D8
00 D11
00 M0

H3
N/A H3
00 K2
00 D6
00 D9
00 D12
00 E2

OK

Cancel

SDH 155 Mbps

MS Overhead Setup

STM0-1	STM0-2	STM0-3
N/A H1	N/A H2	N/A H3
N/A B2	00 K1	00 K2
00 D4	00 D5	00 D6
00 D7	00 D8	00 D9
00 D10	00 D11	00 D12
00 S1	00 Z2	00 E2

OK

Cancel

SDH 51 Mbps

MS Overhead Setup

STM0-1
N/A H1
N/A B2
00 D4
00 D7
00 D10
00 S1

H2
N/A H2
00 K1
00 D5
00 D8
00 D11
00 M0

H3
N/A H3
00 K2
00 D6
00 D9
00 D12
00 E2

OK

Cancel

**Configuring SONET/SDH Overhead Bytes**

2. Tap a byte button (for example, **K1**) and use the displayed popup keypad to enter an overhead value.

Following are descriptions of the Line/MS overhead bytes. The STS1/STM0 tabs enable you to set or view LOH bytes for STS1/STM0 signals.

---

**Line/MS Overhead Byte Descriptions**

---

Byte	Function
H1, H2, H3, and B2	Not applicable
K1, K2	APS and alarm information
D4–D12	Line data communications channel (DCC)
S1	Synchronization status
Z2	Reserved for future use, but you can change the displayed value and the tester will transmit the value.
E2	Line orderwire
M0	Line status

---

3. Tap **OK** to activate your selections and return to the Setup screen. Tap **Cancel** to exit the screen (if you have made changes on the STS1/STM0 tab screens, these changes are saved).


See *Line/MS Tab*, page 3–13 for information about viewing the LOH/MSOH errors.

## Path Overhead

The Path Overhead screen provides access to the SONET path overhead (POH) bytes. To configure POH bytes, complete the following steps.


1. Tap the **Path** button in the Setup screen to display the Path Overhead Setup screen.

SONET Path Overhead Setup

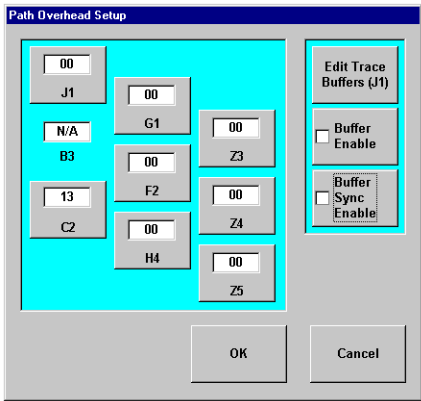


The SONET Path Overhead Setup screen displays a grid of buttons for configuring POH bytes. The buttons are arranged in a 4x4 grid, with the last cell empty. The buttons are labeled: J1 (00), G1 (00), B3 (N/A), F2 (00), C2 (13), H4 (00), Z3 (00), Z4 (00), and Z5 (00). To the right of the grid is a section titled 'Edit Trace Buffers (J1)' containing two checkboxes: 'Buffer Enable' and 'Buffer Sync Enable'. At the bottom are 'OK' and 'Cancel' buttons.

SDH Path Overhead Setup

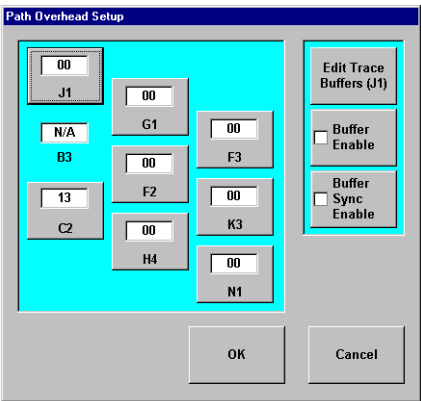

The SDH Path Overhead Setup screen displays a grid of buttons for configuring POH bytes. The buttons are arranged in a 4x4 grid, with the last cell empty. The buttons are labeled: J1 (00), G1 (00), B3 (N/A), F3 (00), C2 (13), F2 (00), H4 (00), K3 (00), and N1 (00). To the right of the grid is a section titled 'Edit Trace Buffers (J1)' containing two checkboxes: 'Buffer Enable' and 'Buffer Sync Enable'. At the bottom are 'OK' and 'Cancel' buttons.


2. Tap a byte button (for example, **J1**) and use the displayed popup keypad to enter the desired value. See *Path Overhead Bytes*, page 2–14 for a description of each POH byte.
3. Tap the **Edit Trace Buffers** button to edit the J1 trace buffer.

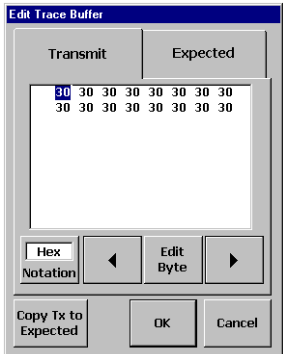

The Edit Trace Buffer screen displays a table with two columns: 'Transmit' and 'Expected'. The 'Transmit' column contains the value '30' in the first row, and the 'Expected' column contains the value '30' in the first row. Below the table are buttons for 'Hex Notation', 'Edit Byte', and 'Copy Tx to Expected'. At the bottom are 'OK' and 'Cancel' buttons.


## Configuring SONET/SDH Overhead Bytes

4. Tap the **Notation** button to select *Hex* or *ASCII*.
5. To edit *Hex* Transmit or Expected bytes, use the ◀ and ▶ buttons to move to the byte you want to change. Then tap the **Edit Byte** button. Enter the desired value using the popup keypad.

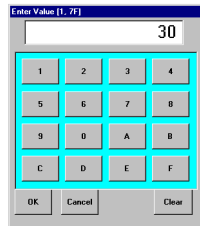

Continue to step 7.

6. To edit *ASCII* Transmit or Expected bytes, highlight the value you want to change and type in the new value using the displayed keypad.

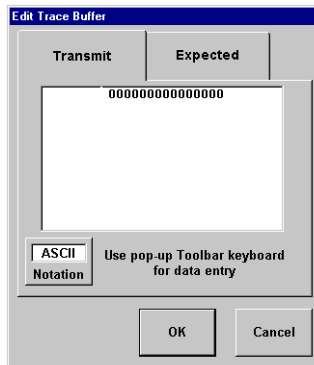

7. Tap the **Copy Tx to Expected** button to automatically set the Expected J0 trace buffer to be the same as the Transmit buffer.
8. Tap **OK** to set the value and return to the Edit Trace Buffer screen, or tap **Cancel** to return to the previous screen without saving the entered setting.
9. Tap the **Buffer Enable** button enable the J1 trace buffer.
10. Tap the **Buffer Sync Enable** button to enable the J1 trace buffer to transmit a fixed Most Significant Bit (MSB) of the first byte in the section trace buffer.

## Configuring SONET/SDH Overhead Bytes

11. Tap **OK** to save the settings and return to the SONET Setup screen. Tap **Cancel** to exit the screen (if you have made changes using the **Edit Trace Buffers** button, these changes are saved).

See *Path Tab*, page 3–14 for information about viewing the POH errors.

### Path Overhead Bytes

Following are descriptions of the POH bytes.

#### Path Overhead (POH) Bytes

Byte	Function
J1	Path trace string, 62-bytes (path signal source)
B3	Not applicable
C2	Payload type label
	00 Unequipped
	01 Equipped, non-specific payload
	02 Floating VT type
	03 Locked VT type
	04 Asynchronous mapping for DS3
	05 Not used
	12 Asynchronous mapping for DS4NA
	13 Mapping for ATM
	14 Mapping for DQDB
	15 Asynchronous mapping for FDDI
G1	Path status and performance
F2	Path user channel
H4	VT multiframe phase indicator (STS-3 only)
Z3, Z4	Reserved for future use, but you can change the displayed value and the tester will transmit the value.
Z5	Tandem connection error count and datalink

**Configuring SONET/SDH Overhead Bytes**

---

**Path Overhead (POH) Bytes, continued**

---


<b>Byte</b>	<b>Function</b>
K3	Higher order path automatic protection switching. Only appears in SDH mode.
F3	Higher order path user channel. Only appears in SDH mode.
N1	High order tandem connection monitoring. Only appears in SDH mode.

---

---

## Running a SONET/SDH Test

This section describes how to use the Setup buttons on the main Setup screen. You use the buttons in this section to control error-injection, make a pointer adjustment, configure the alarm simulation feature and automatic protection switching testing, and select a BERT pattern if you want to run a bit-error rate test.

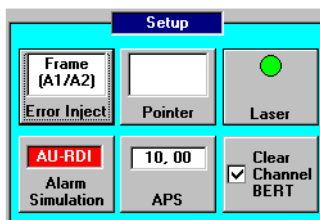

### Using the Laser Button

To transmit an optical signal, be sure to tap the **Laser** button in the SONET/SDH Setup screen. The indicator on the software **Laser** button turns green to show that this function is ON.



## Using the SONET/SDH Error-injection Feature

The SONET/SDH error-injection feature enables you to inject errors into the network in order to measure how network elements respond. Running an error-injection test simulates network responses to real errors.

Follow these steps to run an error-injection test.

**Note:** To transmit an optical signal, make sure the Laser indicator is green. If not, tap the Laser button in the Setup section.

1. In the SONET/SDH Setup screen, tap the **Error Inject** button to display the Error Injection screen.

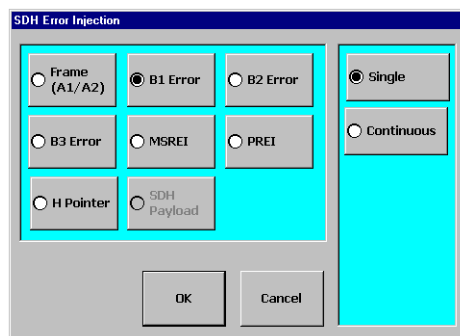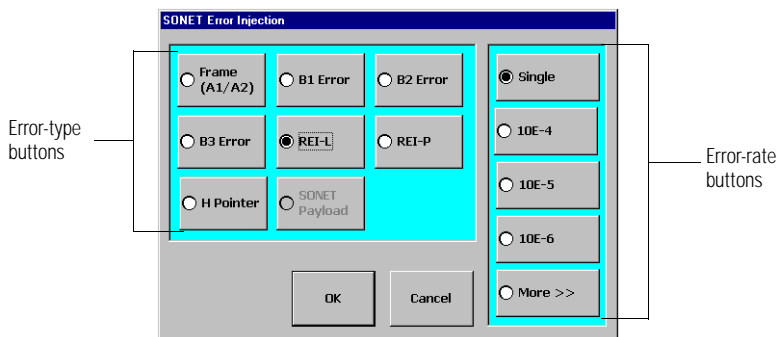

2. Tap one of the error-type buttons to select the type of error to inject into the signal.

## Running a SONET/SDH Test

Use the error-rate buttons (on the right), displayed when you select an error type, to specify the rate at which to inject the selected error. The error types are defined below. When the SONET and SDH button names are different, the SDH names are entered in square brackets ([ ]).

### Error Types

**Frame (A1/A2)** – Generates frame errors by inverting the bits in the A1 and A2 overhead bytes. *Rates:* Continuous.

**B1 Error** – Generates section code violations by inverting the bits in the B1 byte. *Rates:* Single, Continuous.

**B2 Error** – Generates line code violations by inverting the bits in the B2 byte. *Rates:* Single, Continuous.

**B3 Error** – Generates path code violations by inverting the bits in the B3 byte. *Rates:* Single, Continuous.

**REI-L [MSREI]** – Generates a remote error indication-line. OC-1/STM-0 transmits the REI-L in bits 2 – 8 of the M1 byte. OC-3c/STM-1 transmits the REI-L in the M1 byte. *Rates:* Single, 10E-4 through 10E-8.

**REI-P [PREI]** – Generates a remote error indication-path in the G1 byte. *Rates:* Single, 10E-4 through 10E-8.

**H Pointer** – Generates a pointer error and subsequent loss of pointer (LOP-P) alarm by transmitting an out-of-range pointer value in the H1–H3 overhead bytes. *Rates:* Continuous.

**SONET [SDH] Payload** – Injects SONET or SDH errors into the payload. *Rates:* Single, 10E-3, 10E-6.

### Error Rates

**Single** – A single error of the selected type is transmitted each time you tap the **Error Inject** button.

**Continuous** – A steady error rate of the selected type begins when you tap the **Error Inject** button, and stops when you tap the **Error Inject** button again.

**10E-*n*** – Inject errors into the BERT payload pattern at the selected rate when you tap the **Error Inject** button. For example, 10E-3 is  $1 \times 10^{-3}$ , or 1 error every 1,000 bits.

3. Tap **OK** to save the setting and return to the Setup screen. **Cancel** closes the screen without saving your selection.

**Running a SONET/SDH Test**


4. Tap the **Start** toolbar button to start a test. (The Start button turns green and displays the word “Running”.) Tap the button again to stop the test.
5. Tap the **Inject Error** toolbar button to transmit errors into the line.
6. Tap the **Results** button to view test results (see *Results Summary Screen*, page 3–6).

**Making a Pointer Adjustment**

The SONET/SDH Pointer feature lets you increment and decrement the pointer value, or cause a New Data Flag (NDF) condition. Follow these steps to run pointer adjustment sequences.

**Note:** *To transmit an optical signal, make sure the indicator on the Laser button is green. If not, tap the Laser button in the Setup section.*

1. In the SONET/SDH Setup screen, tap the **Pointer** button to display the H Pointer Adjustment screen.

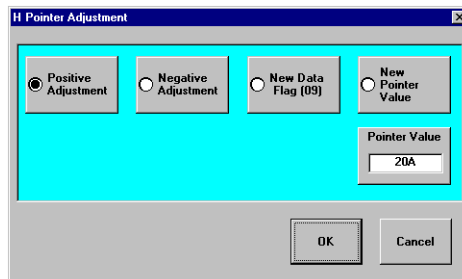

2. Select the H1/H2 pointer sequence you want to run.

**Positive Adjustment** – Causes a positive pointer adjustment by incrementing the H1/H2 pointer value.


**Negative Adjustment** – Causes a negative pointer adjustment by decrementing the H1/H2 pointer value.

**New Data Flag** – Sets the new data flag value.

**New Pointer Value** – Assigns a new pointer value. Use the Pointer Value button to enter the new pointer value (see next item).

## Running a SONET/SDH Test


**Pointer Value** – Lets you enter a new pointer value. Tap the **Pointer Value** button and use the displayed popup keypad to enter the value.

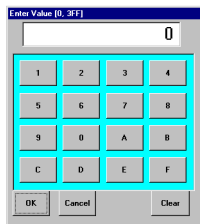

Tap **OK** on the keypad to save the value you entered and return to the H Pointer Adjustment screen. The **Clear** button clears the displayed entry, and the **Cancel** button does not save your entry.

3. Tap **OK** to save the setting and return to the SONET/SDH Setup screen. **Cancel** closes the screen without saving your selection.
4. Tap the **Adjust Pointer** toolbar button to cause the selected pointer adjustment to take effect.

When you make a pointer adjustment using the **Pointer** button, the **Inject Error** button becomes the **Adjust Pointer** button.



5. Tap the **Results** button to view test results (see *Pointer Adjustment Results*, page 3–15).


## Using the SONET/SDH Alarm Simulation Feature

The **Alarm Simulation** button lets you select and inject SONET/SDH alarms into the network, and measure whether network devices respond correctly to the alarms.

To run an alarm-simulation test, perform these steps from the SONET/SDH Setup screen.

**Note:** To transmit an optical signal, make sure the indicator on the Laser button is green. If not, tap the Laser button in the Setup section.

1. Tap the **Alarm Simulation** button to display the SONET/SDH Alarm Setup screen.

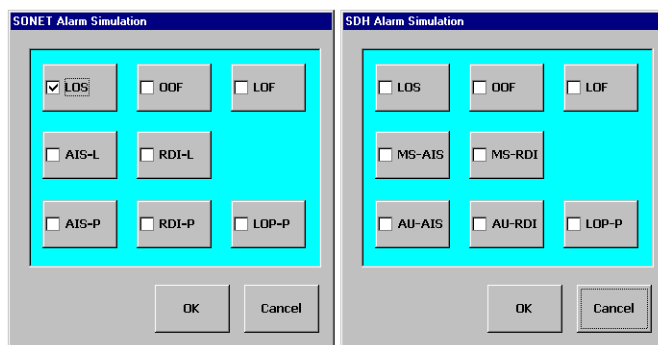

2. Tap the desired alarm button. See *SONET/SDH Alarms*, page 2-22 for a description of each type of alarm.
3. Tap **OK** to save the setting and return to the SONET Setup screen. **Cancel** closes the screen without saving your selection.

When you return to the setup screen, you'll notice that the **Alarm Simulation** button indicates whether you selected a single or multiple alarms.



Alarm simulation becomes active immediately after you select the alarm-type and tap **OK** on the SONET/SDH Alarm Simulation screen.

**Running a SONET/SDH Test**

4. Observe the SONET Results Summary screen or the SONET Alarms screen for test results (see *Alarm Results*, page 3–9).

**SONET/SDH Alarms**

The following table describes the SONET and SDH alarm settings. When the names are different, the SDH alarm names appear in square brackets ( [ ] ).

**SONET/SDH Alarm Descriptions**

Alarm	Description
LOS	Loss of signal. Declared when between 10 and 100 $\mu$ s of all-zeros pattern is detected. Nominal detect time is 55 $\mu$ s. The alarm is cleared when a non-zero pulse is detected.
OOF	Out-of-frame. Declared when four consecutive error framing patterns are detected.
LOF	Loss of frame synchronization. Declared when an OOF condition is detected for 24 consecutive frames (3 ms). The alarm is cleared after 24 consecutive frames of correct framing patterns.
AIS-L [MS-AIS]	Alarm indication signal-line. Declared when five consecutive K2 bytes are received containing XXXXX111. The alarm is cleared when five consecutive K2 bytes do not contain XXXXX111.
RDI-L [MS-RDI]	Remote defect indication-line. Declared when five consecutive K2 bytes are received containing XXXXX110. The alarm is cleared when five consecutive K2 bytes do not contain XXXXX110.
AIS-P [AU-AIS]	Alarm indication signal-path. Declared when all-ones is received in H1/H2 for three consecutive frames. This alarm is cleared when all-ones is not received in H1/H2 for three consecutive frames.
RDI-P [AU-RDI]	Remote defect indication-path. Declared when ten consecutive frames are received containing bit 5 of the G1 byte set to 1. The alarm is cleared when ten consecutive frames are received containing bit 5 of the G1 byte set to 0.

---

**SONET/SDH Alarm Descriptions, continued**

---

Alarm	Description
LOP-P	<p>Loss of pointer. Declared when eight consecutive frames are received that do not meet at least one of the following conditions:</p> <ul style="list-style-type: none"><li>• Normal flag (0110) and valid value (0–782).</li><li>• New data flag (1001) and valid value (0–782).</li><li>• Normal flag and valid value in STS-1 #1, and concatenation indicator (1001XX1111111111) in the other STS-1s.</li></ul> <p>LOP-P is not declared during AIS-P. The alarm is cleared when a consistent, valid pointer is received for three consecutive frames.</p>

---

## Configuring Automatic Protection Switching

The SONET/SDH automatic protection switching (APS) feature tests the ability of network devices to switch traffic onto another line when problems occur (such as error rates that fall above or below quality-of-service requirements), or during heavy network congestion.

Follow these steps to perform SONET/SDH APS testing.

**Note:** To transmit an optical signal, make sure the indicator on the Laser button is green. If not, tap the Laser button in the Setup section.

1. Tap the **APS** button in the SONET/SDH Setup screen. The APS (K1/K2) Setup screen appears.

The screenshot shows the 'APS (K1/K2) Setup' dialog box. It features a blue header bar with the title 'APS (K1/K2) Setup'. The main area contains two rows of controls. The first row includes a 'K1 Byte' field with the value '00', a 'Message' dropdown menu set to 'No Request', and a 'Request' field with the value '0'. The second row includes a 'K2 Byte' field with the value '00', a 'Bridge' field with the value '0', and an 'Architecture' dropdown menu set to '1+1 Future (000)'. At the bottom of the dialog are two buttons: 'OK' and 'Cancel'.

**Running a SONET/SDH Test**


2. Tap the appropriate buttons to set the APS message-type and request channel, the APS bridge channel, the architecture, and the mode. Use the following table to determine which buttons to tap.

**APS Button Descriptions**

APS Button	Description
K1 Byte	<p>Sets the K1 byte directly.</p> <p>When the keypad popup screen appears, enter a field value. See <i>Configuring the APS K1 Byte</i>, page 2–25 for more information.</p> <p><b>Note:</b> <i>The hexadecimal value you specify is transmitted as binary in the K1/K2 bytes.</i></p>
Message	Selects the APS switching mode at the far-end.
Request	Specifies the channel (0-15) to which the configured Message (configured with the Message button) applies.
K2 Byte	<p>Sets the K2 byte directly.</p> <p>When the keypad popup screen appears, specify a field value. See <i>Configuring the APS K2 Byte</i>, page 2–27 for more information.</p> <p><b>Note:</b> <i>The hexadecimal value you specify is transmitted as binary in the K1/K2 bytes.</i></p>
Bridge	Sets the channel (1-15) currently bridged onto the protection line at the far-end.
Architecture	Selects the architecture type at the far-end.

3. Tap **OK** to save the settings and return to the SONET/SDH Setup screen. **Cancel** closes the screen without saving your selections.

When you return to the Setup screen, the selected APS settings become active. You'll also notice the selected K1 and K2 setting in the APS buttons display area. See the sample button and associated Setup screen below.

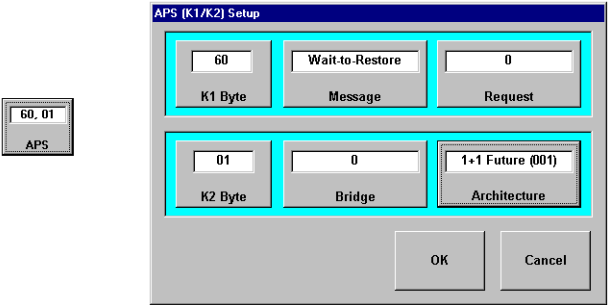

4. Use the APS results screen to view test results (see *APS Measurements*, page 3–16).

## Configuring the APS K1 Byte

The APS K1 byte sets the APS message type and request channel.

**Note:** *The K1/K2 bytes are transmitted as binary notation; therefore, you must determine the appropriate values.*

Bits 1–4 define the APS message type, as follows:

---

### APS K1 Byte Descriptions

---

APS Message	Binary Bit Sequence
No Request	0000
Do Not Revert	0001
Reverse Request	0010

---

APS K1 Byte Descriptions, continued	
APS Message	Binary Bit Sequence
Not Used	0011
Exercise	0110
Not Used	0101
Wait-to-Restore	0110
Not Used	0111
Manual Switch	1000
Not Used	1001
SD-Low Priority	1010
SD-High Priority	1011
SF-Low Priority	1100
SF-High Priority	1101
Forced Switch	1110
Lockout Protect	1111

Bits 5–8 define the request channel that the message applies to (0–15).

## Configuring the APS K2 Byte

The APS K2 byte sets the APS bridge channel, the architecture, and mode.

**Bits 1–4** define the bridge channel (0–15).

**Note:** *During automatic protection switching, traffic on the request channel is routed onto the bridge channel.*

**Bit 5–8** define the APS architecture: **0** for 1+1, **1** for 1:n. and the APS mode, as follows:

---

APS K2 Byte Descriptions	
APS Mode	K2 Bits 6–8 Binary Setting
Future	000 – 011
Unidirection	100
Bidirection	101
LFERF Alarm	110
LAIS Alarm	111

---

## Using the Clear-Channel BERT Button


This section provides instructions for setting up and running a Bit Error Ratio Test (BERT) on a clear channel. During a BER test, a test pattern is transmitted in the SONET/SDH payload. The received pattern is compared to the transmit pattern, and any differences are considered errors.

Note that when the Clear Channel BERT option is selected (meaning there is a check-mark in the button's check box), you cannot tap the ATM toolbar button to go to ATM test configuration screens (see *Using the SONET/SDH Toolbar*, page 1–15).

Follow these steps to run a clear-channel BERT.

**Note:** To transmit an optical signal, be sure to tap the *Laser* button in the *Setup* section. The *Laser* button indicator should turn green.

1. Tap the **Clear Channel BERT** button to display the BERT Setup screen.

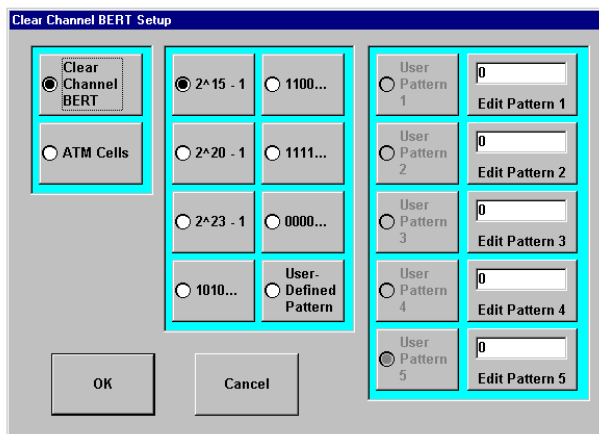

2. Specify whether to insert the BERT data pattern in the SONET/SDH payload (**Clear Channel BERT**) or the ATM cell payload (**ATM Cells**).

**Note:** If you specify ATM, you must use the ATM GUI to select the data pattern.

3. Select a BERT data pattern.

**2<sup>15</sup>-1, 2<sup>20</sup>-1, 2<sup>23</sup>-1** – PRBSs (2<sup>15</sup>-1 is a 2<sup>15</sup>-1 PRBS).

**1010** – A repeating pattern of alternating ones and zeros (1010...).

**1100** – Repeating pattern of two ones alternating with two zeros (1100...).

**All 1s** – A continuous all-ones pattern (1111...).

**All 0s** – A continuous all-zeros pattern (0000...).

**User Defined Pattern** – Lets you define a BERT pattern. Tap a **User Pattern (1 - 5)** button, and use the corresponding **Edit Pattern** button to specify the pattern. Use the popup keypad to enter the pattern. Tap **OK** to save the pattern and return to the Clear Channel BERT Setup screen.

The **Cancel** button on the popup keypad cancels your entry and returns you to the previous screen; the **Clear** button clears the displayed value on the popup keypad.

4. Tap **OK** to activate your selections, or tap **Cancel** to exit the screen without changing anything.

**Note:** *If you entered a User Pattern on the popup keypad, and tapped OK to save your entry, the modified User Pattern is saved even though you tap Cancel on the Clear Channel BERT Setup screen.*

5. Tap the **Start** toolbar button to start the BERT.
6. Use the **BERT** results screen to view test results (see *Viewing BERT Results*, page 3-24).




Viewing Results	3-2
Using the TroubleScan Button	3-2
Using the Results Button	3-3
Using the Other Results Button	3-4
Results Summary Screen	3-6
Alarm Results	3-9
Error Summary	3-10
Pointer Adjustment Results	3-15
APS Measurements	3-16
Section [RS] Overhead Byte Results	3-19
Line [MS] Overhead Results	3-21
Path Overhead Results	3-22
Viewing BERT Results	3-24

---

## Viewing Test Results


# Viewing Results

After configuring and running SONET/SDH tests, you can view results using several methods. When an error or alarm occurs, the indicator on the **TroubleScan** button turns red.

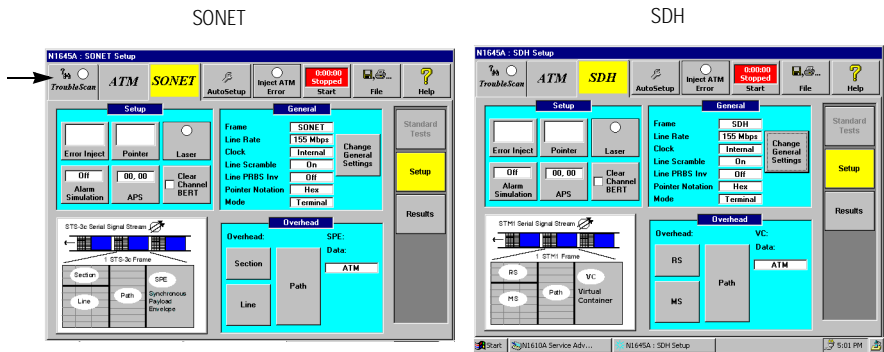

## Using the TroubleScan Button

To view error and alarm information, you can tap the **TroubleScan** button and see Current and History error indicators, and error counts associated with the different alarm and error types (see *Performing a Trouble Scan*, page 1-18).

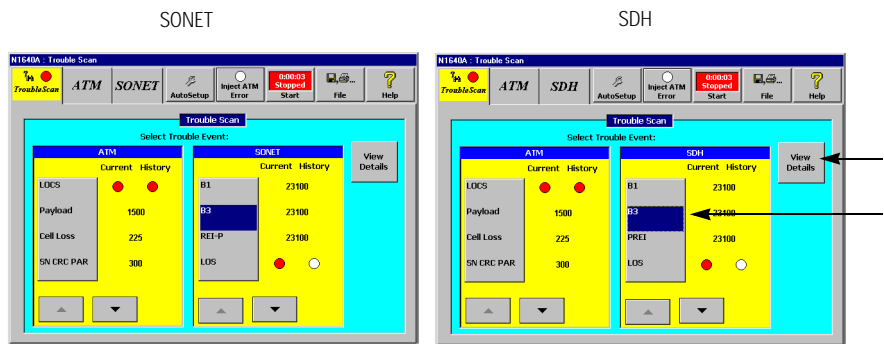


To view more detailed information about a listed alarm or error, you can tap an error-type (such as B3 above) and then the **View Details** button. The associated results screen appears. These are the same results screens you can

## Viewing Results

access when you tap the **Results** button on the SONET/SDH Setup screen (see next section).

### Using the Results Button

Another way to view errors and alarms is to use the **Results** button on the SONET/SDH Setup screen.

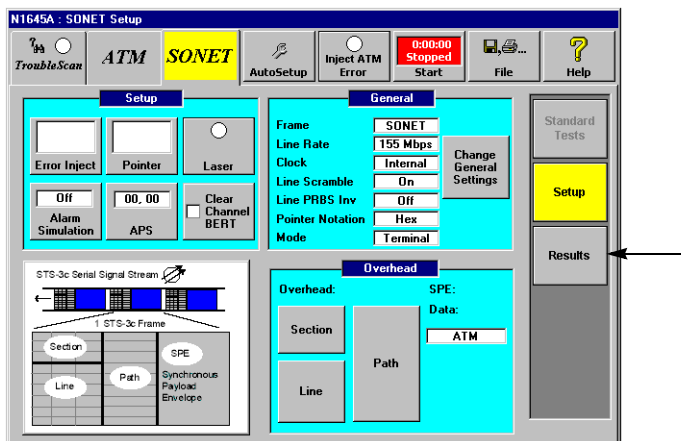


The first screen you see is the Results Summary screen (see *Results Summary Screen*, page 3–6), which provides a summary of the current test results. (You may see one of the other results screens if you were using the TroubleScan feature, or looking at other test results after running a previous test. The application automatically returns to the previously displayed results screen when you tap the **Results** button, or to the Results Summary screen if it's the first time you are accessing test results.)

Notice the **Results** button on the right side becomes an **Other Results** button. You use this button to move between results screens. For example, if you are on the Results Summary screen and you want to see the Error results

Viewing Results

screen, tap the **Other Results** button to go to the Select Results Screen (page 3–4) and then tap the **Errors** button to access the Errors screen (page 3–10).

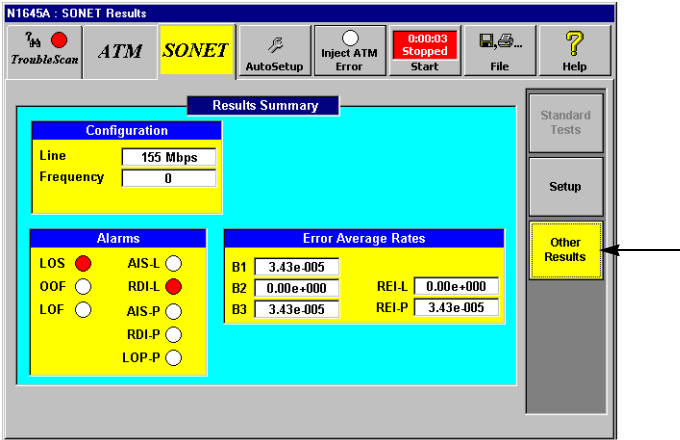


Using the Other Results Button

The **Other Results** menu button lets you access a screen that provides buttons to view additional test results.

SONET

SDH

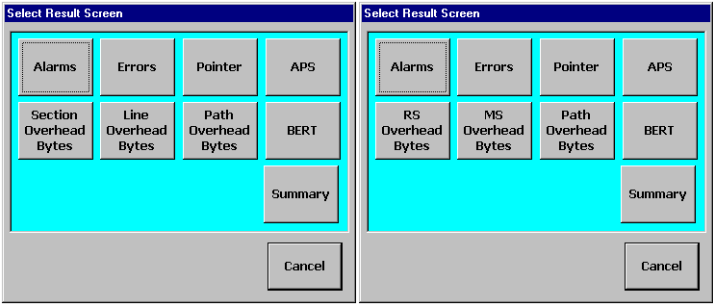


Viewing Results

Other Results Buttons		
Button	Displays	Go to
Alarms	Alarms screen	Alarm Results 3–9
Errors	Errors screen	Error Summary 3–10
Pointers	Pointers screen	Pointer Adjustment Results 3–15
APS	APS (K1/K2) screen	APS Measurements 3–16
Section [RS] Overhead Bytes	Section Overhead screen	Section [RS] Overhead Byte Results 3–19
Line [MS] Overhead Bytes	Line [MS] Overhead screen	Line [MS] Overhead Results 3–21
Path Overhead Bytes	Path Overhead screen	Path Overhead Results 3–22
BERT	BERT screen	Viewing BERT Results 3–24
Summary	Results Summary screen	Results Summary Screen 3–6


## Results Summary Screen

The Results Summary screen displays a summary of the current test results, and provides access to additional test results. To access this screen, tap the **Results** button on the SONET/SDH setup screen.

SONET

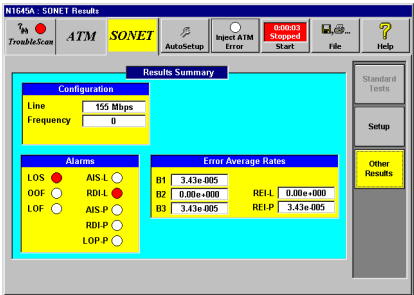

SDH

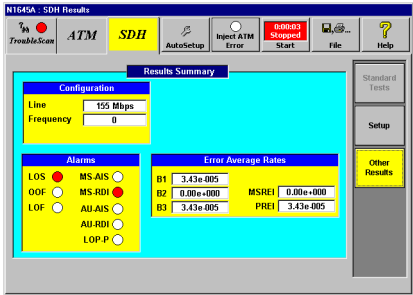

### Configuration Summary

The Configuration section shows the current signal characteristics.

**Line:** Indicates the signal rate for the line connected to the SONET/SDH module.

**Frequency:** Shows the line frequency for the line connected to the SONET/SDH module.

## Alarms Summary

The Alarms section shows any alarms detected while the signal was being transmitted. The following chart describes each type of alarm.

---

### Alarm Descriptions

---

Alarm	Description
LOS	Loss of signal. Declared when between 10 and 100 $\mu$ s of all-zeros pattern is detected. Nominal detect time is 55 $\mu$ s. The alarm is cleared when a non-zero pulse is detected.
OOF	Out-of-frame. Declared when four consecutive error framing patterns are detected.
LOF	Loss of frame synchronization. Declared when an OOF condition is detected for 24 consecutive frames (3 ms). The alarm is cleared after 24 consecutive frames of correct framing patterns.
AIS-L [MS-AIS]	Alarm indication signal-line. Declared when five consecutive K2 bytes are received containing XXXXX111. The alarm is cleared when five consecutive K2 bytes do not contain XXXXX111.
RDI-L [MS-RDI]	Remote defect indication-line. Declared when five consecutive K2 bytes are received containing XXXXX110. The alarm is cleared when five consecutive K2 bytes do not contain XXXXX110.
AIS-P [AU-AIS]	Alarm indication signal-path. Declared when all-ones is received in H1/H2 for three consecutive frames. This alarm is cleared when all-ones is not received in H1/H2 for three consecutive frames.
RDI-P [AU-RDI]	Remote defect indication-path. Declared when ten consecutive frames are received containing bit 5 of the G1 byte set to 1. The alarm is cleared when ten consecutive frames are received containing bit 5 of the G1 byte set to 0.

---

Alarm Descriptions, continued	
Alarm	Description
LOP-P	<p>Loss of pointer. Declared when eight consecutive frames are received that do not meet at least one of the following conditions:</p> <ul style="list-style-type: none"><li>• Normal flag (0110) and valid value (0–782).</li><li>• New data flag (1001) and valid value (0–782).</li><li>• Normal flag and valid value in STS-1 #1, and concatenation indicator (1001XX1111111111) in the other STS-1s.</li></ul> <p>LOP-P is not declared during AIS-P. The alarm is cleared when a consistent, valid pointer is received for three consecutive frames.</p>

---

### Error Average Rates Summary

The Errors section shows whether there are errors in the signal. The following list describes each type of error.

**B1 Error:** Shows the average rate of B1 errors.

**B2 Error:** Shows the average rate of B2 errors.

**B3 Error:** Shows the average rate of B3 errors.

**REI-L [MSREI]:** Shows the line remote error indication for the M0 byte for STS-1 (STM-0) or M1 byte for STS-3 (STM-1).

**REI-P [PREI]:** Shows the path remote error indication for the G1 byte.

Alarm Results

---

# Alarm Results

The Alarms screen shows the number and types of alarms detected in the signal. To view the Alarms summary screen, tap the **Results** button on the SONET/SDH Setup screen, and then tap the **Alarms** button on the Results Summary screen.

SONET

N1645A: SONET Results

Trouble Shoot

ATM

SONET

AutoSetup

Input ATM Error

00:00:03 Stopped Start

File

Help

Alarms

	Current	History	Alarm Sec	Sec Ago
LOS	<div></div>	<div></div>	3	0
DOF	<div></div>	<div></div>	2	0
LOF	<div></div>	<div></div>	0	0
AIS-L	<div></div>	<div></div>	3	0
RDI-L	<div></div>	<div></div>	2	0
AIS-P	<div></div>	<div></div>	3	0
RDI-P	<div></div>	<div></div>	0	0
LOP-P	<div></div>	<div></div>	1	0

Standard Tests

Setup

Other Results

SDH

N1645A - SDH Results

TroubleShoot ATM SDH AutoSetup Input ATM Error 00003 Stopped Start File Help

### Alarms

Alarms				
	Current	History	Alarm Sec	Sec Ago
LOS	●	○	3	0
DOF	○	○	2	0
LOF	○	○	0	0
MS-AIS	○	○	3	0
MS-RDI	●	●	2	0
AU-AIS	○	○	3	0
AU-RDI	○	○	0	0
LOP-P	○	○	1	0

Standard Tests

Setup

Other Results

**Current alarms column:** Red indicates an alarm was detected during the most recent test

**History alarms column:** Red indicates an alarm was detected during the previous test.

**Alarm Sec column:** Shows the number of seconds in which at least one alarm occurred.


**Sec Ago column:** Shows the number of seconds since the alarm last occurred.

For a description of the alarms, see *Alarms Summary*, page 3-7.


# Error Summary

The Error summary screen shows the results of an error-injection test. To view the Errors summary screen, tap the **Results** button on the SONET/SDH Setup screen, and then tap the **Errors** button on the Results Summary screen.

SONET

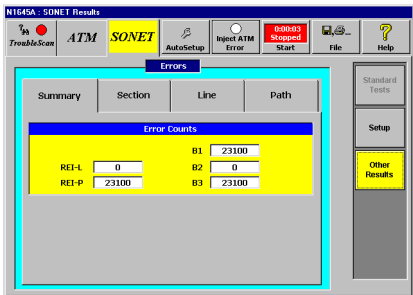

SDH

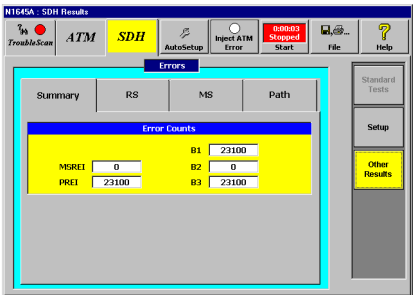

## Summary Tab

The Summary tab counts occurrences of section, line, and path errors.

**REI-L [MSREI]:** Shows the line remote error indication.

**REI-P [PREI]:** Shows the path remote error indication.

**B1 Error:** Shows the content of the B1 byte.


**B2 Error:** Shows the content of the B2 byte.

**B3 Error:** Shows the content of the B3 byte.


Section/RS Tab

The Section/RS tab presents information about B1 parity errors. Tap the **Section [RS]** tab to display the following screen.

SONET

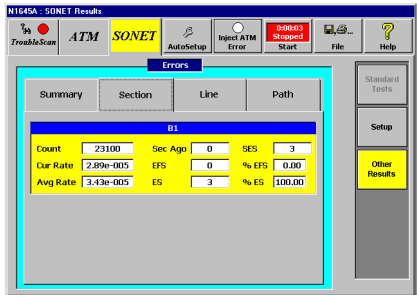

SDH

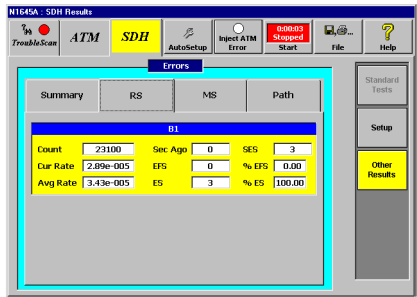

Section/RS, Line/MS, and Path Field Definitions

- Count:** The number of times the error occurred since the test began.
- Cur Rate:** The number of times the error occurred in the past 2.25 seconds.
- Avg Rate:** The average number of times the error occurred during the test.
- Sec Ago:** The number of seconds since the error last occurred.
- EFS:** Error free seconds. The number of seconds in which the error did not occur.
- ES:** Errored seconds. The number of seconds in which the error occurred one or more times.

## Error Summary

**SES:** Severely errored seconds.

**% EFS:** Percent of error-free seconds. EFS expressed as a percentage of the total number of seconds since the beginning of the test.

**% ES:** Percent of errored seconds. ES expressed as a percentage of the total number of seconds since the beginning of the test.

Error Summary

Line/MS Tab

The **Line [MS]** tab shows information about REI-L [MSREI] errors and B2 parity errors. Tap the **Line [MS]** tab to display the following screen. See *Section/RS, Line/MS, and Path Field Definitions*, page 3–11 for definitions of the fields displayed on this screen.

SONET

N1645A : SONET Results

TroubleScan **ATM** **SONET** AutoSetup Inject ATM Error 0:00:03 Stopped Start File Help

Errors

Summary Section **Line** Path

REI-L

Count	0	Sec Ago	0	SES	0
Cur Rate	0.00e+000	EPS	3	% EPS	100.00
Avg Rate	0.00e+000	ES	0	% ES	0.00

B2

Count	0	Sec Ago	0	SES	2
Cur Rate	0.00e+000	EPS	3	% EPS	100.00
Avg Rate	0.00e+000	ES	0	% ES	0.00

Standard Tests

Setup

Other Results

SDH

N1645A : SDH Results

TroubleScan **ATM** **SDH** AutoSetup Inject ATM Error 0:00:03 Stopped Start File Help

Errors

Summary **RS** **MS** Path

MSREI

Count	0	Sec Ago	0	SES	0
Cur Rate	0.00e+000	EPS	3	% EPS	100.00
Avg Rate	0.00e+000	ES	0	% ES	0.00

B2

Count	0	Sec Ago	0	SES	2
Cur Rate	0.00e+000	EPS	3	% EPS	100.00
Avg Rate	0.00e+000	ES	0	% ES	0.00

Standard Tests

Setup

Other Results

Error Summary

Path Tab

The Path tab presents information about REI-P [PREI] errors and B3 parity errors. Tap the **Path** tab to display the following screen. See *Section/RS, Line/MS, and Path Field Definitions*, page 3–11 for definitions of the fields displayed on this screen.

SONET

NT645A : SONET Results

TroubleScan

ATM

SONET

AutoSetup

Inject ATM Error

0:00:03  
Stopped

Start

File

Help

Errors

Summary

Section

Line

Path

REI-P

Count23100

Sec Ago0

SES3

Cur Rate2.89e-005

EFS0

% EFS0.00

Avg Rate3.43e-005

ES3

% ES100.00

B3

Count23100

Sec Ago0

SES3

Cur Rate2.89e-005

EFS0

% EFS0.00

Avg Rate3.43e-005

ES3

% ES100.00

Standard Tests

Setup

Other Results

SDH

NT645A : SDH Results

TroubleScan

ATM

SDH

AutoSetup

Inject ATM Error

0:00:03  
Stopped

Start

File

Help

Errors

Summary

RS

MS

Path

PREI

Count23100

Sec Ago0

SES3

Cur Rate2.89e-005

EFS0

% EFS0.00

Avg Rate3.43e-005

ES3

% ES100.00

B3

Count23100

Sec Ago0

SES3

Cur Rate2.89e-005

EFS0

% EFS0.00

Avg Rate3.43e-005

ES3

% ES100.00


Standard Tests

Setup

Other Results

## Pointer Adjustment Results

The Pointer screen shows you H1/H2 pointer values used in the current test. To view the Pointer summary screen, tap the **Results** button on the SONET/SDH Setup screen, and then tap the **Pointer** button on the Results Summary screen.

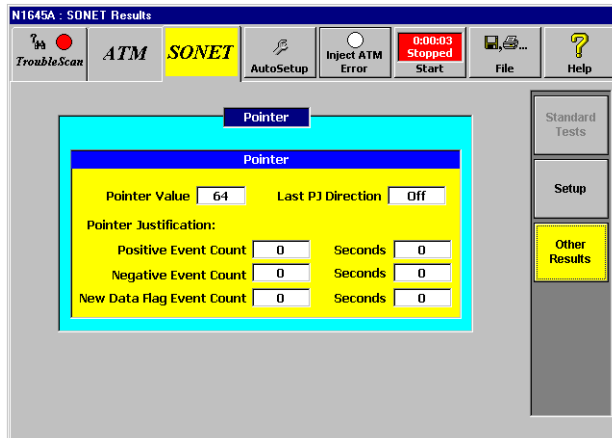

**Pointer value:** The decimal value of the H1/H2 pointer.

**Last PJ Direction:** Last pointer justification direction. The direction (positive or negative) of the previous pointer justification.

**Positive Event Count:** Number of positive pointer adjustments. **Seconds:** The number of seconds during which at least one positive pointer justification occurred.

**Negative Event Count:** Number of negative pointer adjustments. **Seconds:** The number of seconds during which at least one negative pointer justification occurred.

**New Data Flag Event Count:** Number of NDFs set during a test. An NDF indicates an SPE alignment change. Bits 1–4 of the pointer carry the NDF, which permits an arbitrary change in the pointer value due to a change in the payload. **Seconds:** The number of seconds in which an NDF occurred.

## APS Measurements

The APS screen shows you the results of an Automatic Protection Switching (APS) test.

To view the APS summary screen, tap the **Results** button on the SONET/SDH Setup screen, and then tap the **APS** button on the Results Summary screen.

The screenshot shows the 'N1645A : SONET Results' window. At the top, there is a toolbar with buttons: 'TroubleScan' (with a red light icon), 'ATM', 'SONET' (highlighted in yellow), 'AutoSetup' (with a gear icon), 'Inject ATM Error' (with a circle icon), a timer showing '0:00:03 Stopped Start', 'File' (with a floppy disk icon), and 'Help' (with a question mark icon). Below the toolbar, the main area is titled 'APS (K1/K2)' and contains a cyan box with the following sections:

- APS Byte Values**: A yellow box containing two input fields, 'K1' and 'K2', both showing '00'.
- APS Message Decode**: A yellow box containing four input fields: 'Message' (showing 'No Request'), 'Request' (showing '0'), 'Bridge' (showing '0'), and 'Architecture' (showing '1+1 Future (000)').

On the right side of the main area, there is a vertical stack of buttons: 'Standard Tests', 'Setup', and 'Other Results' (highlighted in yellow).

**APS K1/K2 Byte Values:** The hexadecimal values of the K1 and K2 bytes.

**Message:** APS switching mode at the far-end: Indicates one of the modes listed in the tables on page 3–18. The mode is received on bits 6–8 of K2.

**Request:** APS requested channel: The number of the channel (0–15) to which the received condition message applies. This code is received in bits 5 through 8 of the K1 byte.

**Bridge:** APS bridged channel: The number of the channel (1–15) currently bridged onto the protection line at the far end. This code is bits 1 through 4 of the K2 byte.

**Architecture:** APS architecture type at the far-end. The result indicates either **1+1** (K2 bit 5 set to 0) or **1:n** (K2 bit 5 set to 1).

APS Signal State Code (K2 byte, bits 1 through 4)	
APS Message	Binary Bit Sequence
No Request	0000
Do Not Revert	0001
Reverse Request	0010
Not Used	0011
Exercise	0110
Not Used	0101
Wait-to-Restore	0110
Not Used	0111
Manual Switch	1000
Not Used	1001
SD-Low Priority	1010
SD-High Priority	1011
SF-Low Priority	1100
SF-High Priority	1101
Forced Switch	1110
Lockout Protect	1111

APS Measurements


APS Switching Mode Code (K2 byte, bits 6 through 8)	
APS Mode	Binary Bit Sequence
Future	000 – 011
Unidirection	100
Bidirection	101
RDI-L	110
AIS-L	111

## Section [RS] Overhead Byte Results


The Section/RS Overhead screen shows you the received SONET Section Overhead (SOH) bytes or the SDH Regenerator Section Overhead (RSOH) bytes.

To view the Section/RS Overhead screen, tap the **Results** button on the SONET/SDH Setup screen, and then tap the **Section [RS] Overhead Bytes** button on the Results Summary screen. See *Section/RS Overhead*, page 2–6 for more information about the Section/RS overhead bytes.


SONET 155 Mbps

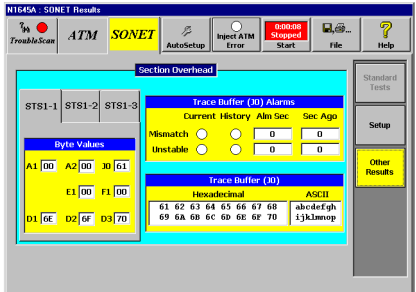


SONET 51Mbps

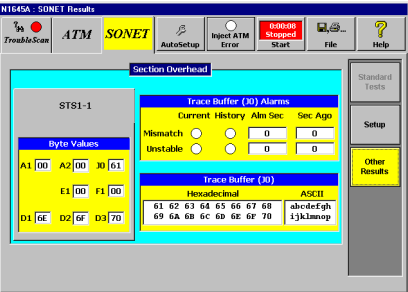

SDH 155 Mbps

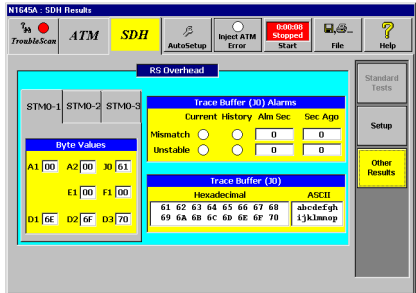

SDH 51Mbps

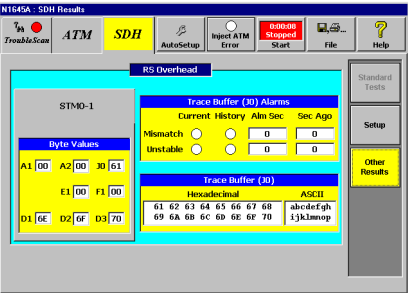

**STS1/STM0 Byte Values:** Shows you the values received for the SOH [RSOH] bytes in the STM1/STM0 signals. See *Section/RS Overhead*, page 2–6 for a description of each overhead byte.

## Section [RS] Overhead Byte Results

**Trace Buffer (J0) Alarms:** The Mismatch Current LED turns red when the J0 message received does not match the expected J0 message set with the **Edit Trace Buffer** button on the Section [RS] Overhead Setup screen (see **Section/RS Overhead**, page 2–6).

The *Unstable* Current indicator turns red when the received J0 message has not matched for eight consecutive messages. The History indicator turn red to indicate the condition occurred in the previous test.

The *Alm Sec* fields show the number of seconds during which at least one mismatch or unstable condition was detected.

The *Sec Ago* fields show the number of seconds that have passed since the last mismatch or unstable condition was detected.

**Trace Buffer (J0):** Shows the HEX and ASCII J0 trace buffer.


Line [MS] Overhead Results

Line [MS] Overhead Results


The Line/MS Overhead screen shows you the received LOH (MSOH) bytes. To view the Line/MS Overhead screen, tap the **Results** button on the SONET/SDH Setup screen, and then tap the **Line [MS] Overhead Bytes** button on the Results Summary screen.

Tap the STS1/STM0 tabs to see the additional byte settings. See *Line/MS Overhead*, page 2–10 for a description of the LOH bytes.


SONET 155 Mbps

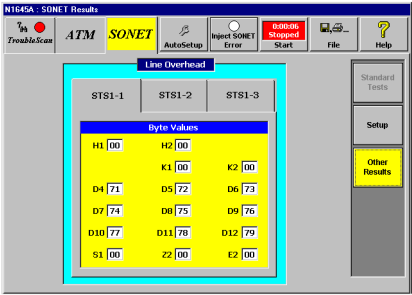


SONET 51Mbps

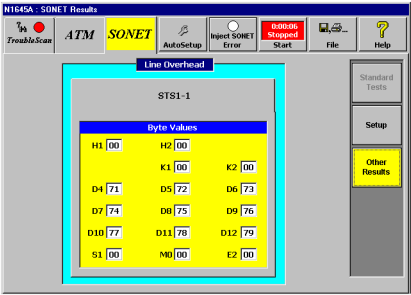

SDH 155 Mbps

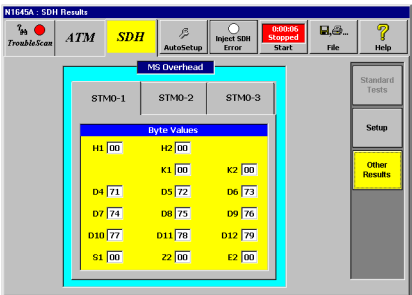


SDH 51Mbps

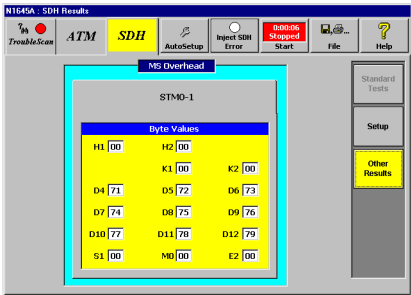


## Path Overhead Results

The Path Overhead screen shows you the received POH bytes. To view the Path Overhead screen, tap the **Results** button on the SONET/SDH Setup screen, and then tap the **Path Overhead Bytes** button on the Results Summary screen. See *Path Overhead*, page 2–12 for a description of the POH bytes.

SONET

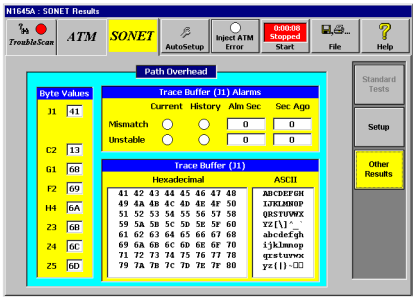

SDH

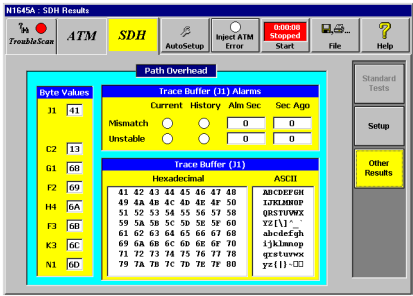

**Byte Values:** Shows the values received for the POH bytes. See *Path Overhead*, page 2–12 for a description of each overhead byte.

**Trace Buffer (J1) Alarms:** The *Mismatch* Current indicator turns red when the J1 message received does not match the expected J1 message set with the **Edit Trace Buffer** button on the Path Overhead Setup screen (see *Path*

## Path Overhead Results

***Overhead***, page 2–12). The *History* indicator turn red to indicate the condition occurred in the previous test.

The *Unstable* Current indicator turns red when the J1 message received has not matched for eight consecutive messages. The *History* indicator turn red to indicate the condition occurred in the previous test.


The *Alm Sec* fields show the number of seconds during which at least one mismatch or unstable condition was detected.

The *Sec Ago* fields show the number of seconds that have passed since the last mismatch or unstable condition was detected.

**Trace Buffer (J1):** Shows the HEX and ASCII J1 trace buffer

## Viewing BERT Results

The BERT screen presents the current SONET/SDH Clear Channel BERT results. To view the BERT summary screen, tap the **Results** button on the SONET/SDH Setup screen, and then tap the **BERT** button on the Results Summary screen.

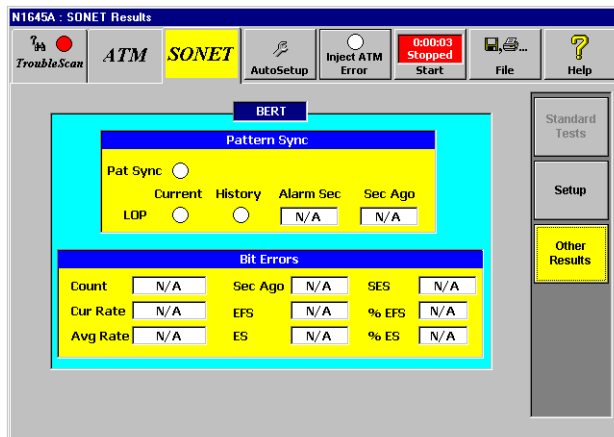

### Pattern Synchronization

**Pat Sync:** This LED lights to indicate that the tester has synchronized on the receive signal pattern.

**LOP:** These LEDs indicate a loss of data pattern.

- **Current** LED turns red if an LOP error occurs.
- **History** LED turns red if there is a previous occurrence of an LOP error.
- **Alarm Sec** shows the number of seconds during which an LOP error occurred during a test.
- **Sec Ago** shows the number of seconds since the LOP error last occurred.

## Bit Errors

These fields provide information about bit errors detected during the test.

**Count:** The number of bit errors that occurred since the test began.

**Cur Rate:** the number of bit errors in the past 2.25 seconds.

**Avg Rate:** The average number of bit errors that occurred during the test.

**Sec Ago:** The number of seconds since the last bit error.

**EFS Error Free Seconds:** The number of seconds without a bit error.

**ES Errored Seconds:** The number of seconds in which at least one bit error occurred.

**SES Severely Errored Seconds:** The number of seconds in which more than one bit error occurred.

**% EFS:** A percentage of the total number of seconds since the beginning of the test.

**% ES:** A percentage of the total number of seconds since the beginning of the test.



SCPI Command Syntax	4-2
Programming a SONET/SDH Test	4-6
SCPI Return Codes	4-8
General Configuration Commands	4-11
Error Injection Commands	4-18
Alarm Commands	4-22
Pointer Control Commands	4-25
Section[RS], Line[MS], and Path Overhead Commands	4-28
Entering User-defined BERT Patterns	4-40
Using Query Commands to Retrieve Results	4-42
General Query Commands	4-43
SONET/SDH Alarm Query Commands	4-44
SONET/SDH Error Query Commands	4-49
Pointer Adjustment Query Commands	4-56
Querying Overhead Results	4-57
User-defined Payload Pattern Query Commands	4-64
Querying the TroubleScan Status	4-64

---


# SONET/SDH SCPI Commands

---

## SCPI Command Syntax

Standard Commands for Programmable Instruments (SCPI) is a command language used to control electronic test and measurement plug-in modules. SCPI commands are sent from a PC to a Service Advisor's test module to configure and perform tests, and gather data.

Each SCPI command consists of a command-set prefix (such as ATM), a root node, one or more lower level nodes, followed by an applicable parameter. (There is a space between the last level node and the parameter.)

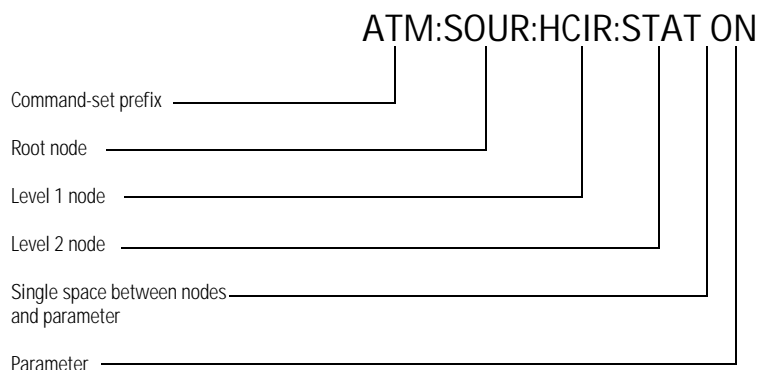

The test module uses this structure to interpret the SCPI command. Generally, each root and lower level node is preceded by a colon (:), but the command-set prefix is not. This helps the instrument correctly parse the command's component parts.

For example, you can enter the following command:

`ATM:SOUR:BGNDCH:OAM:TYP ENDT`

The ATM prefix indicates the command is referencing the ATM or SONET command set, the root node is :SOURce, the level 1 node is :BGNDCH, the level 2 node is :OAM, the level 3 node is :TYP, and the associated parameter is ENDT.

## Command-Set Prefix

The Tablet (the Service Advisor with a SONET and ATM module installed) uses the command-set prefix (ATM) to determine which plug-in module to access to initiate a SCPI command.

## Root Nodes

The following root nodes are supported by the SONET/SDH test module.

SONET/SDH Root Nodes	
Root Node	Description
:SElect	Lets you set up signal paths in the test module.
:SOURce	Lets you set the transmitter functions for the test module.
:INITiate	Starts running a test.
:FETCh	Lets you retrieve test results and configured settings from the SONET/SDH module output queue.
:ABORt	Stops a test and freezes the test results.

### Long Form and Short Form

SCPI commands have both a long and short version; for example :SOURCE and :SOUR. The Service Advisor responds to either version, but will not respond to variations of either version, such as :SOURC.

The SCPI interface does not differentiate between upper-case and lower-case letters, but only the long *or* short form of a command is valid. Notice the examples in the following table.

Correct Entry	Incorrect Entry
:SOURCE	: SOURC
:SourCe	:sou
:sour	:Sourc

### Using Parameters

Parameters provide a setting for the command (for example, ON or OFF). They follow the nodes of commands and are listed in angle brackets (< >).

Multiple command parameter are separated by a vertical bar (|). Specify only one parameter when you issue the command.

### Separating Commands and Parameters

The following table lists the different separators you can use between commands and parameter.

Command Separators		
To Separate...	Use...	Example
A command-set prefix from a root node	Colon (:)	ATM:INIT
A root node from a lower level node	Colon (.)	ATM.TEST

**SCPI Command Syntax**

---

**Command Separators, continued**

---

To Separate...	Use...	Example
A parameter from a command	Space	ATM:TEST STAN
Multiple commands entered in a command string	Semicolon (;)	ATM:TEST STAN;ATM:INIT

---

**Sending Multiple Commands in a Command String**

You can send multiple SCPI commands in the same command string. The commands execute one at a time, in the order in which you have entered them. To separate the commands, use a semicolon (;). See the example in the table above.

**Note:** *You must always enter the ATM:\*RST command by itself on a command-line.*

---

## Programming a SONET/SDH Test

This section explains how to reset a Service Advisor before running a test, provides a guideline for entering commands in the proper sequence, and contains some sample tests you can enter to become familiar with programming tests.

### Resetting Your Test Set

Before you program a SONET/SDH test, you should always enter the `ATM:*RST` command to reset the test module. When you issue this command, the SONET/SDH test module:

- sets all SONET/SDH test results and configuration values to their defined default setting. Default settings are listed in the individual command descriptions.
- clears the SCPI control registers in the test module
- stops a SONET/SDH test if one is currently running

When you become familiar with the SCPI default settings you will notice that, in many cases, you can enter just a few commands to run a test or make a measurement.

**Note:** *If you enter `*RST` without specifying a command-set prefix, you get an error message.*

## Command Sequence

When programming a SONET/SDH test with SCPI commands, you always:

- reset the tester to default settings
- select the type of test you want to run
- configure general SONET/SDH parameters
- configure the parameters to control error-injection, make a pointer adjustment, configure the alarm simulation feature and automatic protection switching testing, and select a BERT pattern if you want to run a bit-error ration test
- initiate the test
- retrieve test results
- abort the test

---

# SCPI Return Codes

To determine if the command you just entered used the proper format, or if an error occurred while processing the command, type:

```
ATM:SYSTem:ERRor ?
```

Refer to the following table to see if the command executed successfully, or if an error occurred.

---

SCPI Return Codes	
Code	Meaning
0	Command executed successfully.
-100	Command error.
-109	Required parameter missing.
-112	Command keyword too long.
-120	Parameter value out-of-range.
-221	Invalid mode setting for command.
-223	Command line longer than 80 characters.
-350	Error lost due to overflow in error queue.

# Basic Test Commands

This section describes the SCPI commands you use with most tests.  
See *Command Sequence*, page 4–7 for more information about the sequencing of the SONET/SDH SCPI commands.

Basic SONET/SDH Test Commands	
Root	Level 1
ATM:SElect	:TEST <test sequence>
ATM:INITiate	
ATM:ABORT	

:SElect:TEST <test sequence>

---

## :SElect:TEST <test sequence>

This command selects the type of test or test sequence you want the test module to run.

---

### ATM:SElect:TEST <test sequence> Parameters

Test Sequence	Description
STANdard	Run the standard ATM and SONET/SDH tests.
CCAPture	Run the Cell capture test sequence.
ASETup	Run the Auto Setup test (see <i>Performing an Auto Setup</i> , page 1–17).
CSCAN	Run the Channel Scan test sequence.

**Default:** STANdard

---

## :INITiate

This command starts the selected test, resets results counters on the test module to zero, and enables results processing. If you are running a STANdard, CCAPture, or CSCAN test, Trouble Scan is automatically started (see *Performing a Trouble Scan*, page 1–18).

**Note:** You check the state of the test by entering the *ATM:FETCH:TEST:STATE* command.

---

## :ABORT

This command stops the current test and retains the current processed results.

:ABORT

# General Configuration Commands

This section describes the :SOURce commands, which are used to configure the single foreground, the four background, and the single idle transmit channel circuits.

ATM:SOURce Command Structure		
Root	Level 1	Level 2
ATM:SOURce	:LASer <ON   OFF>	
	:FRAMe	:TYPE <SONet   SDH>
		:SCRamble <ON   OFF>
	:TRANsmit	:TIMing <INTernal   REcovered>
		:MAP <TERMinal   PTHRu>
	:SPE	:TYPE <ATM   BERT>
		:DATa <BERT data type>
		:PATtern <BERT pattern>
		:PINVert <ON   OFF>

**:SOURce:LASer <ON | OFF>**

---

## **:SOURce:LASer <ON | OFF>**

This command turns the transmit laser ON and off. If you're testing an optical signal, turn the laser ON.

**Default:** OFF

---

## **:SOURce:FRAME:TYPE <SONet | SDH>**

This command indicates the frame format used for the SONET signal.

**Default:** SONet

---

## **:SOURce:FRAME:SCRamble <ON | OFF>**

This command turns the signal scrambler ON or off.

**Default:** OFF

:SOURce:TRANsmit:TIMing <INTernal | RECovered>

---

# **:SOURce:TRANsmit:TIMing <INTernal | RECovered>**

This command indicates the type of clocking you want to use.

---

## **ATM:SOURce:TRANsmit:TIMing <clock type> Parameters**

Clock Type	Description
INTernal	Timing is based on the Service Advisor's internal oscillator.
RECovered	Timing is derived from the receive SONET signal.

**Default:** INTernal

---

# **:SOURce:TRANsmit:MAP <TERMinal | PTHRu>**

This command indicates the type of transmit signal mapping you want to use.

---

## **ATM:SOURce:TRANsmit:MAP <mapping> Parameters**

Mapping	Description
TERMinal	Terminal mode (independent TX and RX)
PTHRu	Pass-thru mode where TX = RX

**Default:** TERMinal

---

## :SOURce:SPE:TYPe <ATM | BERT>

This command sets the Synchronous Payload Envelope (SPE) type.

**Notes:** *You cannot set the SPE type to ATM when the error injection type is BPAY. You cannot set the SPE type to BERT when the error injection type is PAYL. See :SOURce:ERRor:TYPe <error type>, page 4–19.*

**Default:** ATM

---

## :SOURce:SPE:DATa <*data type*>

This command sets the Synchronous Payload Envelope clear channel BERT data type.

---

### ATM:SOURce:SPE:DATa <*data type*> Parameters

Data Type	Description
0'S	All zeros.
1'S	All ones.
32BIT	32-bit user-defined pattern specified in the :SOUR:SPE:PATT command (see next command).
2^15-1	Pseudorandom bit sequence (PRBS). For example, 2^15-1 is a 2 <sup>15</sup> –1 PRBS. This pattern is used to stress clock recovery circuits with a maximum of 14 consecutive zeros.
2^20-1	Standard stress pattern.
2^23-1	Standard stress pattern that is similar to customer data.
1010	Bit pattern of alternating ones and zeros, starting with one.
1100	Bit pattern of two ones, followed by two zeros.

**Default:** 2^15-1

**:SOURce:SPE:PATtern** <data pattern>

---

**:SOURce:SPE:PATtern** <*data pattern*>

This command sets the Synchronous Payload Envelope clear channel BERT data pattern.

**Parameter Range:** 0 to 0xFFFFFFFF

**Default:** 0x01234567

---

**:SOURce:SPE:PINVert** <ON|OFF>

Sets the Synchronous Payload Envelope clear channel BERT PRBS Invert ON or off.

**Default:** OFF

# Action Injection Commands

This section describes the :SOURce commands used to select the type of pointer adjustment you want to use for a test.

Action-injection Command Structure		
Root	Level 1	Level 2
ATM:SOURce	:ACTion	:TYPe <action type>
		:STATe <ON   OFF>

**:SOURce:ACTion:TYPe** <action type>

---

**:SOURce:ACTion:TYPe** <*action type*>

This command sets the type of pointer or error you want to inject into the network.

---

**ATM:SOURce:ACTion:TYPe** <*action type*> Parameters

---

Action Type	Description
OFF	No action
PoiNTeR	Pointer adjustment
MISinsert	Misinserted cell injection
SONet	SONET error-injection
ATM	ATM error-injection
SBURst	ATM cell burst injection

**Default:** OFF

---

**:SOURce:ACTion:STATe** <OFF | ON>

This command turns the action configured with the ATM:SOUR:TYP command ON or off.

**IDefault:** OFF

# Error Injection Commands

This section describes the :SOURce commands used to inject errors into the network in order to measure how network elements respond

Error-injection Command Structure		
Root	Level 1	Level 2
ATM:SOURce	:ERRor	:TYPe <error type>
		:RATE <error rate>

:SOURce:ERRor:TYPe <*error type*>

This command sets the type of error you want to inject into the network.

Error Types	
Error Type	Description
A1A2	SONET frame error
B1	SONET BIP B1 error
B2	SONET BIP B2 error
B3	SONET BIP B3 error
REIL	SDH line remote event indicator error
REIP	SDH path remote event indicator error
BPAYload	SONET BERT payload error Use this error-type only when the SONET synchronous payload envelope type is set to BERT (see :SOURce:SPE:TYPe <ATM / BERT>, page 4–14).
HPoiNTeR	SONET H-pointer error

**Default:** B1

**:SOURce:ERRor:TYPe** <error type>

## Supported Error-rates for Each Type of Error

The following chart lists the error rates that you can use with each type of error. Use this chart when configuring the error-injection parameters.

See **:SOURce:ERRor:RATE** <error rate>, page 4–21 for a description of the error rates.

Supported Error Rates	
Error Type	Valid Error Rates
A1A2	SINGLE, CONTInuous
B1	SINGLE, CONTInuous
B2	SINGLE, CONTInuous
B3	SINGLE, CONTInuous
REIL	SINGLE, 10E4 – 10E8
REIP	SINGLE, 10E4 – 10E8
BPAYload	SINGLE, 10E3, 10E6
HPoiNTeR	SINGLE, CONTInuous

**:SOURce:ERRor:RATE** <error rate>

---

**:SOURce:ERRor:RATE** <*error rate*>

This command sets the error-injection rate. See *Supported Error-rates for Each Type of Error*, page 4–20 for information about the error-types that use the following error rates.

---

**ATM:SOURce:ERRor:RATE** <*error rate*> Parameters

---

Error Rate	Description
SINGLE	Injects a single error into the BERT payload pattern.
CONTinuous	Continuously injects errors until you enter the ATM:ABORT SCPI command.
10E3 – 10E8	Injects errors into the BERT payload pattern at the selected rate. For example, 1.E–3 is $1 \times 10^{-3}$ , or 1 bit error every 1,000 bits.

**Default:** SINGLE

# Alarm Commands

This section describes the :SOURce commands used to set the different SONET/SDH alarms ON or off.

Alarm Command Structure		
Root	Level 1	Level 2
ATM:SOURce	:ALARm	:LOS <ON   OFF>
		:LOF <ON   OFF>
		:OOF <ON   OFF>
		:AISL <ON   OFF>
		:RDIL <ON   OFF>
		:AISP <ON   OFF>
		:RDIP <ON   OFF>
		:LOPP <ON   OFF>

**:SOURce:ALARm:LOS <ON | OFF>**

---

**:SOURce:ALARm:LOS <ON | OFF>**

This command turns the Loss of Signal alarm insertion ON or off.

**Default:** OFF

---

**:SOURce:ALARm:LOF <ON | OFF>**

This command turns the Loss of Frame alarm insertion ON or off.

**Default:** OFF

---

**:SOURce:ALARm:OOF <ON | OFF>**

This command turns the Out of Frame alarm insertion ON or off.

**Default:** OFF

---

**:SOURce:ALARm:AISL <ON | OFF>**

This command turns the line Alarm Indicator Signal alarm insertion ON or off.

**Default:** OFF

---

**:SOURce:ALARm:RDIL <ON | OFF>**

This command turns the Line Remote Defect Indicator insertion ON or off.

**Default:** OFF

**:SOURce:ALARm:AISP <ON | OFF>**

---

**:SOURce:ALARm:AISP <ON | OFF>**

This command turns the Path Alarm Indicator Signal insertion ON or off.

**Default:** OFF

---

**:SOURce:ALARm:RDIP <ON | OFF>**

This command turns the Path Remote Defect Indicator insertion ON or off.

**Default:** OFF

---

**:SOURce:ALARm:LOPP <ON | OFF>**

This command turns the Path Loss of Pointer Indicator insertion ON or off.

**Default:** OFF

# Pointer Control Commands

This section describes the :SOURce commands used to increment and decrement the pointer value, or cause a new data flag (NDF) condition.

Pointer Adjustment Command Structure			
Root	Level 1	Level 2	Level 3
ATM:SOURce	:POINTer	:ADJust	:TYPE <type>
		:NDFlag <NDF value>	
		:VALue <pointer data value>	

:SOURce:POINTer:ADJust:TYPe <pointer adjustment>

---

:SOURce:POINTer:ADJust:TYPe <*pointer adjustment*>

This command lets you increment or decrement the pointer value, or cause a positive pointer adjustment condition.

---

ATM:SOURce:POINTer:ADJust:TYPe <*pointer adjustment*> Parameters

Pointer Adjustment	Description
OFF	Turns off the pointer-adjustment feature.
POSitive	Causes a positive pointer adjustment by incrementing the H1/H2 pointer value.
NEGative	Causes a negative pointer adjustment by decrementing the H1/H2 pointer value.
NDFlag	Indicates that you want to use the NDF value set with the :SOUR:POINT:NDFL command (see page 4–26).
NPValue	Indicates that you want to use the pointer data value set with the :SOUR:POINT:VAL command (see page 4–27)

**Default:** POSitive

---

:SOURce:POINTer:NDFLag <*NDF value*>

This command sets the NDF value. Make sure you include the :SOUR:POINT:ADJ NDF command (see page 4–26).

**Parameter Range:** 0 to 15 (0xF)

**Default:** 9

**:SOURce:POINTer:VALue** <pointer data value>

---

**:SOURce:POINTer:VALue** <*pointer data value*>

This command sets the pointer value. Make sure you include the :SOUR:POINT:ADJ NDV command (see page 4–26).

**Parameter Range:** 0 to 1023 (0x3FF)

**Default:** 522 (0x20A)

:SOURce:POINter:VALue <pointer data value>

# Section[RS], Line[MS], and Path Overhead Commands

This section describes the :SOURce commands used to set the overhead bytes in the outgoing SONET or SDH frames.

Section, Line, and Path Command Structure		
Root	Level 1	Level 2
ATM:SOURce	:SECTion	:TXMessage <transmit trace message>
		:RXMessage <receive trace message>
		:TXBYte <JO section byte>
		:BENable <ON   OFF>
		:SENable <ON   OFF>
		:D1 <value>
		:D2 <value>
		:D3 <value>
		:Z0-2 <value>
		:Z0-3 <value>
		:E1 <value>
		:F1 <value>
	:LINE	:S1 <sync status>
		:K1   K2 <APS/alarm information>
		:D4   D5   D6   D7   D8   D9   D10   D11   D12 <DCC>
		:Z1-2 <value>
		:Z1-3 <value>
		:Z2-1 <value>
		:Z2-2 <value>

**:SOURce:POINTer:VALue** <pointer data value>

Section, Line, and Path Command Structure, continued		
Root	Level 1	Level 2
ATM:SOURce	:LINE	:M1 <value>
		:E2 <value>
	:PATH	:TXMessage <transmit trace message>
		:RXMessage <receive trace message>
		:TXBYte <JO section byte>
		:BENable <ON   OFF>
		:SENable <ON   OFF>
		:C2 <payload label>
		:G1 <status>
		:F2 <user channel>
		:H4 <phase indicator>
		:Z3   :Z4   :Z5 <future growth>

:SOURce:SECTion:TXMessage <transmit trace message>

---

:SOURce:SECTion:TXMessage <*transmit trace message*>

This command sets the J0 section transmit trace message (see *Section/RS Overhead*, page 2–6).

**Parameter Range:** 1 to 16 characters, consisting of any of the valid 7-bit ASCII characters

**Default:** 16 ASCII zeros

---

:SOURce:SECTion:RXMessage <*receive trace message*>

This command sets the expected J0 section receive trace message (see *Section/RS Overhead*, page 2–6).

**Parameter Range:** 1 to 16 characters, consisting of any of the valid 7-bit ASCII characters

**Default:** 16 ASCII zeros

---

:SOURce:SECTion:TXBYte <*value*>

This command sets the J0 section data byte (see *Section/RS Overhead*, page 2–6).

**Parameter Range:** 0 to 255

**Default:** 1

**:SOURce:SECTion:BEName** <ON | OFF>

---

**:SOURce:SECTion:BEName** <ON | OFF>

This command turns the trace buffer ON and off.

---

**ATM:SOURce:SECTion:BEName** <*buffer state*> Parameters

---

Buffer State	Description
ON	Indicates that the trace buffer can receive characters.
OFF	Indicates that the trace buffer cannot receive characters.

---

**Default:** OFF

---

**:SOURce:SECTion:SEName** <ON | OFF>

This command turns the trace buffer synchronization ON and off.

---

**ATM:SOURce:SECTion:SEName** <*buffer state*> Parameters

---

Buffer State	Description
ON	Indicates that the trace buffer synchronization is active.
OFF	Indicates that the trace buffer synchronization is not active.

---

**Default:** OFF

:SOURce:SECTIon:D1 <value>

---

## :SOURce:SECTIon:D1 <value>

This command sets byte 1 on the data communications channel.

**Parameter Range:** 0 to 255

**Default:** 0

---

## :SOURce:SECTIon:D2 <value>

This command sets byte 2 on the data communications channel.

**Parameter Range:** 0 to 255

**Default:** 0

---

## :SOURce:SECTIon:D3 <value>

This command sets byte 3 on the data communications channel.

**Parameter Range:** 0 to 255

**Default:** 0

---

## :SOURce:SECTIon:Z0-2 <value>

This command sets a future growth byte.

**Parameter Range:** 0 to 255

**Default:** 2

**:SOURce:SECTIon:Z0-3 <value>**

---

**:SOURce:SECTIon:Z0-3 < *value* >**

This command sets a future growth byte.

**Parameter Range:** 0 to 255

**Default:** 3

---

**:SOURce:SECTIon:E1 < *value* >**

This command sets the orderwire byte.

**Parameter Range:** 0 to 255

**Default:** 0

---

**:SOURce:SECTIon:F1 < *value* >**

This command sets the User Channel byte.

**Parameter Range:** 0 to 255

**Default:** 0

---

**:SOURce:LINE:S1 <*sync status*>**

This command sets the line synchronization status.

**Parameter Range:** 0 to 255

**Default:** 0

:SOURce:LINE:K1 | K2 <APS/alarm information>

---

:SOURce:LINE:K1 | K2 <*APS/alarm information*>

This command sets the line automatic protection switch. If you use the :SOUR:LINE:K1 command, you should also include the :SOUR:LINE:K2 command, and vice versa (see *Configuring Automatic Protection Switching*, page 2–23).

**Parameter Range:** 0 to 255

**Default:** 0

---

:SOURce:LINE:D4|D5|D6|D7|D8|D9|D10|D11|D12  
<*DCC*>

This command sets the line data communication byte.

**Parameter Range:** 0 to 255

**Default:** 0

---

:SOURce:LINE:Z1-2 <*value*>

This command sets a future growth byte.

**Parameter Range:** 0 to 255

**Default:** 2

---

:SOURce:LINE:Z1-3 <*value*>

This command sets a future growth byte.

**Parameter Range:** 0 to 255

**Default:** 0

**:SOURce:LINE:Z2-1** <value>

---

**:SOURce:LINE:Z2-1** < *value* >

This command sets a future growth byte.

**Parameter Range:** 0 to 255

**Default:** 0

---

**:SOURce:LINE:Z2-2** < *value* >

This command sets a future growth byte.

**Parameter Range:** 0 to 255

**Default:** 0

---

**:SOURce:LINE:M1** < *value* >

This command sets the Far End Block Error (FEBE) byte.

**Parameter Range:** 0 to 255

**Default:** 0

---

**:SOURce:LINE:E2** < *value* >

This command sets the orderwire byte.

**Parameter Range:** 0 to 255

**Default:** 0

:SOURce:PATH:TXMessage <transmit trace message>

---

:SOURce:PATH:TXMessage <*transmit trace message*>

This command sets the J1 path transmit trace message (see *Path Overhead*, page 2–12).

**Parameter Range:** 1 to 64 characters, consisting of any of the valid 7-bit ASCII characters

**Default:** 64 ASCII zeros

---

:SOURce:PATH:RXMessage <*receive trace message*>

This command sets the expected J1 path receive trace message (see *Path Overhead*, page 2–12).

**Parameter Range:** 1 to 64 characters, consisting of any of the valid 7-bit ASCII characters

**Default:** 64 ASCII zeros

---

:SOURce:PATH:TXBYte <*value*>

This command sets the J1 path data byte (see *Path Overhead*, page 2–12).

**Parameter Range:** 0 to 255

**Default:** 1

**:SOURce:PATH:BENable <ON | OFF>**

---

**:SOURce:PATH:BENable <ON | OFF>**

This command turns the trace buffer ON and off.

---

**ATM:SOURce:PATH:BENable <buffer state> Parameters**

---

Buffer State	Description
ON	Indicates that the trace buffer can receive characters.
OFF	Indicates that the trace buffer cannot receive characters.

---

**Default:** OFF

---

**:SOURce:PATH:SENable <ON | OFF>**

This command turns the trace buffer synchronization ON and off.

---

**ATM:SOURce:PATH:SENable <buffer state> Parameters**

---

Buffer State	Description
ON	Indicates that the trace buffer synchronization is active.
OFF	Indicates that the trace buffer synchronization is not active.

---

**Default:** OFF

---

:SOURce:PATH:C2 <*payload label*>

This command sets the payload type label.

---

Payload Table Labels

---

Payload Label	Description
00	Unequipped
01	Equipped, non-specific payload
02	Floating VT type
03	Locked VT type
04	Asynchronous mapping for DS3
12	Asynchronous mapping for DS4NA
13	Mapping for ATM
14	Mapping for DQDB
15	Asynchronous mapping for FDDI

---

**Parameter Range:** 0 to 255

**Default:** 13

**:SOURce:PATH:G1 <status>**

---

**:SOURce:PATH:G1 <*status*>**

This command sets the path status byte.

**Parameter Range:** 0 to 255

**Default:** 0

---

**:SOURce:PATH:F2 <*user channel*>**

This command sets the path user channel.

**Parameter Range:** 0 to 255

**Default:** 0

---

**:SOURce:PATH:H4 <*phase indicator*>**

This command sets the path cell offset indicator.

**Parameter Range:** 0 to 255

**Default:** 0

---

**:SOURce:PATH:Z3 | :Z4 | :Z5 <*future growth*>**

This command sets the path growth #1 byte.

**Parameter Range:** 0 to 255

**Default:** 0

# Entering User-defined BERT Patterns

This section describes the :SOURce commands used to configure five user-defined BERT payload patterns, which can be used as the foreground channel cell payload or the BERT payload.

User-defined BERT Pattern Command Structure			
Root	Level 1	Level 2	Level 3
ATM:SOURce	:PATtern	:SON	:BERT1 <pattern>
			:BERT2 <pattern>
			:BERT3 <pattern>
			:BERT4 <pattern>
			:BERT5 <pattern>

:SOURce:PATtern:SON:BERT1|BERT2|BERT3 |BERT4|BERT5 <pattern>

---

:SOURce:PATtern:SON:BERT1|BERT2|BERT3  
|BERT4|BERT5 <*pattern*>

Use this command to configure a 32-bit user-defined pattern, which can be used as the foreground channel cell payload or BERT payload.

**Parameter Range:** 0 to 0xFFFFFFFF

**Default:** 0

:SOURce:PATtern:SON:BERT1|BERT2|BERT3|BERT4|BERT5 <pattern>

## Using Query Commands to Retrieve Results

You can enter all the SCPI commands, except :INIT and :ABORT, as *query* commands. A query command looks like the following:

```
ATM:FETC:TEST:STAT ?  
ATM:SOUR:POINT:VAL ?
```

The :FETC *root node* is the most commonly used query command and is followed by one or more level nodes, all separated by a colon (:). Notice the question mark after the last level node (STAT) – all query (or FETC) commands end with a question mark.

In general, query commands instruct a test module to retrieve the current result, error, or alarm information specified by the parameter, and display the result on the PC. For example, the command :FETC:TEST:STAT ? returns either a **0** to indicate a test has stopped, a **1** to indicate a test is still running, or a **3** to indicate a test is still running, but is temporarily waiting for the tester to reach a stable state before measuring data.

---

# General Query Commands

This section lists the commands that let you query the status of the tester.

---

## :FETCh:TEST:STATe ?

This command returns one of the following values:

---

Test State Return Values	
Return Value	Description
0	Test has stopped.
1	Test is running and measuring data.
3	Test is running, but is waiting for the system to reach a stable state before measuring data.

---

---

## :FETCh:PLAYer:FREQuency ?

This command returns the frequency of the physical layer.

---

## SONET/SDH Alarm Query Commands

This section describes the SCPI commands used to query the status of the different SONET/SDH alarms.

### Loss of Signal (LOS) Alarm Status

---

LOS Fetch Commands	
Command	Queries....
:FETCh:LOS:STATus ?	Loss of signal alarm status (1=ON, 0=off)
:FETCh:LOS:HISTory ?	A history status (1) occurs when an LOS alarm is detected and then stops within the same test (1=ON, 0=off)
:FETCh:LOS:SEConds ?	Total number of seconds with a loss-of-signal alarm occurrence since the test started.
:FETCh:LOS:SecondsAGO ?	Total number of seconds since the end of the last LOS alarm.

---

## Loss of Frame (LOF) Alarm Status

---

### LOF Fetch Commands

---

Command	Queries....
:FETCh:LOF:STATus ?	Loss of frame alarm status (1=ON, 0=off)
:FETCh:LOF:HISTory ?	A history status (1) occurs when an LOF alarm is detected and then stops within the same test (1=ON, 0=off)
:FETCh:LOF:SEConds ?	Total number of seconds with a loss-of-frame alarm occurrence since the test started.
:FETCh:LOF:SecondsAGO ?	Total number of seconds since the end of the last LOF alarm.

---

## Out of Frame (OOF) Alarm Status

---

### OOF Fetch Commands

---

Command	Queries....
:FETCh:OOF:STATus ?	Out of frame alarm status (1=ON, 0=off)
:FETCh:OOF:HISTory ?	A history status (1) occurs when an OOF alarm is detected and then stops within the same test (1=ON, 0=off)
:FETCh:OOF:SEConds ?	Total number of seconds with an out-of-frame alarm occurrence since the test started.
:FETCh:OOF:SecondsAGO ?	Total number of seconds since the end of the last OOF alarm.

---

**SONET/SDH Alarm Query Commands****Alarm Indication Signal (AISL) Status****AISL Fetch Commands**

<b>Command</b>	<b>Queries....</b>
:FETCh:AISL:STATus ?	Alarm indicator signal status (1=ON, 0=off)
:FETCh:AISL:HISTory ?	A history status (1) occurs when an AIS alarm is detected and then stops within the same test (1=ON, 0=off)
:FETCh:AISL:SEConds ?	Total number of seconds with an alarm indicator signal alarm occurrence since the test started.
:FETCh:AISL:SecondsAGO ?	Total number of seconds since the end of the last AISL alarm.

**Line Remote Defect Indicator (RDIL) Status****RDIL Fetch Commands**

<b>Command</b>	<b>Queries....</b>
:FETCh:RDIL:STATus ?	Line remote defect indicator status (1=ON, 0=off)
:FETCh:RDIL:HISTory ?	A history status (1) occurs when an RDI alarm is detected and then stops within the same test (1=ON, 0=off)
:FETCh:RDIL:SEConds ?	Total number of seconds with a line remote-defect indicator alarm occurrence since the test started.
:FETCh:RDIL:SecondsAGO ?	Total number of seconds since the end of the last RDIL alarm.

## Path Alarm Indicator Signal (AISP) Status

---

### AISP Fetch Commands

---

Command	Queries....
:FETCh:AISP:STATus ?	Path alarm indicator signal alarm status (1=ON, 0=off)
:FETCh:AISP:HISTory ?	A history status (1) occurs when an AIS alarm is detected and then stops within the same test (1=ON, 0=off)
:FETCh:AISP:SEConds ?	Total number of seconds with a path alarm-indicator signal alarm occurrence since the test started.
:FETCh:AISP:SecondsAGO ?	Total number of seconds since the end of the last AISP alarm.

---

## Path Remote Defect Indicator (RDIP) Status

---

### RDIP Fetch Commands

---

Command	Queries....
:FETCh:RDIP:STATus ?	Path remote defect indicator alarm status (1=ON, 0=off)
:FETCh:RDIP:HISTory ?	A history status (1) occurs when an RDIP alarm is detected and then stops within the same test (1=ON, 0=off)
:FETCh:RDIP:SEConds ?	Total number of seconds with a path remote-defect indicator alarm occurrence since the test started.
:FETCh:RDIP:SecondsAGO ?	Total number of seconds since the end of the last RDIP alarm.

---

**SONET/SDH Alarm Query Commands****Path Loss of Pointer Alarm (LOPP) Status****LOPP Fetch Commands**

<b>Command</b>	<b>Queries....</b>
:FETCh:LOPP:STATus ?	Path loss of pointer alarm status (1=ON, 0=off)
:FETCh:LOPP:HISTory ?	A history status (1) occurs when an LOPP alarm is detected and then stops within the same test (1=ON, 0=off)
:FETCh:LOPP:SEConds ?	Total number of seconds with a path loss-of-pointer alarm occurrence since the test started.
:FETCh:LOPP:SecondsAGO ?	Total number of seconds since the end of the last LOP alarm.

**BERT Loss of Pattern Synchronization Alarm (LOPS) Status****LOPS Fetch Commands**

<b>Command</b>	<b>Queries....</b>
:FETCh:LOPS:STATus ?	Loss of pattern sync alarm status (1=ON, 0=off)
:FETCh:LOPS:HISTory ?	A history status (1) occurs when an LOPS alarm is detected and then stops within the same test (1=ON, 0=off)
:FETCh:LOPS:SEConds ?	Total number of seconds with a loss-of-pattern sync alarm occurrence since the test started.
:FETCh:LOPS:SecondsAGO ?	Total number of seconds since the end of the last LOPS alarm.

---

## SONET/SDH Error Query Commands

This section describes the SCPI commands used to query the status of the different SONET/SDH errors.

### A1A2 Error Status

---

#### B1 BIP Fetch Commands

---

Command	Queries....
:FETCh:A1A2:ECOUNT ?	Total number of A1A2 errors detected.
:FETCh:A1A2:ETIME ?	Elapsed time (in seconds) since the previous A1A2 error was detected.
:FETCh:A1A2:ERAVERAGE ?	Number of A1A2 errors over the number of cells received since the test started.
:FETCh:A1A2:ERCURRENT ?	Average A1A2 error ratio for the previous 2.25 seconds.
:FETCh:A1A2:ESECONDS ?	Number of seconds in which at least one A1A2 error occurred since the test started.
:FETCh:A1A2:EFSECONDS ?	Number of seconds during which no A1A2 errors were detected.
:FETCh:A1A2:SESECONDS ?	Number of severely errored seconds during which more than 2500 A1A2 errors were detected.
:FETCh:A1A2:%ESECONDS ?	Percent of all seconds during which at least one A1A2 error occurred since the test started.
:FETCh:A1A2:%EFSECONDS ?	Percent of all seconds during which no A1A2 error were detected.

---

**SONET/SDH Error Query Commands****B1 BIP Error Status****B1 BIP Error Status Fetch Commands**

<b>Command</b>	<b>Queries....</b>
:FETCh:B1:ECOUNT ?	Total number of B1 BIP errors detected.
:FETCh:B1:ETIME ?	Elapsed time (in seconds) since the previous B1 BIP error was detected.
:FETCh:B1:ERAVERAGE ?	Number of B1 BIP errors over the number of cells received since the test started.
:FETCh:B1:ERCURRENT ?	Average B1 BIP error ratio for the previous 2.25 seconds.
:FETCh:B1:ESECONDS ?	Number of seconds in which at least one B1 BIP error occurred since the test started.
:FETCh:B1:EFSECONDS ?	Number of seconds during which no B1 BIP errors were detected.
:FETCh:B1:SESECONDS ?	Number of severely errored seconds during which more than 2500 B1 BIP errors were detected.
:FETCh:B1:%ESECONDS ?	Percent of all seconds during which at least one B1 BIP error occurred since the test started.
:FETCh:B1:%EFSECONDS ?	Percent of all seconds during which no B1 BIP error were detected.

## B2 BIP Error Status

---

### B2 BIP Error Status Fetch Commands

---

Command	Queries....
:FETCh:B2:ECOUNT ?	Total number of B2 BIP errors detected.
:FETCh:B2:ETIME ?	Elapsed time (in seconds) since the previous B2 BIP error was detected.
:FETCh:B2:ERAVERAGE ?	Number of B2 BIP errors over the number of cells received since the test started.
:FETCh:B2:ERCURRENT ?	Average B2 BIP error ratio for the previous 2.25 seconds.
:FETCh:B2:ESECONDS ?	Number of seconds in which at least one B2 BIP error occurred since the test started.
:FETCh:B2:EFSECONDS ?	Number of seconds during which no B2 BIP errors were detected.
:FETCh:B2:SESECONDS ?	Number of severely errored seconds during which more than 2500 B2 BIP errors were detected.
:FETCh:B2:%ESECONDS ?	Percent of all seconds during which at least one B2 BIP error occurred since the test started.
:FETCh:B2:%EFSECONDS ?	Percent of all seconds during which no B2 BIP error were detected.

---

**SONET/SDH Error Query Commands****B3 BIP Error Status****B3 BIP Error Status Fetch Commands**

<b>Command</b>	<b>Queries....</b>
:FETCh:B3:ECOUNT ?	Total number of B3 BIP errors detected.
:FETCh:B3:ETIME ?	Elapsed time (in seconds) since the previous B3 BIP error was detected.
:FETCh:B3:ERAVERAGE ?	Number of B3 BIP errors over the number of cells received since the test started.
:FETCh:B3:ERCURRENT ?	Average B3 BIP error ratio for the previous 2.25 seconds.
:FETCh:B3:ESECONDS ?	Number of seconds in which at least one B3 BIP error occurred since the test started.
:FETCh:B3:EFSECONDS ?	Number of seconds during which no B3 BIP errors were detected.
:FETCh:B3:SESECONDS ?	Number of severely errored seconds during which more than 2500 B3 BIP errors were detected.
:FETCh:B3:%ESECONDS ?	Percent of all seconds during which at least one B3 BIP error occurred since the test started.
:FETCh:B3:%EFSECONDS ?	Percent of all seconds during which no B3 BIP error were detected.

## Line Remote Event Indicator (REIL) Error Status

### REIL Error Status Fetch Commands

Command	Queries....
:FETCh:REIL:ECout ?	Total number of REIL errors detected.
:FETCh:REIL:ETime ?	Elapsed time (in seconds) since the previous REIL error was detected.
:FETCh:REIL:ERAVerage ?	Number of REIL errors over the number of cells received since the test started.
:FETCh:REIL:ERCurrent ?	Average REIL error ratio for the previous 2.25 seconds.
:FETCh:REIL:ESECONDS ?	Number of seconds in which at least one REIL error occurred since the test started.
:FETCh:REIL:EFSeconds ?	Number of seconds during which no REIL errors were detected.
:FETCh:REIL:SESeconds ?	Number of severely errored seconds during which more than 2500 REIL errors were detected.
:FETCh:REIL:%ESECONDS ?	Percent of all seconds during which at least one REIL error occurred since the test started.
:FETCh:REIL:%EFSeconds ?	Percent of all seconds during which no REIL error were detected.

## Path Remote Event Indicator (REIP) Error Status

### REIP Error Status Fetch Commands

Command	Queries....
:FETCh:REIP:ECOUNT ?	Total number of REIP errors detected.
:FETCh:REIP:ETIME ?	Elapsed time (in seconds) since the previous REIP error was detected.
:FETCh:REIP:ERAVerage ?	Number of REIP errors over the number of cells received since the test started.
:FETCh:REIP:ERCurrent ?	Average REIP error ratio for the previous 2.25 seconds.
:FETCh:REIP:ESECONDS ?	Number of seconds in which at least one REIP error occurred since the test started.
:FETCh:REIP:EFSeconds ?	Number of seconds during which no REIP errors were detected.
:FETCh:REIP:SESeconds ?	Number of severely errored seconds during which more than 2500 REIP errors were detected.
:FETCh:REIP:%ESECONDS ?	Percent of all seconds during which at least one REIP error occurred since the test started.
:FETCh:REIP:%EFSeconds ?	Percent of all seconds during which no REIP error were detected.

## BERT Payload Error Status

---

### BERT Payload Error Status Fetch Commands

---

Command	Queries....
:FETCH:Psynch ?	Status of pattern synchronization; 1 = ON, 0 = off.
:FETCH:BERT:ECOUNT ?	Total number of BERT payload errors detected.
:FETCH:BERT:ETIME ?	Elapsed time (in seconds) since the previous BERT payload error was detected.
:FETCH:BERT:ERAVERAGE ?	Number of BERT payload errors over the number of cells received since the test started.
:FETCH:BERT:ERCURRENT ?	Average BERT payload error ratio for the previous 2.25 seconds.
:FETCH:BERT:ESECONDS ?	Number of seconds in which at least one BERT payload error occurred since the test started.
:FETCH:BERT:EFSECONDS ?	Number of seconds during which no BERT payload errors were detected.
:FETCH:BERT:SESECONDS ?	Number of severely errored seconds during which more than 2500 BERT payload errors were detected.
:FETCH:BERT:%ESECONDS ?	Percent of all seconds during which at least one BERT payload error occurred since the test started.
:FETCH:BERT:%EFSECONDS ?	Percent of all seconds during which no BERT payload error were detected.

---

---

## Pointer Adjustment Query Commands

This section describes the SCPI commands used to query the status of the SONET/SDH pointer value.

---

### Pointer Adjustment Fetch Commands

Command	Queries....
:FETCh:POINter:VALue ?	Current pointer value.
:FETCh:POINter:PJUSTification:DIREction ?	Last pointer justification direction; 0=off, 1=positive, 2=negative.
:FETCh:POINter:PJUSTification:COUNt ?	Number of positive pointer justification occurrences detected.
:FETCh:POINter:PJUSTification:SEConds ?	Number of seconds in which at least one positive pointer justification was detected.
:FETCh:POINter:NJUSTification:COUNt ?	Number of negative pointer justification occurrences detected.
:FETCh:POINter:NJUSTification:SEConds ?	Number of seconds in which at least one positive pointer justification was detected.
:FETCh:POINter:NDATa:COUNt ?	Number of new data pointer occurrences detected.
:FETCh:POINter:NDATa:SEConds ?	Number of seconds in which at least one new data pointer occurrence was detected.

---

---

# Querying Overhead Results

This section describes the SCPI commands used to query the section, line, and path overhead information.

## Section Overhead Fetch Commands

---

Section Overhead Fetch Commands	
Command	Queries....
:FETCh:SECTion:RXTRace:MESSage ?	Section receive trace message (J0).
:FETCh:SECTion:RXTRace:MISMatch:STATus ?	Current section receive trace message (J0) mismatch status (0=no mismatch detected, 1=mismatch detected).
:FETCh:SECTion:RXTRace:MISMatch:HISTory ?	Indicates a mismatch was detected in a previous test (0=no history mismatch detected, 1=history mismatch detected).
:FETCh:SECTion:RXTRace:MISMatch:ETime ?	Shows elapsed time, in seconds, since the previous mismatch error was detected.
:FETCh:SECTion:RXTRace:MISMatch:ESEConds ?	Shows the number of seconds in which at least one mismatch error occurred since the test started.
:FETCh:SECTion:RXTRace:UNSTable:STATus ?	Current section receive trace message (J0) unstable status (0=no unstable status detected, 1=unstable status detected).

---

**Querying Overhead Results****Section Overhead Fetch Commands, continued**

<b>Command</b>	<b>Queries....</b>
:FETCh:SECTIon:RXTRace:UNSTable:HISTory ?	Indicates an unstable status was detected in a previous test (0=no history unstable status detected, 1=history unstable status detected).
:FETCh:SECTIon:RXTRace:UNSTable:ETime ?	Shows elapsed time, in seconds, since the previous unstable error was detected.
:FETCh:SECTIon:RXTRace:UNSTable:ESEConds ?	Shows the number of seconds in which at least one unstable error occurred since the test started.
:FETCh:SECTIon:D1 ?	Section data communications byte.
:FETCh:SECTIon:D2 ?	Section data communications byte.
:FETCh:SECTIon:D3 ?	Section data communications byte.
:FETCh:SECTIon:A1-1 ?	Frame alignment byte.
:FETCh:SECTIon:A1-2 ?	Frame alignment byte.
:FETCh:SECTIon:A1-3 ?	Frame alignment byte.
:FETCh:SECTIon:A2-1 ?	Frame alignment byte.
:FETCh:SECTIon:A2-2 ?	Frame alignment byte.
:FETCh:SECTIon:A2-3 ?	Frame alignment byte.
:FETCh:SECTIon:Z0-2 ?	Future growth byte.
:FETCh:SECTIon:Z0-3 ?	Future growth byte.
:FETCh:SECTIon:B1 ?	B1 byte.

Querying Overhead Results

---

Section Overhead Fetch Commands, continued	
Command	Queries....
:FETCh:SECTIon:E1 ?	Orderwire byte.
:FETCh:SECTIon:F1 ?	User channel byte.

---

## Line Overhead Fetch Commands

Line Overhead Fetch Commands	
Command	Queries....
:FETCH:LINE:S1 ?	Line synchronization status message.
:FETCH:LINE:K1 ?	Line automatic protection switch message.
:FETCH:LINE:K2 ?	Line automatic protection switch message.
:FETCH:LINE:D4 ?	Line data communications byte.
:FETCH:LINE:D5 ?	Line data communications byte.
:FETCH:LINE:D6 ?	Line data communications byte.
:FETCH:LINE:D7 ?	Line data communications byte.
:FETCH:LINE:D8 ?	Line data communications byte.
:FETCH:LINE:D9 ?	Line data communications byte.
:FETCH:LINE:D10 ?	Line data communications byte.
:FETCH:LINE:D11 ?	Line data communications byte.
:FETCH:LINE:D12 ?	Line data communications byte.
:FETCH:LINE:H1-1 ?	Payload pointer byte.
:FETCH:LINE:H1-2 ?	Payload pointer byte.
:FETCH:LINE:H1-3 ?	Payload pointer byte.
:FETCH:LINE:H2-1 ?	Payload pointer byte.
:FETCH:LINE:H2-2 ?	Payload pointer byte.
:FETCH:LINE:H2-3 ?	Payload pointer byte.
:FETCH:LINE:B2-1 ?	BIP byte.

**Querying Overhead Results**

---

**Line Overhead Fetch Commands, continued**

---

<b>Command</b>	<b>Queries....</b>
:FETCh:LINE:B2-2 ?	BIP byte.
:FETCh:LINE:B2-3 ?	BIP byte.
:FETCh:LINE:Z1-2 ?	Future growth byte.
:FETCh:LINE:Z1-3 ?	Future growth byte.
:FETCh:LINE:Z2-1 ?	Future growth byte.
:FETCh:LINE:Z2-2 ?	Future growth byte.
:FETCh:LINE:M1 ?	Far End Block Error (FEBE) byte.
:FETCh:LINE:E2 ?	Orderwire byte.

---

**Querying Overhead Results****Path Overhead Fetch Commands**

<b>Path Overhead Fetch Commands</b>	
<b>Command</b>	<b>Queries....</b>
:FETCh:PATH:RXTRace:MESSAge ?	Path receive trace message (J1).
:FETCh:PATH:RXTRace:MISMatch:STATus ?	Current path receive trace message (J1) mismatch status (0=no mismatch detected, 1=mismatch detected).
:FETCh:PATH:RXTRace:MISMatch:HISTory ?	Indicates a mismatch was detected in a previous test (0=no history mismatch detected, 1=history mismatch detected).
:FETCh:PATH:RXTRace:MISMatch:ETime ?	Shows elapsed time, in seconds, since the previous mismatch error was detected.
:FETCh:PATH:RXTRace:MISMatch:ESEConds ?	Shows the number of seconds in which at least one mismatch error occurred since the test started.
:FETCh:PATH:RXTRace:UNSTable:STATus ?	Current path receive trace message (J1) unstable status (0=no unstable status detected, 1=unstable status detected).
:FETCh:PATH:RXTRace:UNSTable:HISTory ?	Indicates an unstable status was detected in a previous test (0=no history unstable status detected, 1=history unstable status detected).
:FETCh:PATH:RXTRace:UNSTable:ETime ?	Shows elapsed time, in seconds, since the previous unstable error was detected.

**Querying Overhead Results**

---

**Path Overhead Fetch Commands, continued**

---

Command	Queries....
:FETCh:PATH:RXTRace:UNSTable:ESEConds ?	Shows the number of seconds in which at least one unstable error occurred since the test started.
:FETCh:PATH:C2 ?	Path signal label.
:FETCh:PATH:G1 ?	Path status byte.
:FETCh:PATH:F2 ?	Path user channel.
:FETCh:PATH:H4 ?	Path cell offset indicator.
:FETCh:PATH:Z3 ?	Path growth #1.
:FETCh:PATH:Z4 ?	Path growth #1.
:FETCh:PATH:Z5 ?	Path growth #1.

---

## User-defined Payload Pattern Query Commands

The following SCPI commands are used to query the configured user-defined BERT payload patterns. You can configure up to five different payload patterns. The SCPI command uses the following format, where :BERT*n* can be BERT1 – BERT5.

:FETCh:PATTeRn:SON:BERT*n* ?

---

## Querying the TroubleScan Status

Use the following command to query the TroubleScan status in a condensed summary form, including the status of all trouble scan error and alarms.

:FETCh:SONTScaN:STATus ?

The return status is a 16-bit code, which can be broken down into the following information:

---

Bit	Description
0	Frame error.
1	B1 BIP error.
2	B2 BIP error.
3	B3 BIP error.
4	Line remote event indicator error.
5	Path remote event indicator error.
6	Clear channel BERT payload error.
7	Loss of signal alarm.

---

**Querying the TroubleScan Status**

---

<b>Bit</b>	<b>Description</b>
8	Loss of frame alarm.
9	Out-of-frame alarm.
10	Line alarm indicator signal alarm.
11	Line remote defect indicator alarm.
12	Path alarm indicator signal alarm.
13	Path remote defect indicator alarm.
14	Path loss-of-pointer alarm.
15	BERT pattern synchronization alarm.

## Querying the TroubleScan Status

## SONET/SDH Line Interface Module Specifications 5-2

Physical Module Characteristics 5-2

SONET/SDH Features 5-2

General Signal Characteristics 5-3

Transmitter Characteristics 5-6

Overhead Bytes and APS Characteristics 5-7

Displayed Results 5-8

Ordering Information 5-9

---

# Specifications

---

## SONET/SDH Line Interface Module Specifications

### Physical Module Characteristics

Size (W×H×D)	3.5 × 8.5 × 1 inches 89 × 215 × 25 millimeters
Weight	1.5 pounds (.6 kg)
Temperature	Operating: 0° to +40° C (32° to 104° F) Storage: -20° to +60° C (-4° to 140° F)
Power	7 Watts (provided by Service Advisor)
EMI	CISPR 11 Class A
Mechanical	Agilent Handheld Class 2B

### SONET/SDH Features

Auto Setup	Scans the receive signal to determine its characteristics, and then automatically configures the Service Advisor for that type of configuration.
TroubleScan	Examines the SONET/SDH line and displays information about any errors and alarms detected.
ASCII Reports	Can print or save a SONET/SDH report during a test or after you have stopped a test. Reports are 75 columns wide, and you can enter header information (Operator ID, Customer Name, Circuit ID, Comments) for the report.
Data and File Management	Local: store last configuration, restore last configuration, and reset default configuration; remote: download program Flash-ROM updates.
Printing	Can print-screen or report for displayed screen.

**SONET/SDH Line Interface Module Specifications**

Storing and Printing Results	<p><b>Printer/Remote Control:</b> Controlled by user interface or customer- written interface. Printer control by user's PC (serial or parallel).</p> <p><b>Results and setup storage:</b> Test setups and results can be saved to hard drive or floppy disk.</p>
Remote Control	SCPI command line interface and remote graphical user interface (GUI) for PC
Connectors for Module	TX and RX (FC/PC, SC, ST, or D4) connectors
Module LEDs	Ready (RDY), 155M, 51M, Class 1 Laser, pointer adjustment (PNTR ADJ), signal (SIG), frame (FRM), pattern synchronization (PATT SYNC), error (ERR), and history (HIST).

**General Signal Characteristics**

Line Rates	SONET	OC-3 is 155.52 Mbps OC-1 is 51.85 Mbps
	SDH	STM-1 is 155.52 Mbps STM-0 is 51.85 Mbps
Payload Mappings	SONET	OC-3 is STS-3c OC-1 is STS-1
	SDH	STM-1 is VC-4, C-4 STM-0 is VC-3, C-3
Line Scramble	Can be set to ON or off.	
BERT Payload Patterns	Cross-cell PRBS	2 <sup>15</sup> -1, 2 <sup>20</sup> -1, 2 <sup>23</sup> -1, inv 2 <sup>15</sup> -1, inv 2 <sup>20</sup> -1, inv 2 <sup>23</sup> -1
	Fixed patterns	All ones, all zeros, 1100, 1010
	User-programmable patterns	Can enter five 32-bit patterns

SONET/SDH Line Interface Module Specifications

Optics	TX: Single Mode Intermediate Reach (IR)	<ul style="list-style-type: none"><li>• Transmitters are InGasAsP lasers optically coupled to a 8 µm core, single mode fiber pigtail.</li><li>• Average minimum optical power is -15 dBm, average maximum optical power is -8 dBm, typical optical power is -11 dBm</li><li>• Average minimum optical wavelength is 1260 nm, average maximum optical wavelength is 1360 nm, typical optical wavelength is 1310 nm</li></ul>
	RX: Single Mode Intermediate Reach (IR)	<ul style="list-style-type: none"><li>• Receivers are InGasAs PIN photodetectors with a 62.5 multi-mode fiber pigtail.</li><li>• Minimum optical sensitivity is -28 dBm, typical optical sensitivity is -32 dBm</li><li>• Peak input power is -7 dBm</li><li>• Minimum optical wavelength is 1240 nm, maximum optical wavelength is 1380 nm</li></ul>

**SONET/SDH Line Interface Module Specifications**

---

Optics ( <i>continued</i> )	TX: Multi-mode Intermediate Reach (IR)	<ul style="list-style-type: none"><li>• Transmitters are InGasAsP LEDs compatible with 62.5/125 <math>\mu\text{m}</math> fiber.</li><li>• Average minimum optical power is -20 dBm, average maximum optical power is -14 dBm</li><li>• Average minimum optical wavelength is 1270 nm, average maximum optical wavelength is 1380 nm, typical optical wavelength is 1310 nm</li></ul>
	RX: Multi-mode Intermediate Reach (IR)	<ul style="list-style-type: none"><li>• Receivers are InGasAs PIN photodetectors compatible with 62.5/125 <math>\mu\text{m}</math> fiber.</li><li>• Minimum optical sensitivity is -31 dBm</li><li>• Peak input power is -14 dBm</li><li>• Minimum optical wavelength is 1260 nm, maximum optical wavelength is 1360 nm</li></ul>

---

## Transmitter Characteristics

Characteristic	Settings
Clock (TX timing)	Internal (+/- 20 ppm) or recovered
Modes	Terminal or Pass-thru
Error Inject	<ul style="list-style-type: none"> <li>• Frame (A1/A2) <i>Rates:</i> off or continuous</li> <li>• B1, B2, or B3 Error <i>Rates:</i> off, single, or Continuous</li> <li>• REI-L [MSREI] Error <i>Rates:</i> off, single, or 10E-4 through 10E-8</li> <li>• REI-P [PREI] Error <i>Rates:</i> off, single, or 10E-4 through 10E-8</li> <li>• H Pointer <i>Rates:</i> off or continuous</li> <li>• SONET/SDH Payload <i>Rates:</i> off, single, or 10E-3 through 10E-6</li> </ul>
Alarm Simulation	<ul style="list-style-type: none"> <li>• LOS (Loss of Signal)</li> <li>• OOF (Out-of-Frame)</li> <li>• LOF (Loss of Frame)</li> <li>• AIS-L [MS-AIS] (Alarm Indication Signal-line)</li> <li>• RDI-L [MS-RDI] (Remote Defect Indication-line)</li> <li>• AIS-P [AU-AIS] (Alarm Indication Signal-path)</li> <li>• RDI-P [AU-RDI] (Remote Defect Indication-path)</li> <li>• LOP-P (Loss of Pointer Path)</li> </ul>
Pointer control	Off, positive, negative, new data flag (NDF), or new pointer value
APS	K1 and K2 in English-language format

**Overhead Bytes and APS Characteristics**

Section [RS] Overhead	STS-3c [STM-1]	<ul style="list-style-type: none"> <li>• Tab 1: J0, E1, F1, D1, D2, D3</li> <li>• Tab 2: Z0</li> <li>• Tab 3: Z0</li> </ul>
	STS-1 [STM-0]	E1, F1, D1, D2, D3
	J0 Trace Buffer	16-byte buffer, programmable in hexadecimal format (01h to 7Fh) and ASCII format
	J0 Expect Trace Buffer	16-byte buffer, programmable in hexadecimal format (01h to 7Fh) and ASCII format, synchronization enable (sets the MSB=1), and alarm match enable
Line [MS] Overhead	STS-3c [STM-1]	<ul style="list-style-type: none"> <li>• Tab 1: K1, K2, D4, D5, D6, D7, D8, D9, D10, D11, D12, S1, Z2, E2</li> <li>• Tab 2: Z1, Z2 (STS-3c only)</li> <li>• Tab 3: Z1, M1 (STS-3c only)</li> </ul>
	STS-1 [STM-0]	K1, K2, D4, D5, D6, D7, D8, D9, D10, D11, D12, S1, Z2, E2
Path Overhead	STS-3c [STM-1] and STS-1 [STM-0]	J1, G1, Z3, F2, Z4, C2, H4, Z5
	J1 Trace Buffer	64-byte buffer, programmable in hexadecimal format (01h to 7Fh) and ASCII format
	J1 Expect Trace Buffer	64-byte buffer, programmable in hexadecimal format (01h to 7Fh), synchronization enable (inserts carriage-return and line-feed; this limits programming to 62 bytes), and alarm match enable

## Displayed Results

**Results Summary screen:** Shows the current signal characteristics. Includes signal rate and frequency detected on the line, alarm LEDs, and error average rates for B1, B2, B3, REI-L [MSREI], and REI-P [PREI] errors. See *Results Summary Screen*, page 3–6.

**Alarms screen:** LEDs indicate if the tester detects current or history (previous test) alarms, shows alarm second count and seconds ago count for each alarm. See *Alarm Results*, page 3–9

**Errors screen:** Shows the results of an error-injection test. Summary tab shows the number of times a B1, B2, B3, REI-L [MSREI], and REI-P [PREI] error was detected. The Section [RS], Line [MS], and Path tabs show the count, current rate, average rate, seconds ago, error free seconds (EFS), errored seconds (ES), severely errored seconds (SES), % of error-free seconds (EFS), and % errored seconds (ES) for each type of error. See *Error Summary*, page 3–10

**Pointer screen:** Shows the pointer value; the last pointer justification direction; the positive, negative, and new data flag counts; and the number of seconds during which a positive pointer justification, negative pointer justification, and new data flag occurred. See *Pointer Adjustment Results*, page 3–15

**APS screen:** Shows the results of an APS test. This includes the K1 and K2 APS byte values; and the message, request, bridge, and architecture settings. See *APS Measurements*, page 3–16

**Overhead Byte results screens:** Shows the received overhead byte settings, and contains LEDs to indicate when a mismatch message or unstable (eight consecutive messages) condition is detected. See *Section [RS] Overhead Byte Results*, page 3–19

**BERT screen:** shows pattern synchronization indicators, and the count, current rate, average rate, seconds ago, error free seconds (EFS), errored seconds (ES), severely errored seconds (SES), % of error-free seconds (EFS), and % errored seconds (ES) for bit errors detected. See *Viewing BERT Results*, page 3–24

---

## Ordering Information

Contact your Agilent Technologies representative to purchase any of the following products or accessories.

---

### SONET/SDH Line Interface Module Ordering Information

---

Part Number	Product Description
N1640A	ATM Cell Processor Test Module
N1610A	Service Advisor Portable Test Tablet
N1645A	<p>SONET/SDH Line Interface Module with one of the following options:</p> <ul style="list-style-type: none"><li>• Option 100 – 1310 nm IR single-mode FC/PC connectors</li><li>• Option 101 – 1310 nm IR single-mode ST connectors</li><li>• Option 102 – 1310 nm IR single-mode SC connectors</li><li>• Option 103 – 1310 nm IR single-mode D4 connectors</li><li>• Option 111 – 1310 nm IR multi-mode ST connectors</li><li>• Option 112 – 1310 nm IR multi-mode SC connectors</li><li>• Option 300 – 1310 nm IR single-mode interchangeable connectors. With this option, please indicate the type of adapters you need; Option 301 is 2xFC/PC optical adapters; Option 302 is 2xST optical adapters, Option 304 is 2xSC optical adapters.</li></ul>
N1617A	SACompanion CD-ROM
N1645A-910	Additional user's manual



---

# Glossary

**ac:** Alternating current.

**all-ones:** A bit pattern made up entirely of binary ones (*1111....*).

**asynchronous:** Not synchronized; not timed to an outside clock source.

**bandwidth:** A network's or channel's capacity to carry traffic.

**BER:** Bit error ratio. The number of errored bits over the total number of bits. This term is often used interchangeably with *bit error rate* (the number of errored bits *per second*).

**BERT:** Bit error ratio testing. This term is often used interchangeably with bit error *rate* testing.

**bit:** A basic unit of data. A bit can be set to either a zero or a one.

**Blue alarm:** Original name for alarm indication signal.

**BW:** See *bandwidth*.

**byte:** Eight bits. Usually refers to a particular location in a frame.

**CCITT:** Consultative Committee on International Telegraph and Telephone, now the International Telecommunications Union (ITU). The standards produced by this organization are called ITU-T Recommendations.

**clock:** The timing of, or timing source for, digital telecom equipment.

**CRC:** Cyclic redundancy checksum. A basic error-checking technique.

**CSES:** Consecutively severely errored second.

**dB:** Decibel. Standard unit for transmission loss, gain, and relative power ratios.

**dBm:** Decibels relative to one milliwatt.

**dBrc:** Decibels relative to network carrier.

**dc:** Direct current.

**DCC:** Data communications channel.

**DCS:** Digital cross-connect system.

**DDL:** Derived Data Link.

**DLC:** Digital loop-carrier system.

**DRS:** Digital reference signal.

**EFS:** Error-free second.

**error rate:** The number of errors per second. Compare *error ratio*.

**error ratio:** The number of errors over the total number of bits. This term is often used interchangeably with *error rate*, although they are two different measurements.

**ES:** Errored second. A second in which at least one error occurred.

**ESF:** Extended Superframe framing format (DS1).

**frame:** A group of bits, timeslots, or bytes whose unique positions can be identified relative to an alignment signal or pointer.

**hexadecimal:** A base-16 numbering system in which the digits range from 0 through F. A hexadecimal value is noted with a subscript “h,” for example: “2A0F<sub>h</sub>.”

**Hz:** Hertz.

**idle signal:** A signal transmitted to indicate that a channel is not in use.

**ISO:** International Standards Organization.

**ITU:** International Telecommunications Union, formerly the Consultative Committee on International Telegraph and Telephone (CCITT). The standards produced by this organization are called ITU-T Recommendations.

**Kb:** Kilobit. A thousand bits.

**Kb/s:** Kilobits per second.

**kHz:** Kilohertz.

**LCD:** Liquid crystal display.

**LOF:** Loss of frame.

**LOS:** Loss of signal.

**Mb:** Megabit. One million bits.

**Mb/s:** Megabits per second.

**MHz:** Megahertz.

**ms:** Millisecond.

**multiframe:** A set of consecutive frames in which the position of each is defined in relation to a multiframe alignment signal.

**octet:** Eight bits. Typically refers to a group of bits that spans more than one byte. Compare *byte*.

**OOF:** Out of frame.

**overhead:** The bits or bytes in a frame or cell that are not the payload. Overhead provides for signal control and monitoring.

**parity:** An error checking method that uses extra bits to provide even or odd parity for a specific group of bits.

**payload:** The information bits of a frame or cell. Those bits that are not part of the *overhead*.

**PRBS:** Pseudorandom bit sequence. A test pattern that simulates live, random traffic.

**QRSS:** Quasirandom sequence signal.

**Results (.rls) file:** Contains test measurement data.

**Setup (.stp) file:** Contains test configuration information for setting up tests.

**synchronous:** Synchronized. Occurring at the same rate or period; sharing common timing with an outside timing source.

**test set:** The hardware portion of the Service Advisor (the Undercradle or Standalone unit).

**timeslot:** A unique, cyclic time interval; typically providing a single channel.

**timing:** See *clock*.

**TTL:** Transistor-to-transistor logic. A standard transmission level with a logic low of zero volts and a logic high of 5 volts.

**UAS:** Unavailable seconds.

**UI:** Unit interval. The duration of one clock cycle, or pulse period, for a given rate.

**V:** Volt.

**Vac:** Volt, alternating current.

**Vdc:** Volt, direct current.

**VF:** Voice frequency.

**V pk:** Volt peak.

**V p-p:** Volt, peak-to-peak.



# Agilent Technologies Limited Warranty

## Agilent Product:

SONET/SDH Line Interface Test Module (N1645A)

## Duration of Limited Warranty:

3 years

1. Agilent warrants to you, the end-user customer, that Agilent hardware, accessories, and supplies will be free from defects in materials and workmanship after the date of purchase, for the period specified above. If Agilent receives notice of such defects during the warranty period, Agilent will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or equivalent in performance to new.
2. Agilent warrants to you that Agilent software will not fail to execute its programming instructions after the date of purchase, for the period specified above, due to defects in material and workmanship when properly installed and used. If Agilent receives notice of such defects during the warranty period, Agilent will replace software which does not execute its programming instructions due to such defects.
3. Agilent does not warrant that the operation of Agilent products will be uninterrupted or error free. If Agilent is unable, within a reasonable time, to repair or replace any product to a condition as warranted, you will be entitled to a refund of the purchase price upon prompt return of the product.
4. Agilent products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.
5. Warranty does not apply to defects resulting from (a) improper or inadequate maintenance or calibration, (b) software, interfacing, parts or supplies not supplied by Agilent, (c) unauthorized modification or misuse, (d) operation outside of the published environmental specifications for the product, or (e) improper site preparation or maintenance.
6. Agilent warrants that the Agilent Product described above will be able to accurately process date data (including, but not limited to, calculating, comparing, and sequencing) from, into, and between the twentieth and twenty-first centuries, and the years 1999 and 2000, including leap year calculations, when used in accordance with the Product documentation provided by Agilent (including any instructions for installing patches or upgrades), provided that all other products (e.g. hardware, software, firmware) used in combination with such Agilent Product(s) properly

exchange date data with it. If the Specifications require that specific Agilent Products must perform as a system in accordance with the foregoing warranty, then that warranty will apply to those Agilent Products as a system, and Customer retains sole responsibility to ensure the Year 2000 readiness of its information technology and business environment. The duration of this warranty extends through January 31, 2001. To the extent permitted by local law, this warranty applies only to branded Agilent Products and not to products manufactured by others that may be sold or distributed by Agilent. The warranty in this paragraph 6) applies only to Agilent Products shipped after July 01, 1998. The remedies applicable to this paragraph 6) are those provided in paragraphs 1, 2, and 3.

7. Products purchased from Agilent outside the U.S. will receive the standard warranty in the country of purchase. If end user customer moves such Products to another country where Agilent has Support presence, then end user customer will receive the destination country standard warranty.
8. Products purchased in the U.S., based on the U.S. list prices will only receive standard warranty in the U.S., except for Products with a global warranty. A global warranty means that the Product will include the destination country's standard warranty in any country where the Product is moved, provided that Agilent has Support presence in that country.
9. TO THE EXTENT ALLOWED BY LOCAL LAW, THE ABOVE WARRANTIES ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND AGILENT SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE. Some countries, states or provinces do not allow limitations on the duration of an implied warranty, so the above limitation or exclusion might not apply to you. This warranty gives you specific legal rights and you might also have other rights that vary from country to country, state to state, or province to province.
10. TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL AGILENT OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some countries, states or

provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

---

# Services and Support

If you are looking for a product manual, or related information and services, such as answers to frequently-asked questions (FAQ), access the following Web site. The SONET/SDH Test module information is included in the Service Advisor Telecom Toolkit link.

[www.agilent.com/comms/handhelds](http://www.agilent.com/comms/handhelds)

If your SONET/SDH Test module does not appear to be operating properly, carefully check all configuration parameters and connections. Also check that the module is seated properly in the Service Advisor.

Any adjustment, maintenance, or repair on this module must be performed by qualified personnel. Contact your Customer Engineer through your local Agilent Technologies Service Center. You can find a list of local service representatives on the Web at:

[www.tm.agilent.com/tmo/assist/English/](http://www.tm.agilent.com/tmo/assist/English/)

Select a country, and then the link under the Local Office(s) section (found at the bottom of the screen). Selecting the local office link displays location and contact information for all the local offices.

If you do not have access to the Internet, one of these centers can direct you to your nearest representative:

---

## Service Center Telephone Numbers

Location	Telephone Number
United States	Test and Measurement Call Center 1.800.452.4844 (toll free in the U.S.)
Canada	905.206.4725
Europe	31.20.547.9900
Japan	Measurement Assistance Center 81.426.56.7832 81.426.56.7840 (FAX)
Latin America	305.267.4245 305.267.4288 (FAX)

---

Service Center Telephone Numbers, continued

---

Location	Telephone Number
Australia	1.800.629.485
New Zealand	0800.738.378
Asia-Pacific	852.2599.7777 852.2506.9285 (FAX)

---

---

## Returning a Unit for Repair

If your SONET/SDH Test module must be returned, a Technical Support representative will assign a Return Material Authorization (RMA) number. No product will be accepted for service without an RMA number.

Ship the instrument to:

Repair Department  
Agilent Technologies, Inc.  
Service Test Division  
2 Robbins Road  
Westford, MA 01886 USA

Be sure to mark the RMA number on the outside of the shipping container. In addition, be sure to include the following information:

- Model number (N1645A) and name (SONET/SDH Test module)
- Serial number
- Your name and phone number
- A written description of the problem
- Return “ship to” address
- Invoice address
- Payment information (if unit is out of warranty)

---

# Index

## A

A1/A2 framing bits 2-7

Adjust Pointer button 1-15  
using 2-20

alarms

AIS-L 1-19, 2-22, 4-46

AIS-P 1-19, 2-22, 4-47

AU-AIS 1-19, 2-22

AU-RDI 1-19, 2-22

B1 1-19

B3 1-19

LOF 2-22, 4-45

LOP-P 1-19, 2-23, 4-48

LOP-S 4-48

LOS 1-19, 2-22, 4-44

MS-AIS 1-19, 2-22

MS-RDI 1-19, 2-22

MSREI 1-19

OOF 1-19, 2-22, 4-45

PREI 1-19

querying results 4-44–4-48

RDI-L 1-19, 2-22, 4-46

RDI-P 1-19, 2-22, 4-47

REI-L 1-19

REI-P 1-19

results 3-5

summary 3-7

Alarm Simulation button  
using 2-21

Alarms screen 3-9

APS

configuring 2-23

measurements 3-5

switching mode 2-24

viewing results 3-16

architecture setting 2-24

ASCII report

printing 1-23

ATM

button 1-15

sample report 1-25

automatic protection switching

*See* APS

Auto Setup

button 1-15

using 1-17

## B

B1 byte 2-7

B3 byte 2-14

BERT

results 3-5, 3-24

BERT patterns

configuring 2-29

querying 4-64

bridge setting 2-24

buttons

Adjust Pointer 1-15, 2-20

Alarm Simulation 2-21

ATM 1-15

Auto Setup 1-15

change general settings 1-11

Clear Channel BERT 2-28

Edit Byte 2-8, 2-13

Edit Trace Buffers 2-8

Error Inject 2-17

Inject Error 1-15

laser 2-16

notation 2-8

Other Results 3-3

print report 1-23

print screen 1-22

results 1-13

SDH 1-15

SONET 1-15

Start 1-16

Stop 1-16

- TroubleScan 1-15
- view results 1-18

## C

- C2 byte 2-14
- cable options 1-7
- change general settings button 1-11
- circuit ID 1-21, 1-24
- Clear Channel BERT
  - button 2-28
  - test 2-28
- clocking
  - configuring 2-4
- commands
  - sending multiple commands 4-5
- comments 1-21, 1-24
- customer name 1-21, 1-24

## D

- D1 - D3 bytes 2-7
- D4 - D12 bytes 2-11

## E

- E1 byte 2-7
- E2 byte 2-11
- Edit Byte button 2-8, 2-13
- elapsed test time 1-12
- error inject button 2-17
- error injection 2-17
- error rate
  - configuring 2-18
- error results 3-5

- error summary screens 3-10
  - line tab 3-13
  - MS tab 3-13
  - path tab 3-14
  - RS tab 3-11
  - section tab 3-11
- error type
  - configuring 2-17
  - description 2-18
- exiting the GUI 1-13
- expected bytes
  - edit 2-8, 2-13

## F

- F1 byte 2-7
- F2 byte 2-14
- F3 byte 2-15
- fetch commands
  - AISL alarm status 4-46
  - AISP alarm status 4-47
  - alarm status 4-44–4-48
  - BERT pattern 4-64
  - error status 4-49–4-55
  - LOF alarm status 4-45
  - LOPP alarm status 4-48
  - LOPS alarm status 4-48
  - LOS alarm status 4-44
  - OOF status 4-45
  - pointer adjustment 4-56–4-63
  - RDIL alarm status 4-46
  - RDIP alarm status 4-47
  - troubleshoot status 4-64
- file menu 1-16
- frame format
  - configuring 2-4

## G

- G1 byte 2-14
- general settings 1-13
  - configuring 2-3
  - modify 1-11
- graphical user interface (GUI)
  - exiting 1-13
  - navigation basics 1-13

## H

- H1 - H3 bytes 2-11
- H4 byte 2-14

## I

- Inject Error button 1-15
- interchangeable optics option 1-8

## J

- J0 trace buffer
  - edit 2-8
  - enabling 2-9
- J1 byte 2-14

## K

- K1 byte 2-11, 2-24, 2-25
- K2 byte 2-11, 2-24, 2-27
- K3 byte 2-15

## L

- laser button 2-16

## LEDs

- 155M 1-3
- 51M 1-3
- Class 1 Laser 1-3
- error 1-3
- frame 1-3
- history 1-3
- pattern synchronization 1-3
- pointer adjustment 1-3
- RDY 1-3
- signal 1-3
- line orderwire 2-11
- line overhead bytes
  - configuring 2-10
  - description 2-11
  - viewing results 3-5, 3-21
- line PRBS inversion 2-4
- line rate
  - configuring 2-4
- line remote defect indicator (RDIL)
  - querying alarm status 4-46
- line remote error indicator (REI-L) 1-19
- line scramble
  - configuring 2-4
- line tab 3-13
- loss of frame (LOF)
  - querying alarm status 4-45
- loss of pattern synchronization (LOPS)
  - querying alarm status 4-48
- loss of signal (LOS) 1-19
  - querying alarm status 4-44

## M

- M0 and M1 bytes 2-11

- module
  - cable options 1-7
  - illustration 1-2
  - installing 1-4
  - interchangeable optics option 1-8
  - LEDs 1-3
  - status indicators 1-3

- MS overhead bytes
  - configuring 2-10
  - viewing 3-21

- MS tab 3-13

- multiple SCPI commands
  - sending 4-5

## N

- N1 byte 2-15

- navigating the GUI 1-13

- New Data Flag (NDF) 2-19

## O

- operating mode
  - configuring 2-4

- operator ID 1-21, 1-24

- option 300 1-8

- Other Results button 3-3

- out of frame (OOF) 1-19
  - querying alarm status 4-45

- overhead bytes 2-5–2-15
  - settings 1-13

## P

- path alarm indicator signal (AISP)
  - querying alarm status 4-47

- path loss of pointer (LOPP)
  - querying alarm status 4-48

- path loss pointer (LOP-P) 1-19

- path overhead bytes
  - configuring 2-12
  - description 2-14
  - viewing results 3-5, 3-22

- path remote defect indicator (RDIP)
  - querying alarm status 4-47

- path remote error indicator (REI-P) 1-19

- path tab 3-14

- payload pointer bytes
  - configuring 2-11

- physical layer
  - querying frequency of 4-43

- pointer adjustment
  - configuring 2-19
  - results 3-5
  - viewing results 3-15

- pointer notation
  - configuring 2-4

- pointer value 2-20

- print
  - ACSII report 1-23
  - screen 1-22
  - test results 1-22

- pseudorandom bit sequence (PRBS) 2-4

## R

- remote defect indication-line (RDI-L) 1-19

- remote defect indication-path (RDI-P) 1-19

- resetting test set 4-6

## results

- alarms 3-5, 3-9
- APS 3-5
- APS measurements 3-16
- BERT 3-5, 3-24
- errors 3-5
- error summary 3-10–3-14
- LOH 3-5, 3-21
- MSOH 3-5, 3-21
- POH 3-5, 3-22
- pointer adjustment 3-5, 3-15
- RSOH 3-5, 3-19
- SOH 3-5, 3-19
- summary 3-5
- viewing 3-2–3-25

## results summary

- button 1-13
- screen 3-6

## retrieving results

- description 4-42

## RS overhead bytes

- configuring 2-6
- viewing 3-19
- viewing results 3-5

## RS tab 3-11

**S**

## S1 byte 2-11

## SACompanion

- starting SONET/SDH software 1-6

## save

- report 1-20

## SCPI

- action injection commands 4-16–4-17
- alarm commands 4-22–4-24
- BERT pattern commands 4-40
- command-set prefix 4-3
- command syntax 4-2
- error injection commands 4-18–4-21
- fetch commands 4-42–4-65
- overhead byte commands 4-28–4-39
- pointer control commands 4-25–4-27
- programming a SONET/SDH test 4-6
- query commands 4-42–4-65
- querying error status 4-49
- querying frequency of physical layer 4-43
- querying test state 4-43
- return codes 4-8
- root nodes 4-3
- selecting test 4-10
- sending multiple command 4-5
- source commands 4-11–4-15
- starting a test 4-10
- stopping a test 4-10

## screens

- major components 1-12
- Results Summary 3-6
- SDH Setup 1-12
- SONET setup 1-10

## SDH

- alarm description 2-22
- alarms 1-19
- alarm simulation 2-21
- button 1-15
- running test 2-16
- sample report 1-30
- Setup screen 1-12

## section overhead bytes

- configuring 2-6
- description 2-7
- viewing results 3-5, 3-19

## section tab 3-11

## section trace byte 2-7

Service Advisor Manager  
starting SONET/SDH software 1-5

SONET  
alarm description 2-22  
alarms 1-19  
alarm simulation 2-21  
button 1-15  
module illustration 1-2  
running test 2-16  
sample report 1-30  
Setup screen 1-10

SONET/SDH  
starting software 1-5, 1-6  
structure 1-13

Start button 1-16

Stop button 1-16

synchronization status 2-11

## T

taskbar 1-13  
using 1-14

test  
running 2-16  
selecting with SCPI command 4-10  
starting with SCPI command 4-10  
stopping with SCPI command 4-10

test results  
printing 1-22

test state  
querying 4-43

title bar 1-12

toolbar 1-12

transmission formats and rates 2-2

transmit bytes  
edit 2-8, 2-13

Trouble Scan  
button 1-15  
using 1-18

troubleshoot status  
querying 4-64

## V

viewing results 3-2—3-25

View Results button 1-18

## Z

Z0 byte 2-7

Z1 and Z2 bytes 2-11

Z3 and Z4 bytes 2-14

Z5 byte 2-14